

SONY®



Your Guide to Sony's DVD Writer



I want to burn videos and images stored in my Handycam® to DVD, but it looks difficult.



I want to copy videos taken with my old camcorder on MiniDV and 8mm tapes to DVD, but it looks troublesome.

**Sony's DVD Writer is the answer to all your worries!
Burn to DVD easily, without using a PC!**

like.no.other™

DVDirect™



Let's Make a DVD in Full HD

HD Hard Disk Drive Handycam®

HD Memory Stick™ Handycam®

Record HD video and images to DVD



I want to shoot plenty of videos of my daughter in Full HD.



But I also want to retain the good picture quality even after burning the videos to DVD.



I'm not good at using a computer.

Burning HD pictures to DVD looks difficult too.



Sony's DVD Writer is the answer to all your worries!



With Sony's DVD Writer, you can burn to DVD in High Definition easily!

① Connect a USB cable to DVD Writer.



② Press the Record button once.

It's so easy, even for me!



I can also burn DVDs in Standard Definition (SD).

I made a copy for Grandma so she's happy.



[Make a DVD in High Definition (HD)]



[Make a DVD in Standard Definition (SD)]





Let's Make a DVD in SD

DV Tape Camcorder

8mm Tape Camcorder

Transfer Videos from Your Tape Library to DVD



Dad, let's watch the video we took at the beach.



We've got so many videos. I don't know which one to play. I wonder if I can record them to DVD and organise.



It's troublesome using my PC to burn to DVD.



The storage space in my DVD recorder is also full with TV programmes.

Sony's DVD Writer is the answer to all your worries!



With Sony's DVD writer, you can burn easily to DVD!

① Connect a USB cable to DVD Writer



② Press the Record button once.

Dad, I want to try it too.



It's so simple to record!

It's so neat!



Wow! Isn't it a huge crab?

It's so easy to playback a DVD, instead of tape.

[Burn from DV or 8mm Tape to DVD]



Playback on a DVD player or DVD recorder.

All your memories from the past and the future. Burn to DVD easily, without using a PC.

DVD Writer
VRD-MC5



Caution: This product does not possess an output terminal and cannot playback a DVD when connected to TV.

Record HD video and images to DVD

- **Make a DVD using the Standard Definition (SD) videos and images stored in your Hard Disk Drive (HDD) Handycam® or DVD Handycam®.**



- **Burn photo slideshows – created with images and music from your digital camera – to DVD.**

Use your favourite song as background music.

Sony's DVD Writer is compatible with a variety of memory cards.

Memory Stick™ Memory Stick™ PRO Memory Stick™ DUO Memory Stick™ PRO Memory Stick™ PRO-HG DUO

SD Card SD HC Card xD Picture Card Compact Flash

* Plays back MP3 format
Incorporate background music with built-in BGM when making a DVD for a loved one.
Cyber-shot T100 and Memory Stick™ sold separately.

Photo slideshow on DVD

All your memories from the past and the future. **Burn to DVD easily, without using a PC.**



- Input Terminal: USB Terminal (Specialised for Handycam®) x 1, DV Input Terminal x 1, S Image Input Terminal x 1, Image Input Terminal x 1 and Sound Input Terminal x 1
- Memory Card Slots (for Still Images): Memory Stick™ Duo Slot x 1, Memory Stick™/SD Memory Card / xD Picture Card Slot x 1 and Compact Flash Slot x 1
- Size (mm): (Width) 193 x (Height) 65 x (Depth) 222.5 (Excluding the Tallest Part)
- Weight: Approximately 1.5kg
- Compatible Recording Media: DVD+R, DVD-R, DVD+RW, DVD-RW, DVD+RW DL*
 - * DVD+R DL is only compatible with DV, Composite and S Image input terminals.
 - * Not compatible with 8cm DVD.