

"WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products.

WALKMAN is a trademark of Sony Corporation.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

CE 标志的有效性仅限于那些有法律限制的国家/地区，主要在 EEA (欧洲经济区) 国家/地区。

 
Cassette Player

Operating Instructions 使用说明书 (反面)



WM-EX530

©2004 Sony Corporation Printed in China

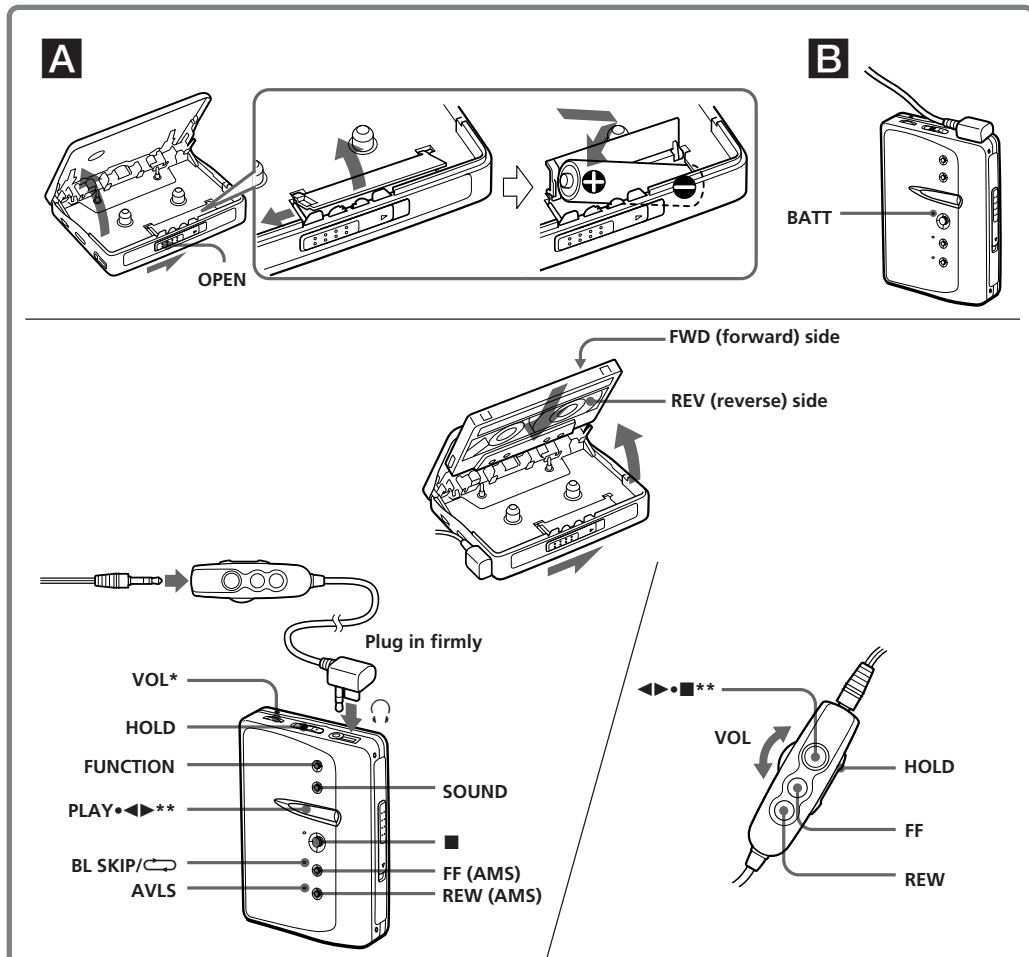

* There is a tactile dot beside VOL on the main unit to show the direction to turn up the volume.
** The button has a tactile dot.

Specifications

- Frequency response**
Playback: 30 - 18 000 Hz
 - Output**
Headphones (⌘) jack
Load impedance 8 - 300 Ω
 - Power requirements**
1.5 V
One R6 (size AA) battery
 - Dimensions (w/h/d)**
Approx. 77.1 x 108.6 x 28.3 mm (excluding projecting parts and controls)
 - Mass**
Approx. 141 g (main unit only)
 - Supplied accessories**
Stereo headphones or earphones with remote control (1)
- Design and specifications are subject to change without notice.

Battery life* (Approx. hours)	
	Sony alkaline LR6 (SG)**
Tape playback	35

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association) (Using a Sony HF series cassette tape).
** When using a Sony LR6(SG) alkaline dry battery (produced in Japan).

Note
The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.

English

Preparations

To insert battery

- Slide the OPEN switch to open the cassette holder.
- Release the catch to open the battery compartment lid, and insert one R6 (size AA) dry battery with correct polarity.

Note

For maximum performance we recommend that you use a Sony alkaline battery.

When to replace the battery

Replace the battery with the new one when the BATT indicator dims.

Note

After the battery is replaced, the settings of the FUNCTION and SOUND buttons will be erased.

Playing a Tape

- Insert a cassette.
- If the HOLD function is on, slide the HOLD switch in the opposite direction of the arrow to unlock the controls.
- Press PLAY (repeat) on the main unit and adjust the volume with VOL. (On the remote control, press (play/stop) (stop).)

When adjusting the volume on the remote control
Set the VOL control on the main unit slightly above the appropriate level.

When adjusting the volume on the main unit
Set the VOL control on the remote control at maximum.

Operation on the remote control

To	Press
Switch playback to the other side*	◀▶ for 2 seconds or more during playback
Stop playback	◀▶ once during playback
Fast forward**	FF during stop
Rewind**	REW during stop
Repeat the current track (Repeat Single Track function)	▶◀ twice during playback To stop a single repeat, press ▶◀ once.

Operation on the main unit

To	Press
Switch playback to the other side*	▶◀ during playback
Stop playback	■ (stop)
Fast forward**	FF during stop
Rewind**	REW during stop
Repeat the current track (Repeat Single Track function)	▶◀ for 2 seconds or more during playback To stop a single repeat, press ▶◀ once.

Other Tape Operations

To	Press
Play the next track/succeeding 9 tracks from the beginning (AMS***)	FF once/repeatedly during playback
Play the current track/previous 8 tracks from the beginning (AMS***)	REW once/repeatedly during playback
Play the other side from the beginning (Skip Reverse function)	FF for 2 seconds or more during stop
Play the same side from the beginning (Rewind Auto Play function)	REW for 2 seconds or more during stop

* If a beep sound is heard, the tape plays from the FWD side and if two beeps sound are heard, the tape plays from the REV side.

** Press PLAY (▶◀) (on the remote control, press ▶◀) during fast forward or rewind to start playback.

*** Automatic Music Sensor

Using Other Functions

Adjusting Playback Mode (BL SKIP/↺)

While holding down FUNCTION, press FF. The BL SKIP/↺ lamp will light up as long as FUNCTION is pressed. Both sides of the tape is played repeatedly (↺ mode), and the tape is fast-forwarded to the next track if there is a blank space longer than 12 seconds.

To cancel the BL SKIP/↺ function

While holding down FUNCTION, press FF. The BL SKIP/↺ lamp goes off. Both sides of the tape is played once from the FWD side (if you start from the reverse side (opposite to the lid), only that side will be played).

Protecting Your Hearing — AVLS (Automatic Volume Limiter System)

The maximum volume is kept down to protect your ears.

While holding down FUNCTION, press REW. The AVLS lamp will light up as long as FUNCTION is pressed.

To cancel the AVLS function

 
While holding down FUNCTION, press REW. The AVLS lamp goes off.

Notes on FUNCTION

- When FUNCTION is pressed, the LED lamp will light up to show the present mode.
- When you hold down FUNCTION to enter a function mode, you will hear a short beep and when you press FUNCTION again to cancel it, you will hear two short beeps.
- When you hold down FUNCTION to enter a function mode, BATT indicator will light up. At this moment, battery level cannot be judged.

Emphasizing Bass (SOUND)

Press SOUND. Each time you press the button, the SOUND mode changes as below.

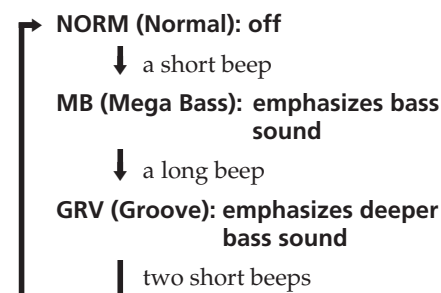

Notes

- If the sound is distorted with the mode "GRV", turn down the volume of the main unit or select other modes.
- Bass emphasis may not show great effect if the volume is turned up too high.

Locking the Controls — HOLD Function

Slide the HOLD switch in the direction of the arrow to lock the controls of the main unit or the remote control.

Precautions

On batteries

- Do not carry dry batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.
- When you are not going to use the main unit for a long time, remove the battery to prevent any damage from battery leakage and corrosion.

On handling

- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- We do not recommend the use of tape longer than 90 minutes. They are very thin and tend to be stretched easily. This may cause malfunction of the unit or sound deterioration.
- If the unit has not been used for a long time, set it in the playback mode to warm it up for a few minutes before you start using again.

On the remote control

Use the supplied remote control only with this unit.

On headphones/earphones

Road safety
Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

 
 
Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume to a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

On maintenance

- Clean the tape head and tape path, using a cotton swab and commercially available cleaning solvent after every 10 hours of use.
- To clean the exterior, use a soft cloth slightly moistened in water. Do not use alcohol, benzene or thinner.
- Clean the headphones/earphones and remote control plugs periodically.

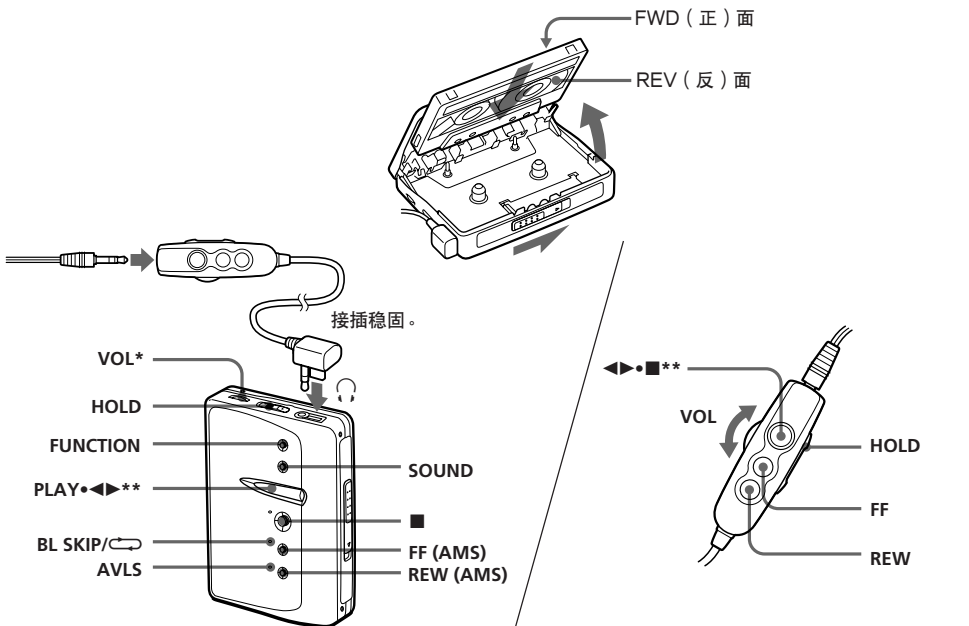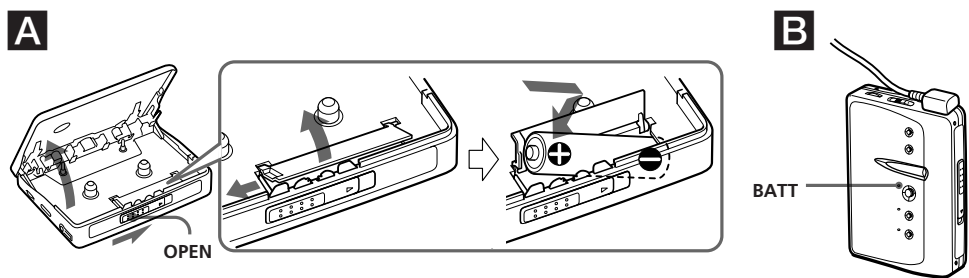

- * 在主机上 VOL 旁边有一个触感圆点，表示转大音量的方向。
** 按钮带有突起圆点。

规格

- 频率响应
放音：30 - 18 000 Hz
- 输出
头戴耳机 (⌀ 插孔)
负载阻抗 8 - 300 Ω
- 电源
1.5 V
一节 R6 (AA) 电池
- 尺寸 (宽/高/纵深)
大约 77.1 x 108.6 x 28.3 mm (不包括突出部分和控制器)
- 重量
大约 141 g (仅主机)
- 附件
带遥控器的立体声头戴耳机或耳机 (1)
设计和规格有所变更时，恕不另行通知。

电池寿命* (大约时数)

	Sony 碱性电池 LR6 (SG)**
录音带放音	35

* 按 JEITA (Japan Electronics and Information Technology Industries Association) 标准测定的值。(使用 Sony HF 系列磁带)。
** 使用 Sony LR6 (SG) 碱性干电池 (日本制造) 时。

注

电池寿命可能因操作条件、环境温度和电池类型而缩短。

准备工作

要装入电池 **A**

- 1 滑动 OPEN 开关，打开盒带盖。
- 2 释放锁扣以打开电池舱盖，然后按正确的极性装入一节 R6 (AA) 干电池。

注

为获得最佳效果，建议您使用 Sony 碱性电池。

何时更换电池 **B**

当 BATT 指示灯变暗时，即请更换为新电池。

注

更换电池后，FUNCTION 和 SOUND 按钮的设置将被清除。

播放录音带

- 1 装入盒带。
- 2 如果 HOLD 功能仍开着，请沿箭头相反方向滑动 HOLD 开关以释放控制钮。
- 3 按主机上的 PLAY (反复) 并用 VOL 调节音量 (在遥控器上，按 ◀▶ (播放·反复) 或 ■ (停止) 。

在遥控器上调节音量时

请将主机上的 VOL 控制钮设为比遥控器上相应的音量级别稍高。

在主机上调节音量时

请将遥控器上的 VOL 控制钮设为最大。

在遥控器上的操作

目的	操作
换播放另一面*	播放中按住 ◀▶■ 并保持 2 秒以上
停止播放	播放中按 ◀▶■ 一次
快进绕**	停止中按 FF
重绕**	停止中按 REW
反复播放当前曲子 (单曲反复播放功能)	播放中按 ◀▶■ 两次 要停止单曲反复播放，请按 ◀▶■ 一次。

在主机上的操作

目的	操作
换播放另一面*	播放中按 PLAY ◀▶
停止播放	■ (停止)
快进绕**	停止中按 FF
重绕**	停止中按 REW
反复播放当前曲子 (单曲反复播放功能)	播放中按住 PLAY ◀▶ 并保持 2 秒以上 要停止单曲反复播放，请按 PLAY ◀▶ 一次。

其他磁带操作

目的	操作
从头播放下一首曲子/接下来 9 首曲子 (AMS***)	播放中按 FF 一次/多次
从头播放当前曲子/前面 8 首曲子 (AMS***)	播放中按 REW 一次/多次
从头播放另一面 (跳跃倒绕功能)	停止中按住 FF 并保持 2 秒以上
从头播放同一面 (重绕自动播放功能)	停止中按住 REW 并保持 2 秒以上

* 如果听到一声哔声，则磁带从 FWD 面放音；如果听到两声哔声，则磁带从 REV 面放音。

** 在快进绕或重绕时，按 PLAY ◀▶ (在遥控器上，按 ◀▶■) 开始播放。

*** 自动乐曲探测

使用其它功能

调整放音方式

(BL SKIP/↺)

在按下 FUNCTION 的同时，按 FF。只要按 FUNCTION，BL SKIP/↺ 灯将亮起。

将反复播放磁带的双面 (↺ 模式)，并且如果存在超过 12 秒的空白区，磁带将快进绕到下一首曲子。

要取消 BL SKIP/↺ 功能

在按下 FUNCTION 的同时，按 FF。

BL SKIP/↺ 灯将熄灭。

将从 FWD 面开始播放一遍磁带的双面 (如果从反面 (正对舱盖的一面) 开始，则将仅播放该面)。

保护您的听觉 — AVLS (自动音量限制系统)

限制最大音量以保护听力。

在按下 FUNCTION 的同时，按 REW。只要按 FUNCTION，AVLS 灯将亮起。

要取消 AVLS 功能

 
在按下 FUNCTION 的同时，按 REW。AVLS 灯将熄灭。

FUNCTION 注意事项

- 按 FUNCTION 时，LED 灯将亮起以显示当前模式。
- 当您按下 FUNCTION 进入某种功能模式时，您将听到一声短哔声；当您再次按 FUNCTION 取消它时，您将听到两声短哔声。
- 当您按下 FUNCTION 进入某种功能模式时，BATT 指示灯将亮起。此时无法判断电池的电量水平。

增强低音 (SOUND)

按 SOUND。每次按该按钮时，SOUND 模式变化如下。

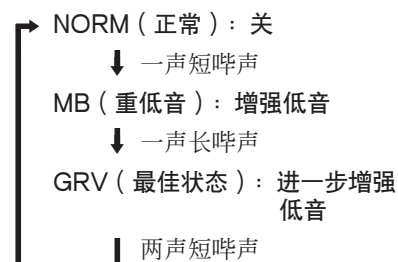

注

- 如果在“GRV”模式下声音失真，请调低主机的音量或选择其它模式。
- 如果音量调得太高，低音增强可能不会显示明显的效果。

锁定控制钮 — HOLD 功能

沿箭头方向滑动 HOLD 开关以锁定主机或遥控器的控制钮。

使用前须注意

电池须知

- 请勿将干电池与硬币或其它金属物体放在一起。如果电池的正负极意外地接触金属物体，电池会发热。
- 长期不使用主机时，请取出电池以避免因电池漏液和腐蚀而受损。

操作须知

- 请勿将本机置于热源附近，或受阳光直射、极多尘沙、潮湿、会淋到雨、有机械冲击的地方，或窗门紧闭的汽车内。
- 建议不要使用时长超过 90 分钟的磁带。这些磁带很薄，容易被拉伸。这可能会导致本机故障或音质变差。
- 如果长时间未使用本机，在重新开始使用之前，请将其置于播放模式预热几分钟。

遥控器须知

本机限使用附带的遥控器。

头戴耳机/耳机须知

交通安全

请勿在驾车、骑车或操纵任何机动车辆时使用头戴耳机/耳机。否则可能导致交通事故，这在某些地区属违法行为。即使在步行时，特别是在过马路时，高音量地使用头戴耳机/耳机也会有潜在的危险。在可能有危险的情况下，必须非常小心或暂停使用。

防止损伤听力

请勿高音量地使用头戴耳机/耳机。耳科专家告诫不要连续、高音量和长时间使用耳机。如果出现耳鸣现象，请调低音量或暂停使用。

为他人着想

请保持适当的音量，使您能听到外界的声音，而且不骚扰周围的人。

维修须知

- 每使用 10 个小时，即请用棉棒和市面有售的清洁液清洁磁头和磁道。
- 请用软布蘸少许清水清洁外壳。切勿使用酒精、汽油或稀释液。
- 定期清洁头戴耳机/耳机和遥控器的插头。