

Video Cassette Recorder

Operating Instructions



Hi-Fi

G-CODE®

SLV-ED95M1

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The mains lead must only be changed at a qualified service shop.

Precautions

Safety

- This unit operates on 110 – 240 V AC, 50/60 Hz. Check that the unit's operating voltage is identical with your local power supply.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- The unit is not disconnected from the mains as long as it is connected to the mains, even if the unit itself has been turned off.
- Unplug the unit from the mains if you do not intend to use it for an extended period of time. To disconnect the lead, pull it out by the plug, never by the lead.

Installing

- Allow adequate air circulation to prevent internal heat buildup.
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation slots.
- Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the unit and cassettes away from equipment with strong magnets, such as microwave ovens or large loudspeakers.
- Do not place heavy objects on the unit.
- If the unit is brought directly from a cold to a warm location, moisture may condense inside the VCR and cause damage to the video head and tape. When you first install the unit, or when you move it from a cold to a warm location, wait for about four hours before operating the unit.

Caution

Television programmes, films, video tapes and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws. Also, use of this recorder with cable television transmission may require authorization from the cable television transmitter and/or programme owner.

Compatible colour/TV systems

- This VCR is designed to record and play back using the PAL (B/G, D/K and I), MESECAM (B/G and D/K) and NTSC (M) colour systems. Recording of video sources based on other colour systems cannot be guaranteed.

About colour systems

Different countries use different colour systems and TV systems. These systems handle such things as video playback and recording differently. Using your VCR in a country that is on a colour system not supported by this VCR may cause problems such as playback without sound, a vertically rolling picture, etc.

This VCR is compatible with most of the existing colour systems (NTSC, PAL, and MESECAM) and TV systems (B/G, D/K, I, and M) except for those used in France, Brazil, Argentina, and Uruguay.

Table of contents

Getting Started

- 4 Step 1: Unpacking
- 5 Step 2: Setting up the remote commander
- 6 Step 3: Connecting the VCR
- 8 Step 4: Tuning your TV to the VCR
- 10 Step 5: Presetting channels
- 25 Step 6: Setting up the G-CODE* system
- 28 Step 7: Changing/disabling programme positions
- 32 Step 8: Setting the clock

Basic Operations

- 34 Playing a tape
- 38 Recording TV programmes
- 41 Recording TV programmes using the Easy Timer function
- 47 Recording TV programmes using the G-CODE system
- 50 Setting the timer manually

Additional Operations

- 52 Playing/searching at various speeds
- 53 Setting the recording duration time
- 54 Synchronised recording
- 56 Checking/changing/cancelling timer settings
- 58 Recording stereo and bilingual programmes
- 60 Searching the beginning of an Easy Timer recorded programme

- 61 Searching using the index function
- 63 Searching using the Time Search function
- 64 Adjusting the picture
- 66 Changing menu options
- 67 Connecting to a VCR or stereo system

Additional Information

- 69 Troubleshooting
- 73 Specifications
- 74 Index to parts and controls
- Back cover
- Index


* G-CODE is a registered trademark of Gemstar Development Corporation. The G-CODE system is manufactured under license from Gemstar Development Corporation.

Step 1


Unpacking

Check that you have received the following items with the VCR:


- Remote commander

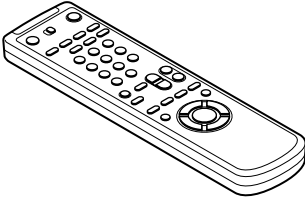

- Aerial cable

 

- R6 (size AA) batteries

 


Step 2

Setting up the remote commander


Inserting the batteries


Insert two R6 (size AA) batteries by matching the + and - on the batteries to the diagram inside the battery compartment.

Insert the negative (-) end first, then push in and down until the positive (+) end clicks into position.

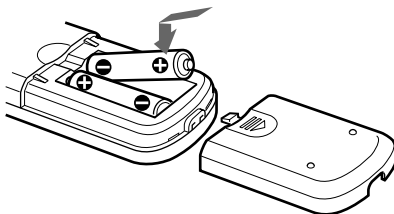

Using the remote commander

You can use this remote commander to operate this VCR and a Sony TV. Buttons marked with a dot (•) can be used to operate your Sony TV. If the TV does not have the  symbol near the remote sensor, this remote commander will not operate the TV.

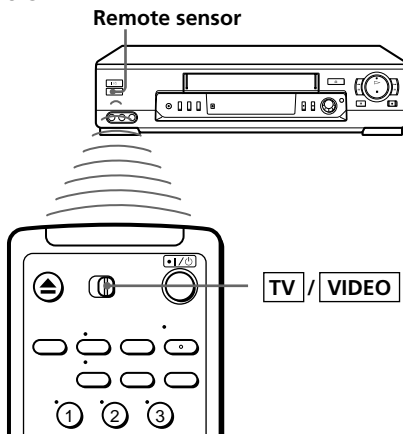

To operate	Set TV / VIDEO to
the VCR	VIDEO and point at the remote sensor on the VCR
a Sony TV	TV and point at the remote sensor on the TV

Notes


- The TV/VIDEO button selects an input source of the TV from either aerial in or line in. The button does not control this VCR.
- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not use different types of batteries.

Step 3

Connecting the VCR


Connect the aerial to your VCR and TV as shown below to watch TV programmes and VCR pictures on your TV. In addition, if your TV has audio/video (A/V) input jacks, we recommend you connect the VCR to your TV using an audio/video cable to get a better picture and sound.

Connecting the aerial

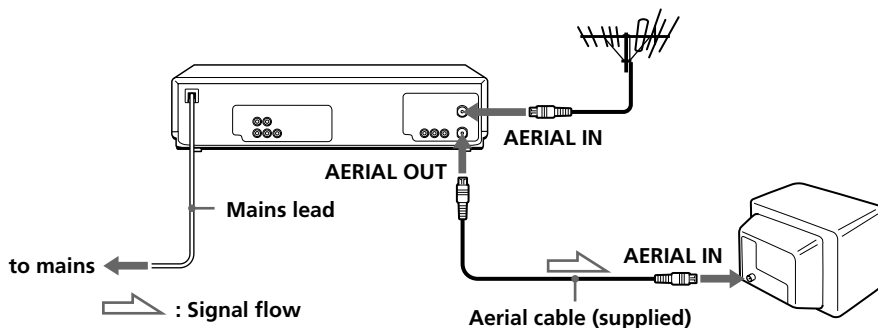


1

Disconnect the aerial cable from your TV and connect it to AERIAL IN on the rear panel of the VCR.

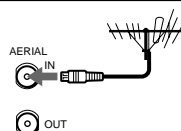

2

 Connect AERIAL OUT of the VCR and the aerial input of your TV using the supplied aerial cable.



3

Connect the mains lead to the mains.

If the 3-pin plug does not fit into the mains outlet, detach the plug by loosening the screw, then use the 2-pin plug inside.

Additional connections


Note

- To listen to playback sounds in stereo, you must use either of the connections shown below.

To a TV that has audio/video input jacks


This additional connection improves picture and sound quality. Connect the TV as shown on the right.

If you want to use the Trinitron TV Synchro Play function (see page 37), this connection is necessary. (If your TV has two or more inputs, connect the audio/video cable to the VIDEO IN 1 jacks.)

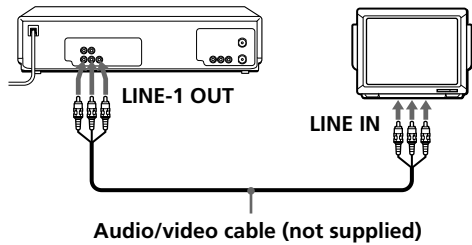

To a stereo system



You can improve sound quality by connecting a stereo system as shown on the right.

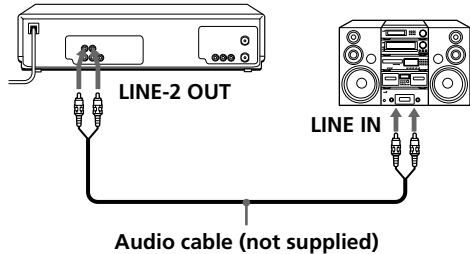

Step 4

Tuning your TV to the VCR

 If you have connected your VCR to the TV using the audio/video cable, skip this step.

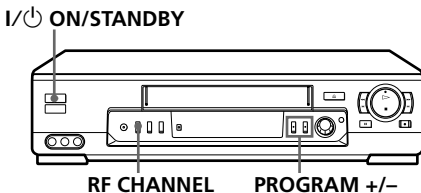


Press I/ON/STANDBY to turn on the VCR.



Press RF CHANNEL on the VCR.

The factory-preset RF channel flashes in the display window for about three seconds.

 Press RF CHANNEL again while the RF channel is flashing. The VCR signal is output through this channel to the TV.



Turn on your TV and select a programme position for the VCR picture.

This channel will now be referred to as the video channel.

 
Some TV has the programme position, such as 0, that is reserved for a VCR. In this case, select that programme position for the VCR picture. Refer to the instruction manual of your TV for details.



Press RF CHANNEL.


The TV system indicator appears in the display window.

Press PROGRAM +/- to select the correct TV system.



If your TV colour system and TV system are		Select
PAL	I	I
	D/K	K
	B/G	G
NTSC	M	M

 Selected TV system



5

Tune the TV to the same channel as that shown in the display window so that the picture on the right appears on the TV screen.

Refer to your TV manual for tuning instructions.

If you select the wrong TV system in step 4, the picture may not appear. Select the appropriate TV system and tune the TV again.

If the picture does not appear clearly, see “To obtain a clear picture from the VCR” below.



SONY VIDEO CASSETTE
RECORDER

6

Press RF CHANNEL.

You have now tuned your TV to the VCR. From now on, whenever you want to play a tape, set the TV to the video channel.

To obtain a clear picture from the VCR

If the picture does not appear clearly in step 5 above, go to step 6 to finish this procedure once. Then start from step 2. After pressing RF CHANNEL twice in step 2 to display the RF channel, press PROGRAM +/- so that another RF channel appears. Then tune the TV to the new RF channel until a clear picture appears.

To set another RF channel number on the VCR, select a channel number that does not receive a broadcast signal in your area and is clear of interference from other channels.

If you cannot obtain a clear picture after performing this procedure, we recommend you connect the VCR and TV using the audio/video cable (see “To a TV that has audio/video input jacks” on page 7). If the same symptom persists, consult your nearest Sony dealer.

Note

- If you set the wrong TV system, you may have no sound or sound may be distorted (noisy sound).


Step 5

Presetting channels

First, we recommend that you preset the receivable channels in your area using the One Touch Tuning function or the AUTO PRESET in the TUNER PRESET menu. Then, if some channels could not be preset automatically, set them manually; if there are any unwanted channels among the preset ones, you can disable the channels.

If you live in the area where various TV systems coexist, and have channels that do not match the TV system you selected in automatic presetting, reset the TV system for those channels (see “Resetting the TV system” on page 15). If the channels do not match the TV system, the sound may be distorted or noisy, or the colour TV programme may become black and white, etc.

Presetting all receivable channels using the One Touch Tuning function

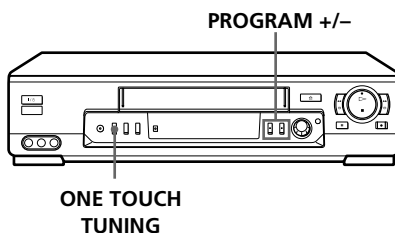

ONE TOUCH
TUNING



Press and hold ONE TOUCH TUNING on the VCR for more than three seconds.

The VCR starts presetting the channels.



The WAIT indicator goes off when all receivable channels are preset.

To check if the channels are preset correctly

Set the TV to the video channel and press PROGRAM +/- on the VCR. If the TV screen changes to a different programme each time you press PROGRAM +/-, the channels are preset correctly.

If the sound is distorted or noisy, the VCR is set to a TV system different from your area's. Select the correct TV system and preset channels using the TUNER PRESET menu as shown on the next page.


Tip

- To stop the One Touch Tuning function, press ONE TOUCH TUNING or ■ STOP on the VCR during the setting.

Presetting all receivable channels automatically

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.

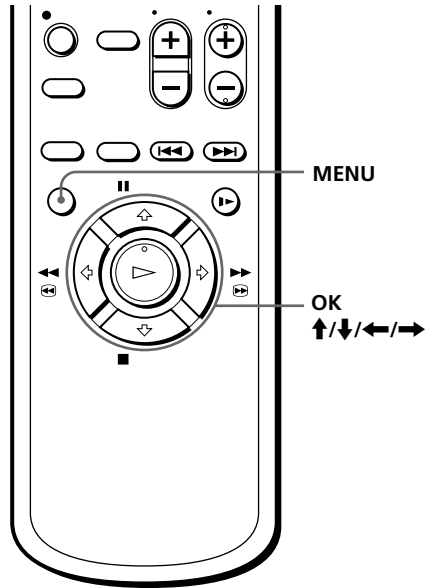

1

MENU



Press MENU, then press \uparrow/\downarrow to move the cursor (\blacktriangleright) to TUNER PRESET and press OK.

TUNER PRESET	PROG 1
SYSTEM	• I D/K B/G M
NORMAL / CATV	• NORM CATV
AUTO PRESET	
▶ CHANNEL SET	1
AFT	• ON OFF
FINE TUNING	
SELECT	: [\uparrow/\downarrow]
SET	: [\leftarrow/\rightarrow]

2



Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to move the cursor (\blacktriangleright) to SYSTEM, then select B/G, D/K, I or M, whichever is applicable in your area. If SYSTEM is set to the wrong position, the sound will be distorted or noisy.

TUNER PRESET	PROG 1
▶ SYSTEM	• I D/K B/G M
NORMAL / CATV	• NORM CATV
AUTO PRESET	
CHANNEL SET	1
AFT	• ON OFF
FINE TUNING	
SELECT	: [\uparrow/\downarrow]
SET	: [\leftarrow/\rightarrow]

3



Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to move the cursor (\blacktriangleright) to NORMAL / CATV, then select NORM.

To preset CATV channels, select CATV.

TUNER PRESET	PROG 1
▶ SYSTEM	• I D/K B/G M
▶ NORMAL / CATV	• NORM CATV
AUTO PRESET	
CHANNEL SET	1
AFT	• ON OFF
FINE TUNING	
SELECT	: [\uparrow/\downarrow]
SET	: [\leftarrow/\rightarrow]

continued


Step 5: Presetting channels (continued)

4



Press **↑/↓** to move the cursor (**▶**) to **AUTO PRESET**, then press **OK**.

All receivable channels are preset in numerical sequence. When no more receivable channels can be found, presetting stops and the picture from the lowest numbered channel is displayed on the TV screen.

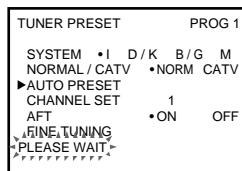


Notes

- The channel numbers besides CHANNEL SET may not be the same as those in your area. This is because this VCR's channel search system is based on the fixed TV system that has the widest channel coverage. If necessary, apply your local channel numbers to the programme positions (see "Presetting channels manually" on page 13).
- If the received channel is on cable TV, "C" appears on the left of the channel in step 4 in most areas. However, this will not be applied in some areas (see pages 17 to 24 for reference).

Presetting channels manually

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.

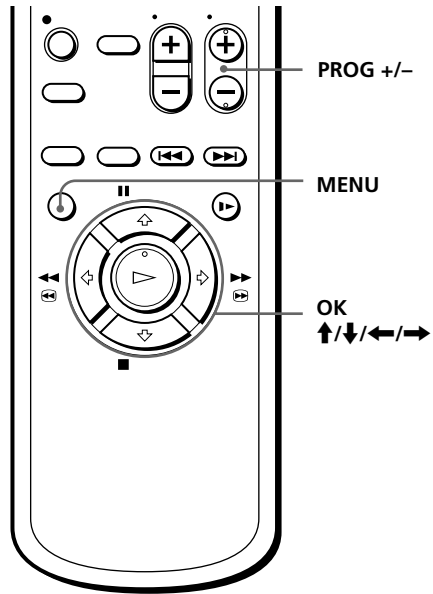

1

MENU



Press MENU, then press \uparrow/\downarrow to move the cursor (\blacktriangleright) to TUNER PRESET and press OK.

TUNER PRESET	PROG10
SYSTEM	• I D/K B/G M
NORMAL / CATV	• NORM CATV
AUTO PRESET	
▶ CHANNEL SET	21
AFT	• ON OFF
FINE TUNING	
SELECT	: [\uparrow/\downarrow]
SET	: [\leftarrow/\rightarrow]

2



Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to move the cursor (\blacktriangleright) to NORMAL / CATV, then select NORM.
To preset CATV channels, select CATV.

TUNER PRESET	PROG10
SYSTEM	• I D/K B/G M
▶ NORMAL / CATV	• NORM CATV
AUTO PRESET	
CHANNEL SET	21
AFT	• ON OFF
FINE TUNING	
SELECT	: [\uparrow/\downarrow]
SET	: [\leftarrow/\rightarrow]

3



Press \uparrow/\downarrow to move the cursor (\blacktriangleright) to CHANNEL SET.

TUNER PRESET	PROG10
SYSTEM	• I D/K B/G M
NORMAL / CATV	• NORM CATV
AUTO PRESET	
▶ CHANNEL SET	21
AFT	• ON OFF
FINE TUNING	
SELECT	: [\uparrow/\downarrow]
SET	: [\leftarrow/\rightarrow]

continued

Step 5: Presetting channels (continued)

4

•PROG



Press PROG +/- to select the programme position.

Selected programme position

TUNER PRESET	PROG14
SYSTEM	•I D/K B/G M
NORMAL / CATV	•NORM CATV
AUTO PRESET	
▶CHANNEL SET	21
AFT	•ON OFF
FINE TUNING	
SELECT	:{↑↓}
SET	:{←→}

5



Press → repeatedly until the channel you want is displayed.
Pressing ← goes back to the previous channels.

The channels are scanned in the order shown on page 17 to 24.

If you know the number of the channel you want, press the programme number buttons. For example, for channel 5, first press "0" and then press "5".

TUNER PRESET	PROG14
SYSTEM	•I D/K B/G M
NORMAL / CATV	•NORM CATV
AUTO PRESET	
▶CHANNEL SET	35
AFT	•ON OFF
FINE TUNING	
SELECT	:{↑↓}
SET	:{←→}

6



If the TV sound is distorted or noisy, press ↑/↓/←/→ to move the cursor (▶) to SYSTEM, then select B/G, D/K, I or M, whichever is applicable in your area.

TUNER PRESET	PROG14
▶SYSTEM	•I D/K B/G M
NORMAL / CATV	•NORM CATV
AUTO PRESET	
CHANNEL SET	•35
AFT	•ON OFF
FINE TUNING	
SELECT	:{↑↓}
SET	:{←→}

7

To allocate another channel to another programme position, repeat steps 4 and 5.

8



Press OK.

Disabling unwanted programme positions

After presetting channels, you can disable unused programme positions. The disabled positions will be skipped later when you press the PROG +/- buttons.

- 1** In step 5 on page 14, press programme number button “0” twice to display the number “0” beside CHANNEL SET.
- 2** Press OK.

Resetting the TV system (only for areas where various TV systems coexist)

If the sound is distorted or noisy, or the colour TV programme becomes black and white, etc., that channel may not be matched to the proper TV system. In this case, try the following steps.

- 1** Press PROG +/- or programme number buttons to select the programme position that has the channel with above described conditions.
- 2** Press MENU, then select TUNER PRESET and press OK.
- 3** Select SYSTEM and select the TV system on which you can obtain the best sound and picture.
- 4** Repeat steps 2 and 3 for other positions you want to reset the TV system to.
- 5** Press OK.

continued


Step 5: Presetting channels (continued)

If the picture is not clear

Normally, the Auto Fine Tuning (AFT) function automatically tunes in channels clearly. If, however, the picture is not clear, you may also use the manual tuning function.

- 1 Press PROG +/- to select the programme number for which you cannot obtain a clear picture.
- 2 Press MENU, then select TUNER PRESET and press OK.
- 3 Select FINE TUNING.

The fine tuning meter appears.

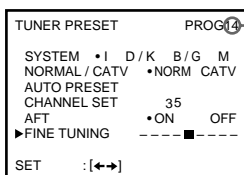

Selected programme position

- 4 Press ←/→ to get a clearer picture, then press OK.

Note that the AFT (Auto Fine Tuning) setting switches to OFF.

Notes

- The menu disappears automatically if you do not proceed for more than a few minutes.
- The channel numbers besides CHANNEL SET may not be the same as those in your area. This is because this VCR's channel search system is based on the fixed TV system that has the widest channel coverage. If necessary, apply your local channel numbers to the programme positions (see "Presetting channels manually" on page 13).

Channel numbers in the CHANNEL SET field and the corresponding channels

TV system	B/G				
Country	Western Europe	Australia	New Zealand	Morocco	Indonesia
Channel number in the CHANNEL SET field	Corresponding channels				
1		AS0	1		1A
2	E2				
3	E3	1	2		2A
4	E4	2	3		3A
5	E5	6	4	M6	4A
6	E6	7	5		5A
7	E7	8	6	M7	6A
8	E8	9	7	M8	7A
9	E9	9A	8	M9	8A
10	E10	10	9	M10	9A
11	E11	11	10		10A
12	E12		11		11A
13					
14					
15		3			
16		4			
17					
18					
19					
20					
21	E21				
22	E22				
23	E23				
24	E24				
25	E25				
26	E26				
27	E27				
28	E28	28			
29	E29	29			
30	E30	30			
31	E31	31, 32			

continued

Step 5: Presetting channels (continued)

TV system	B/G				
Country	Western Europe	Australia	New Zealand	Morocco	Indonesia
Channel number in the CHANNEL SET field	Corresponding channels				
32	E32	33			
33	E33	34			
34	E34	35			
35	E35	36			
36	E36	37			
37	E37	38			
38	E38	39, 40			
39	E39	41			
40	E40	42			
41	E41	43			
42	E42	44			
43	E43	45			
44	E44	46			
45	E45	47, 48			
46	E46	49			
47	E47	50			
48	E48	51			
49	E49	52			
50	E50	53			
51	E51	54			
52	E52	55, 56			
53	E53	57			
54	E54	58			
55	E55	59			
56	E56	60			
57	E57	61			
58	E58	62			
59	E59	63, 64			
60	E60	65			
61	E61	66			
62	E62	67			
63	E63	68			

TV system	B/G				
	Country	Western Europe	Australia	New Zealand	Morocco
Channel number in the CHANNEL SET field	Corresponding channels				
64	E64	69			
65	E65				
66	E66				
67	E67				
68	E68				
69	E69				
70					
C1	S1	5			
C2	S2				
C3	S3				
C4	S4				
C5	S5				
C6	S6	5A			
C7	S7				
C8	S8				
C9	S9			M4	
C10	S10			M5	
C11	S11				
C12	S12				
C13	S13				
C14	S14				
C15	S15				
C16	S16				
C17	S17				
C18	S18				
C19	S19				
C20	S20				
C21	S21				
C22	S22				
C23	S23				
C24	S24				
C25	S25				
C26	S26				

continued

Step 5: Presetting channels (continued)

TV system	B/G				
Country	Western Europe	Australia	New Zealand	Morocco	Indonesia
Channel number in the CHANNEL SET field	Corresponding channels				
C27	S27				
C28	S28				
C29	S29				
C30	S30				
C31	S31				
C32	S32				
C33	S33				
C34	S34				
C35	S35				
C36	S36				
C37	S37				
C38	S38				
C39	S39				
C40	S40				
C41	S41				
C42	S01				
C43	S02				
C44	S03				
C45	S04				
C46	S05				

TV system	D/K		I			M	
Country	East Europe	China	UK/Hong Kong	Ireland	South Africa	U.S.A.	Japan
Channel number in the CHANNEL SET field	Corresponding channels						
1				A			
2	R1	1					
3		2		B		2, C2	
4		3		C		3	
5	R6	7		D	4	7	J-5
6	R7	8		E	5	8	J-6
7						9	J-7
8							
9						12	J-10
10						13	J-11
11						J	J-12
12	R12			J	10	K	S1
13	R2						
14	R3	4				5	
15	R4	5					
16	R5						
17	R8	9		F	6	10	J-8
18	R9	10		G	7	11	J-9
19	R10	11		H	8		
20	R11	12		I	9		
21	R21	13	B21		21	14, W+29, W+30	J13
22	R22	14	B22		22	15, 16, W+31	J14, J15
23	R23	15	B23		23	17, W+32	J16
24	R24	16	B24		24	18, W+33, W+34	J17
25	R25	17	B25		25	19, 20, W+35	J18, J19
26	R26	18	B26		26	21, W+36	J20
27	R27	19	B27		27	22, W+37, W+38	J21
28	R28	20	B28		28	23, 24, W+39	J22, J23
29	R29	21	B29		29	25, W+40	J24
30	R30	22	B30		30	26, W+41, W+42	J25
31	R31	23	B31		31	27, 28, W+43	J26, J27

continued

Step 5: Presetting channels (continued)

TV system	D/K		I			M	
Country	East Europe	China	UK/Hong Kong	Ireland	South Africa	U.S.A.	Japan
Channel number in the CHANNEL SET field	Corresponding channels						
32	R32	24	B32		32	29, W+44	J28
33	R33		B33		33	30, W+45, W+46	J29
34	R34		B34		34	31, 32, W+47	J30, J31
35	R35		B35		35	33, W+48	J32
36	R36		B36		36	34, W+49, W+50	J33
37	R37		B37		37	35, 36, W+51	J34, J35
38	R38	25	B38		38	37, W+52	J36
39	R39	26	B39		39	38, W+53, W+54	J37
40	R40	27	B40		40	39, 40, W+55	J38, J39
41	R41	28	B41		41	41, W+56	J40
42	R42	29	B42		42	42, W+57, W+58	J41
43	R43	30	B43		43	43, 44, W+59	J42, J43
44	R44	31	B44		44	45, W+60	J44
45	R45	32	B45		45	46, W+61, W+62	J45
46	R46	33	B46		46	47, 48, W+63	J46, J47
47	R47	34	B47		47	49, W+64	J48
48	R48	35	B48		48	50, W+65, W+66	J49
49	R49	36	B49		49	51, 52, W+67	J50, J51
50	R50	37	B50		50	53, W+68	J52
51	R51	38	B51		51	54, W+69, W+70	J53
52	R52	39	B52		52	55, 56, W+71	J54, J55
53	R53	40	B53		53	57, W+72	J56
54	R54	41	B54		54	58, W+73, W+74	J57
55	R55	42	B55		55	59, 60, W+75	J58, J59
56	R56	43	B56		56	61, W+76	J60
57	R57	44	B57		57	62, W+77, W+78	J61
58	R58	45	B58		58	63, 64, W+79	J62
59	R59	46	B59		59	65, W+80	
60	R60	47	B60		60	66, W+81, W+82	
61		48	B61		61	67, 68, W+83	
62		49	B62		62	69, W+84	

TV system	D/K		I			M	
Country	East Europe	China	UK/Hong Kong	Ireland	South Africa	U.S.A.	Japan
Channel number in the CHANNEL SET field	Corresponding channels						
63		50	B63		63	70	
64		51	B64		64	71, 72	
65		52	B65		65	73	
66		53	B66		66	74	
67		54	B67		67	75, 76	
68		55	B68		68	77	
69		56	B69		69	78	
70		57				79	
C1						A-2, A-3	J-3, M1
C2						A-1	M2
C3						A	M3
C4						B	M4
C5						C	M5
C6						D	M6
C7						E, F	M7, M8
C8						G	M9
C9						H	M10
C10		6				I	J-4
C11					11	L, M	S2
C12					(12)	N	S3
C13					13	O	S4, S5
C14						P	S6
C15						Q	S7
C16						R	S8
C17						S, T	S9, S10
C18						U	S11
C19						V	S12
C20						W	S13
C21						W+1, W+2	S14, S15
C22						W+3	S16
C23						W+4	S17

continued

Step 5: Presetting channels (continued)

TV system	D/K		I			M	
Country	East Europe	China	UK/Hong Kong	Ireland	South Africa	U.S.A.	Japan
Channel number in the CHANNEL SET field	Corresponding channels						
C24						W+5, W+6	S18, S19
C25						W+7	S20
C26						W+8	S21
C27						W+9, W+10	S22, S23
C28						W+11	S24
C29						W+12	S25
C30						W+13, W+14	S26, S27
C31						W+15	S28
C32						W+16	S29
C33						W+17, W+18	S30, S31
C34						W+19	S32
C35						W+20	S33
C36						W+21, W+22	S34, S35
C37						W+23	S36
C38						W+24	S37
C39						W+25, W+26	S38, S39
C40						W+27	S40
C41						W+28	S41
C42						4, 4A	
C43							
C44						6	
C45						A-5	J-1
C46						A-4	J-2

Notes


- There may be a case that the same area channel may appear repeatedly as the other channel number in the CHANNEL SET field.
- The shadow in the table shows the adjustable RF output channel range (see page 8 for reference).

Step 6

Setting up the G-CODE system

The G-CODE system is a feature in Sony VCRs that simplifies programming the VCR to make timer recordings. To use the G-CODE system, each programme position needs to be matched with its G-CODE guide channel. To get the guide channel numbers, look in the programme guide for your area that features G-CODE numbers.

If you want to record satellite broadcast using the G-CODE system, see page 27.

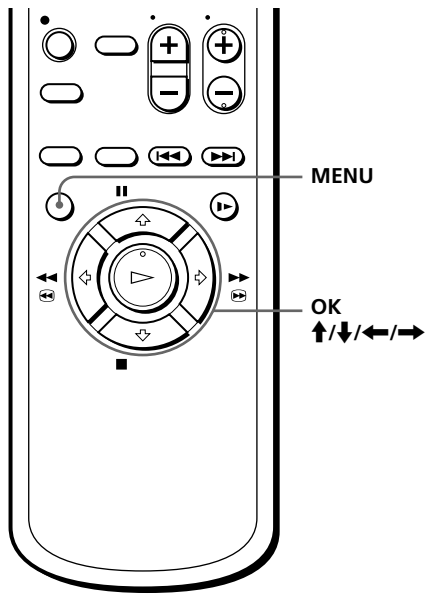


Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.

Setting the guide channels

1

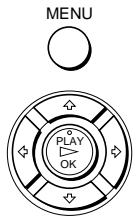

Press MENU, then press **↑/↓** to move the cursor (▶) to SET UP CH AND G-CODE and press OK.

The preset channels are displayed on the screen.

SET UP CH AND G-CODE			
PROG	CH	GUIDE	CH
▶ 1	3	----	
2	9	----	
3	12	----	
4	27	----	
5	56	----	
SELECT : [↑↓]			
MOVE PROG : [→]			
ERASE PROG : [CLEAR]			

2



Press **↑/↓** to move the cursor (▶) to the row on which you want to set the guide channel.

To display other pages for programme positions 6 to 50, press **↑/↓** repeatedly.

SET UP CH AND G-CODE			
PROG	CH	GUIDE	CH
1	3	----	
2	9	----	
▶ 3	12	----	
4	27	----	
5	56	----	
SELECT : [↑↓]			
MOVE PROG : [→]			
ERASE PROG : [CLEAR]			

continued

Step 6: Setting up the G-CODE system (continued)

3



Press **→** twice to flash the guide channel column.

SET UP CH AND G-CODE			
PROG	CH	GUIDE	CH
1	3	-	---
2	9	-	---
▶ 3	12	-	---
4	27	-	---
5	56	-	---
SELECT GUIDE CH			: [↑↓]
CONFIRM			: [↔]

4



Press **↑/↓** to select the guide channel number assigned in the programme guide.

SET UP CH AND G-CODE			
PROG	CH	GUIDE	CH
1	3	-	---
2	9	-	---
▶ 3	12	-	6
4	27	-	---
5	56	-	---
SELECT GUIDE CH			: [↑↓]
CONFIRM			: [↔]

5



Press **←/→** to confirm the setting.

SET UP CH AND G-CODE			
PROG	CH	GUIDE	CH
1	3	-	---
2	9	-	---
▶ 3	12	-	6
4	27	-	---
5	56	-	---
SELECT			: [↑↓]
MOVE PROG			: [→]
ERASE PROG			: [CLEAR]

6

To set the guide channel of another station, repeat steps 2 to 5.
If you want to change the programme positions of the stations, proceed to step 2 of “Step 7: Changing/disabling programme positions” on page 28.

7



Press **OK**.

Setting up the G-CODE system for satellite broadcasts (if applicable)

When your satellite tuner is connected via the AERIAL IN connector, first you have to set the programme position for each satellite channel using the TUNER PRESET menu. Then set the guide channel number for each satellite channel using the SET UP CH AND G-CODE menu.

If your satellite tuner is connected via the LINE-1 IN jacks, you do not have to set programme positions nor guide channel numbers for satellite channels. Skip the following operations.

- 1 Turn on the satellite tuner.
- 2 Press MENU, then select TUNER PRESET and press OK.
- 3 Press PROG +/- to select a programme position you want to use for watching a satellite channel.
- 4 Select CHANNEL SET, then press → to tune the VCR to the satellite tuner.

The channel number displayed beside CHANNEL SET is used for receiving all satellite broadcasts from the satellite tuner.

TUNER PRESET	PROG 6
SYSTEM	• I D/K B/G M
NORMAL / CATV	• NORM CATV
AUTO PRESET	
▶ CHANNEL SET	30
AFT	• ON OFF
FINE TUNING	
SELECT	:[↑↓]
SET	:[←→]

- 5 Press PROG +/- to select another programme position for another satellite channel, and press the programme number buttons to enter the same channel number as the one displayed in step 4.

Repeat this step for all satellite channels.

- 6 Set the guide channel number for each programme position assigned to the satellite channel, following the procedures on page 25.

Notes

- The G-CODE system used in this VCR is for Singapore, Malaysia, Hong Kong, Macau, etc. and cannot be used in areas such as U.S.A, Canada, Japan, Korea, Taiwan and U.K.
- The menu disappears automatically if you do not proceed for more than a few minutes.
- If you inadvertently entered a guide channel number, press ↑/↓ repeatedly to reset the “GUIDE CH” column to “---.” “---” appears between 1 and 255.
- The VCR does not allow entering the guide channel number, if the same number has been set.
- If you use a satellite tuner connected via the LINE-1 IN jacks, you do not have to set up the G-CODE guide channels. Just record a satellite programme using the G-CODE number, and the VCR automatically records the programme from the LINE-1 IN jacks.
- When you record a satellite broadcast using the G-CODE number, you need to select the desired channel on the satellite tuner manually.


Step 7

Changing/ disabling programme positions

After setting the channels and G-CODE guide channels, you can change the programme positions as you like. If any programme positions are unused or unwanted, you can disable them.

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.

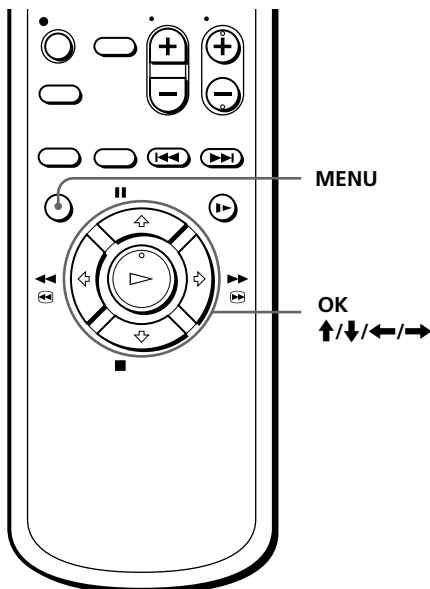

Changing programme positions

e.g. Moving the programme position from 3 to 1.

1



Press MENU, then press **↑/↓** to move the cursor (▶) to SET UP CH AND G-CODE and press OK.

SET UP CH AND G-CODE			
PROG	CH	GUIDE	CH
▶ 1	3	-	16
2	9	-	2
3	12	-	6
4	27	-	12
5	56	-	---
SELECT	:[↑↓]		
MOVE PROG	:[→]		
ERASE PROG	:[CLEAR]		

2



Press **↑/↓** to move the cursor (▶) to the row on which you want to change the programme position, then press **→**.

To display other pages for programme positions 6 to 50, press **↑/↓** repeatedly.

SET UP CH AND G-CODE			
PROG	CH	GUIDE	CH
1	3	-	16
2	9	-	2
▶ 3	12	-	6
4	27	-	12
5	56	-	---
SELECT	:[↑↓]		
SET GUIDE CH	:[→]		
CONFIRM	:[←]		

3



Press **↑/↓** until the selected channel and guide channel row moves to the desired programme position.

The selected channel and guide channel are inserted at the new programme position and the intermediate channels are displaced to fill the gap.

SET UP CH AND G-CODE			
PROG	CH	GUIDE	CH
1	[12]	[6]	
2	[3]	[6]	
3	9	-	2
4	27	-	12
5	56	-	---

SELECT : [↑↓]
 SET GUIDE CH : [→]
 CONFIRM : [←]

4



Press **←** to confirm the setting.

5

To change the programme position of another station, repeat steps 2 to 4.

6



Press **OK**.

continued

Step 7: Changing/disabling programme positions (continued)


Disabling unwanted programme positions

Note

- Be sure to select the programme position you want to disable correctly. If you disable a programme position by mistake, you need to reset that channel manually.

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.

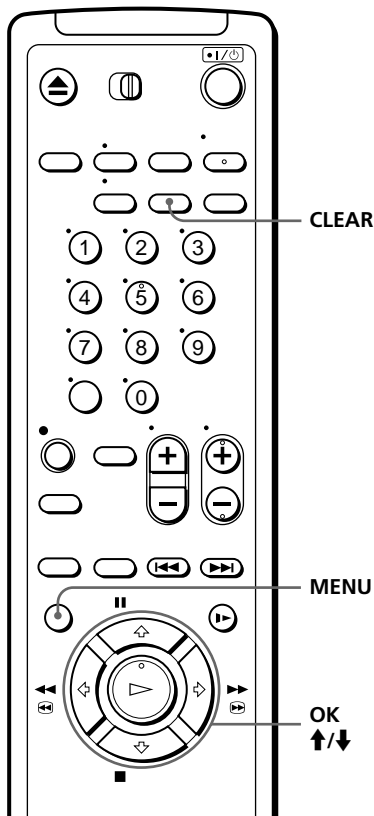

Press MENU, then press **↑/↓** to move the cursor (▶) to SET UP CH AND G-CODE and press OK.

SET UP CH AND G-CODE			
PROG	CH	GUIDE	CH
▶ 1	3	-	16
2	9	-	2
3	12	-	6
4	27	-	12
5	56	-	---
SELECT	:[↑/↓]		
MOVE PROG	:[→]		
ERASE PROG	:[CLEAR]		



Press **↑/↓** to move the cursor (▶) to the row on which you want to disable.

To display other pages for programme positions 6 to 50, press **↑/↓** repeatedly.

SET UP CH AND G-CODE			
PROG	CH	GUIDE	CH
1	3	-	16
▶ 2	9	-	2
3	12	-	6
4	27	-	12
5	56	-	---
SELECT	:[↑/↓]		
MOVE PROG	:[→]		
ERASE PROG	:[CLEAR]		

3

Press CLEAR.

The selected row will be cleared as shown on the right.

SET UP CH AND G-CODE			
PROG	CH	GUIDE	CH
1	3	-	16
2	9	-	2
▶ 3	0	-	---
4	27	-	12
5	56	-	---

SELECT : [↑↓]
 MOVE PROG : [→]
 ERASE PROG : [CLEAR]

4

Repeat steps 2 and 3 for any other programme positions you want to disable.

5

Press OK.


Step 8

Setting the clock

You must set the time and date on the VCR to be able to use the timer recording features properly.

Before you start...


- Turn on the VCR and the TV.
- Set the TV to the video channel.

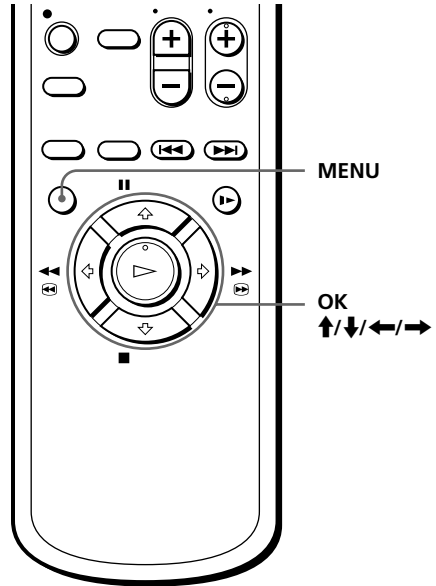

1




Press MENU, then press \uparrow/\downarrow to move the cursor (\blacktriangleright) to CLOCK SET and press OK.

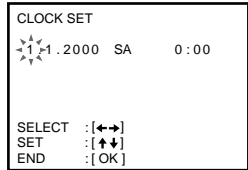

2




Press \uparrow/\downarrow to set the date.
The day of the week is set automatically.

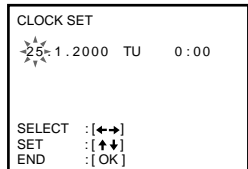

3




Press \rightarrow to flash the month and set the month using \uparrow/\downarrow .

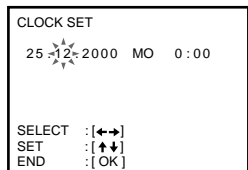

4



Set the year, hour and minute in sequence, using **→** to flash the item to be set, and **↑/↓** to select the digits.

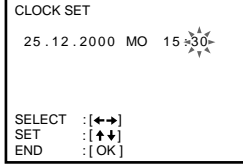

5



Press OK to start the clock.


Tip

- To change the digits during setting, press **←** to return to the item to be changed, and select the digits using **↑/↓**.

Note


- The menu disappears automatically if you do not proceed for more than a few minutes.

Playing a tape

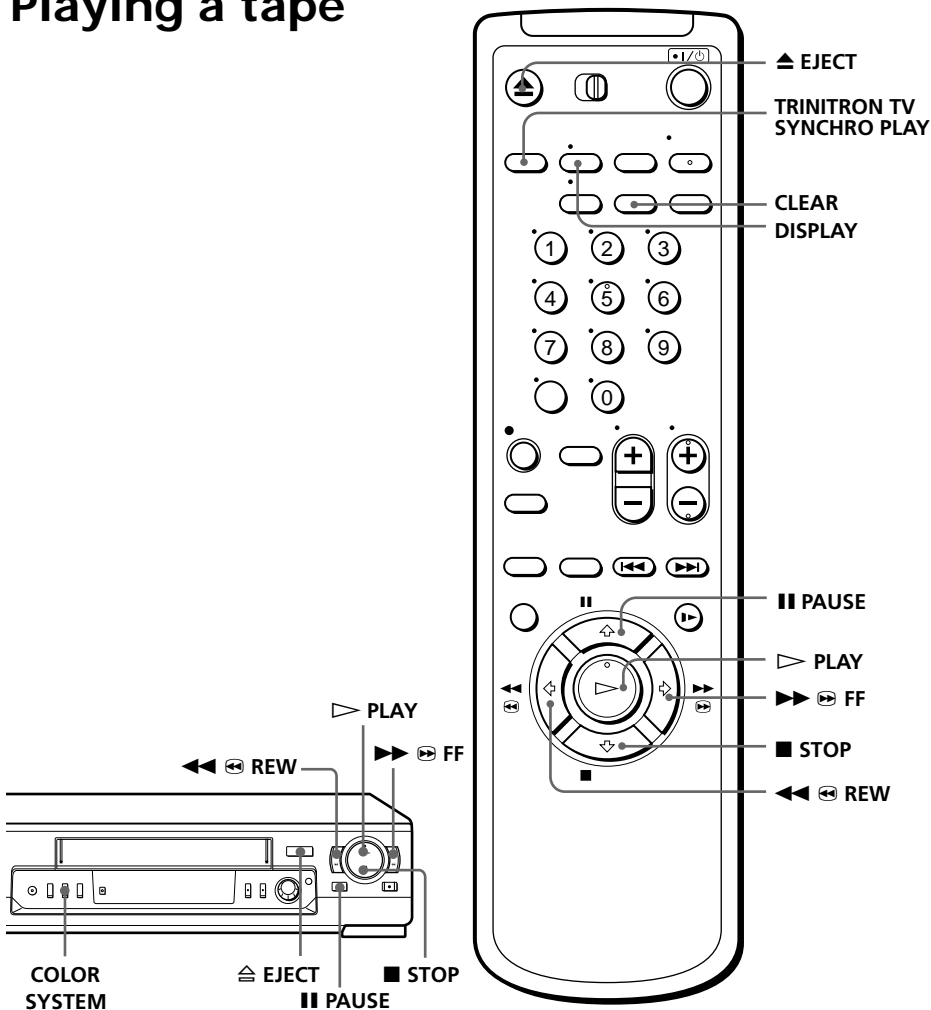

1 Turn on your TV and set it to the video channel.

 2 Insert a tape.
The VCR turns on and starts playing automatically if you insert a tape with its safety tab removed.









3

Press  PLAY.

When the tape reaches the end, it will rewind automatically.

Additional tasks

To	Press
Stop play	■ STOP
Pause play	PAUSE
Resume play after pause	PAUSE or  PLAY
Fast-forward the tape	  FF during stop
Rewind the tape	  REW during stop
Eject the tape	 EJECT

To set the colour system

If streaks appear during playback, press COLOR SYSTEM on the VCR to conform to the system that the tape was recorded in. (Normally, the colour system is correctly set whenever the tape is inserted.)

If your tape was recorded in	Press COLOR SYSTEM until the indication below appears in the display window.
PAL	PAL
MESECAM	PAL
NTSC	NTSC

To play an NTSC-recorded tape

Set NTSC PB in the SET UP MENU according to the colour system of your TV. For details, see page 66.

If your TV is	Set NTSC PB to
PAL	ON PAL TV
NTSC 4.43	4.43
NTSC 3.58	3.58

continued

Playing a tape (continued)

To use the time counter

At the point on the tape that you want to find later, press CLEAR. The counter in the display window resets to "0:00:00." Search for the point afterwards by referring to the counter.



To display the counter on the TV screen, press DISPLAY.

Notes

- When you play back a tape recorded in the PAL or MESECAM colour system, streaks may appear even if the colour system setting is set to AUTO. If so, select the colour system, PAL or MESECAM in the PAL/MESECAM option of the SET UP MENU (see page 66 for details).
- The counter resets to "0:00:00" whenever a tape is reinserted.
- The counter stops counting when it comes to a portion with no recording.
- If a tape has portions recorded in both PAL and NTSC systems, the time counter reading will not be correct. This is due to the difference between the counting cycles of the two colour systems.
- Depending on your TV, the following may occur while playing an NTSC-recorded tape:
 - the picture is black and white
 - the picture shakes
 - no picture appears on the TV screen
 - black streaks appear horizontally on the TV screen
 - the colour density increases or decreases.
- Tapes recorded in the LP mode of NTSC system on other VCRs can be played back on this VCR, but the picture quality cannot be guaranteed.
- While setting the menu on the TV screen, you cannot use the ▷ PLAY, || PAUSE, ►► FF, ◀◀ REW or ■ STOP button. These buttons are used for menu operations.

Turning on the VCR and TV, and starting playback automatically (Trinitron TV Synchro Play)

You can only use this function if your TV is made by Sony (Trinitron TV).

How to connect to use this function

Connect the VCR and TV with the audio/video cable (see “To a TV that has audio/video input jacks” on page 7). Be sure to connect the audio/video cable to the VIDEO IN 1 jacks on the TV if the TV has two inputs or more. The TV must be placed where it will respond to the remote commander while you are pointing it at the VCR.

Operation

Make sure that the TV's main power is on.


Press TRINITRON TV SYNCHRO PLAY and hold the remote commander in place for about two seconds.

The VCR and TV turn on, and the TV is set to VCR reception. If there is a tape in the VCR, playback starts automatically.

Notes

- If the Trinitron TV Synchro Play function does not work properly:
 - Wait a few moments, and press the button again.
 - Replace both of the batteries with new ones, and press the button again.Note that this function may not operate some Sony TVs because of the remote commander's signal limitations.
- Do not press TRINITRON TV SYNCHRO PLAY while playing back a video tape. If you do so, the TV's input source will momentarily switch to the TV's tuner.


Recording TV programmes

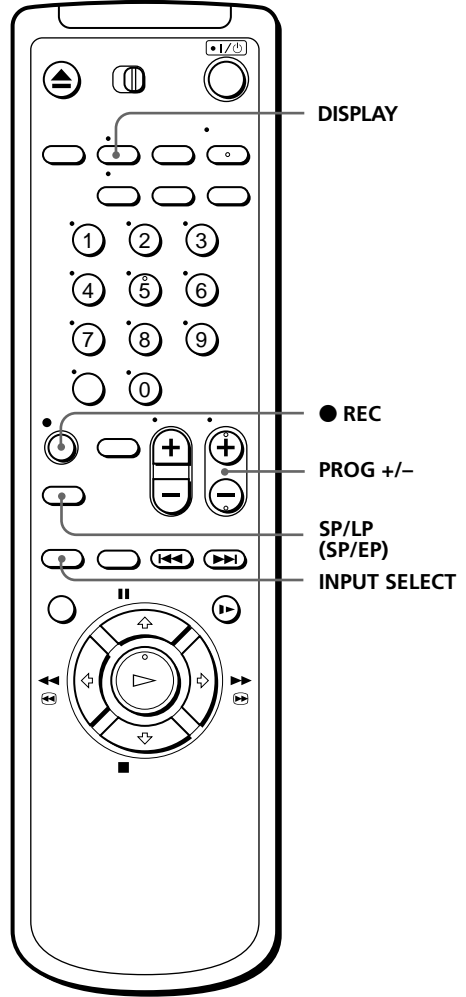

1 Turn on your TV and set it to the video channel.

2 Insert a tape with its safety tab in place.

 3 Press PROG +/- to select the programme position you want to record.




4



Press SP/LP (SP/EP) to select the tape speed (SP or LP for the PAL colour system, and SP or EP for the NTSC colour system).

 LP (Long Play) provides recording time twice as long as SP (Standard Play). EP (Extra Play) provides recording time three times as long as SP. However, SP produces better picture and audio quality.



5



Press ● REC to start recording.

The recording indicator lights up red in the display window.

Recording indicator




To stop recording

Press ■ STOP.

To check the remaining tape length

Press DISPLAY. The white bar indicates the approximate length of tape remaining.

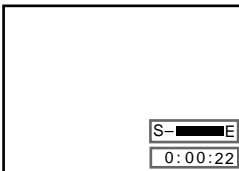

S- [bar] E — Remaining tape length
0:00:22 — Time counter

To watch another TV programme while recording

- 1** If the TV is connected to the VCR using an audio/video cable, set the TV to TV input. If the TV is connected to the VCR using only the aerial cable, skip this step.
- 2** Select another programme position on the TV.

To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on the tape again, cover the tab hole with adhesive tape.



Safety tab

continued

Recording TV programmes (continued)

Tips

- To select a programme position, you can use the programme number buttons on the remote commander. For two-digit numbers, press the --- (ten's digit) button followed by the programme number buttons.
- You can select a video source from the LINE-1 IN or LINE-2 IN jacks. Press INPUT SELECT or PROG +/- to display "L1" or "L2" in the display window.
- The display appears on the TV screen indicating information about the tape, but the information will not be recorded on the tape.
- If you do not want to watch TV while recording, you can turn off the TV.

Notes

- The display does not appear during still (pause) mode or slow-motion playback.
- It may take up to one minute for the VCR to calculate and display the remaining tape length after you press DISPLAY.
- The remaining tape length does not appear while playing or recording in NTSC system.


Recording TV programmes using the Easy Timer function

The Easy Timer function allows you to make a timer recording of a programme without turning on your TV. Set the recording timer to record only one programme that will be broadcast within the next 24 hours using the EASY TIMER knob. If the VCR clock has not been set, you can also set the clock before setting the timer recording.

Setting the Easy Timer

Before you start...



- Insert a tape with its safety tab in place. Make sure the tape is longer than the recording time.

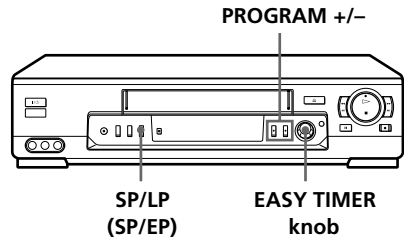

Press the EASY TIMER knob.



The START indicator appears in the display window.

 If the clock has not been set, “-:-” appears. Go to step 2 in “Setting or changing the Easy Clock” on page 43.

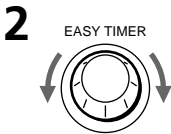


Set the recording start time by turning the EASY TIMER knob clockwise or counterclockwise to increase or decrease the time by 15 minutes.

 To increase or decrease the time by one minute, press PROGRAM +/-.

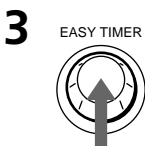

Press the EASY TIMER knob to confirm the start time setting.

 The STOP indicator appears.



continued

Recording TV programmes using the Easy Timer function (continued)

4

 


Set the recording stop time in the same way as in step 2, then press the EASY TIMER knob.

A programme number flashes.




5



Turn the EASY TIMER knob clockwise or counterclockwise to select the programme you want to record.

 To select the tape speed, press SP/LP (SP/EP).



SP/
LP



(SP/EP)

 
6

EASY TIMER





Press the EASY TIMER knob to confirm the setting.

The ⏻ indicator appears in the display window and the VCR stands by for recording.





Setting or changing the Easy Clock

When “--:--” is displayed in the display window, the VCR clock has not been set. You need to set the clock using the Easy Clock function before setting the timer. You can also change the current time using the Easy Clock function.

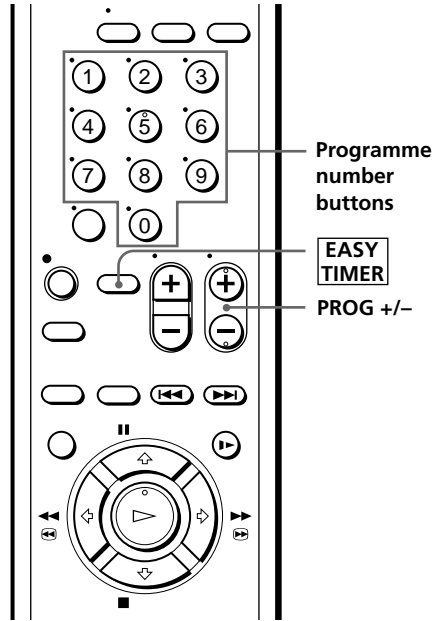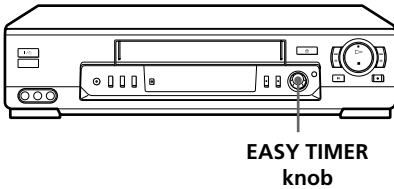


- When “--:--” is displayed in the display window, press the EASY TIMER knob.
- To change the clock setting, press and hold the EASY TIMER knob on the VCR for more than three seconds.

 The **CLOCK** indicator and the current clock setting appear in the display window.

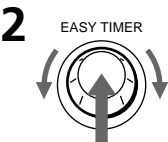

Set the current time using the EASY TIMER knob.

 - 1 Turn the EASY TIMER knob clockwise or counterclockwise to enter the current hour.
- 2 Press the EASY TIMER knob to confirm the hour setting.
- 3 Turn the EASY TIMER knob to increase or decrease the minutes setting by a minute.



continued

Recording TV programmes using the Easy Timer function (continued)

 
3



Press the EASY TIMER knob to confirm the clock setting.

The VCR enters the timer recording setting mode.

To continue the Easy Timer setting, go to step 2 in “Setting the Easy Timer” on page 41.



To quit the Easy Timer setting mode without changing any settings, press the EASY TIMER knob repeatedly until the ☺ indicator appears in the display window.

To set the timer and clock setting using the remote commander

You can also use the remote commander to set the Easy Timer and Easy Clock. The operations on the VCR and the remote commander correspond as follows:

To	Do this on the VCR	Do this on the remote commander
Confirm the setting and go to the next setting	Press EASY TIMER knob	Press EASY TIMER
Change the time by 15 minutes (in START/STOP mode)	Turn EASY TIMER knob or hold PROGRAM +/- down	Hold PROG +/- down
Change the time by one minute (in START/STOP mode)	Press PROGRAM +/-	Press PROG +/-
Select the programme	Turn EASY TIMER knob or press PROGRAM +/-	Press PROG +/- or INPUT SELECT
Change the hour/minute by one hour/minute (in CLOCK mode)	Turn EASY TIMER knob or press PROGRAM +/-	Press PROG +/-

You can also use the programme number buttons to set the clock, start and stop times, and the programme you want to record. Just press the programme number buttons to enter the hours and minutes. For example:

- To set the clock to “8:20”, press 0, 8, **EASY TIMER**, 2, 0 and **EASY TIMER** in sequence.
- To set the start or stop time to “8:20”, press 0, 8, 2, 0 and **EASY TIMER** in sequence.

If you make a mistake, re-enter the correct digits before pressing **EASY TIMER**.

To stop recording

To stop the VCR while recording, press ■ STOP.

To check or change the timer setting

Press the EASY TIMER knob repeatedly until the setting you want to check or change flashes. Then re-enter the new setting, if necessary. If you do not want to change any of the settings, press the EASY TIMER knob repeatedly until the ☺ indicator appears in the display window.

You can also change the timer setting using the TIMER SET/CHECK menu. For details, see page 56.

To cancel the timer setting

To cancel the Easy Timer setting while doing the setting, press CLEAR on the remote commander or press PROGRAM + and – on the VCR at the same time.

To use the VCR after setting the timer

To use the VCR before a timer recording begins, just press I/⏻. The ☺ indicator turns off and the VCR switches on. Remember to press I/⏻ to reset the VCR after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter.
- Display tape information on the TV screen.
- Check the timer settings.
- Watch another TV programme.

To watch the recorded programme right after the Easy Timer recording

The SEARCH indicator starts flashing when the VCR finishes the Easy Timer recording. To watch the recorded programme, press the EASY TIMER knob. The VCR turns on, starts searching, then automatically starts playback from the beginning of the recording. For details, see page 60.

continued

Recording TV programmes using the Easy Timer function (continued)

Tips

- To record from a source connected to LINE-1 IN or LINE-2 IN jacks, press INPUT SELECT or PROG +/- or turn the EASY TIMER knob to display "L1" or "L2" in the display window.
- To record NTSC signals, set the tape speed to SP or EP. To set to the EP mode, display "LP" in the display window.

Notes


- You cannot set the Easy Timer if eight programmes have already been set.
- You can set the timer for only one programme using the Easy Timer function. If you want to set the timer for other programmes, use the G-CODE system or the TIMER SET/CHECK menu. For details, see pages 47 and 50.
- You cannot set the date using the Easy Timer function. Set the date using the CLOCK SET menu if you want to set the timer with the G-CODE system or the TIMER SET/CHECK menu. For details, see page 32.
- The ⏻ indicator flashes in the display window when you complete the setting with no tape inserted.

Recording TV programmes using the G-CODE system

Just enter the G-CODE number, listed in the TV programme guide, for the programme you want to record. The date, times and programme position of that programme are set automatically. You can preset up to eight programmes at a time.

Before you start...

- Check that the VCR clock is set to the correct time.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- Turn on your TV and set it to the video channel.

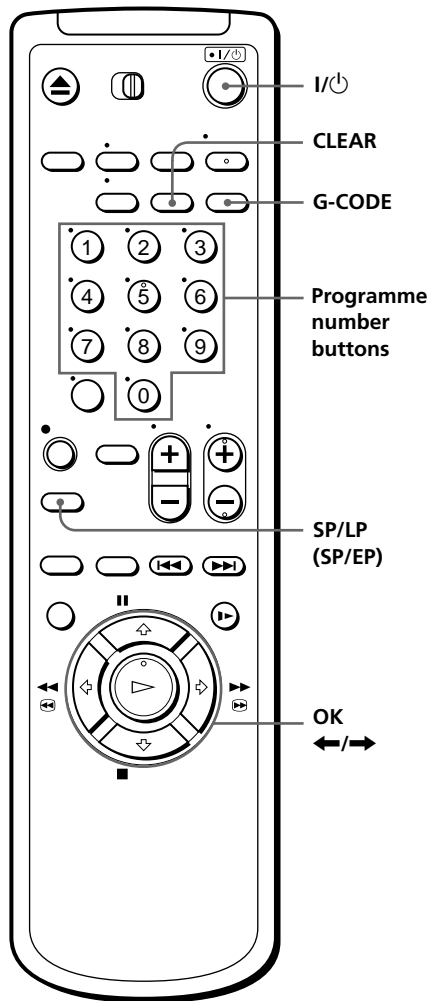

1




Press G-CODE.

G-CODE NO. [-----]	SP / LP [SP]
SET : [0 - 9]	
SP / LP : [SP / LP]	

continued


Recording TV programmes using the G-CODE system (continued)

 2



Press the programme number buttons to enter the G-CODE number for the programme you want to record.


If you make a mistake, press CLEAR and re-enter the correct number.

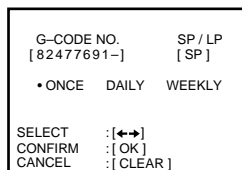

3



Press SP/LP (SP/EP) to select SP or LP.

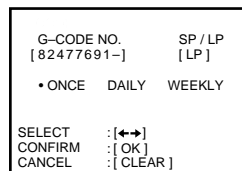


4



Select ONCE, DAILY or WEEKLY by using ←/→, then press OK:

To record	Select
Only once	ONCE
Everyday Monday to Friday	DAILY
Once a week	WEEKLY

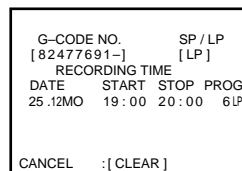

The date, start and stop times, programme position, and tape speed appear on the TV screen.

If the information is not correct, press CLEAR to cancel the setting.

5

To enter another setting, repeat steps 1 to 4.

6



Press I/⏻ to turn off the VCR.

The ⏻ indicator appears in the display window and the VCR stands by for recording.

To stop recording

To stop the VCR while recording, press ■ STOP.

To record satellite broadcasts


 
If you connect the satellite tuner and the VCR, you can record satellite programmes using the G-CODE number if applicable.

- 1** Turn on the satellite tuner.
- 2** On the satellite tuner, select the satellite programme for which you wish to make a timer setting.
- 3** Repeat the steps described on pages 47 and 48.
- 4** Keep the satellite tuner turned on until the VCR finishes recording the satellite programme for which you have made a timer setting.

Tips

- To cancel the procedure, press G-CODE before pressing OK.
- To record NTSC signals, set the tape speed to SP or EP. To set to the EP mode, display "LP" in the tape speed position.

Notes



- The G-CODE system used in this VCR is for Singapore, Malaysia, Hong Kong, Macau, etc. and cannot be used in areas such as U.S.A., Canada, Japan, Korea, Taiwan, and U.K.
- The  indicator flashes in the display window when you press I/ with no tape inserted.

Setting the timer manually

You can preset up to eight programmes at a time.


Before you start...

- Check that the VCR clock is set to the correct time.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- Turn on your TV and set it to the video channel.

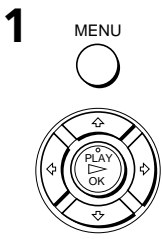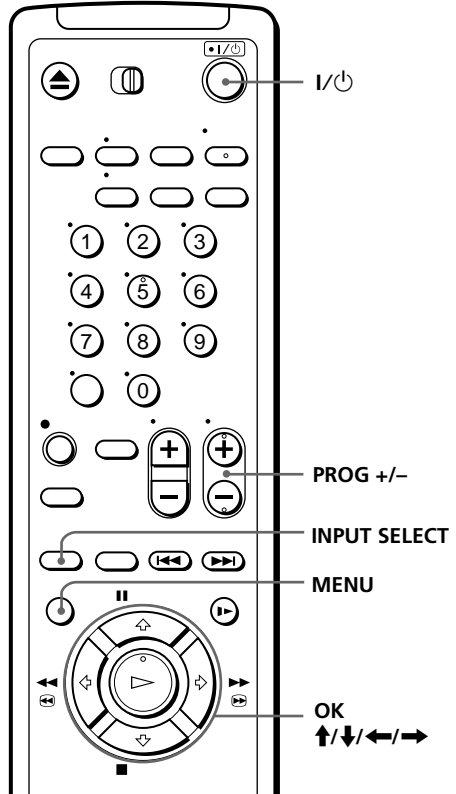

Press MENU and select TIMER SET / CHECK, then press OK.

TIMER SET / CHECK	DATE	START	STOP	PROG
25 . 12 . MO				
▶	---	---	---	---
	---	---	---	---
	---	---	---	---
	---	---	---	---
	---	---	---	---
	---	---	---	---
	---	---	---	---
	---	---	---	---

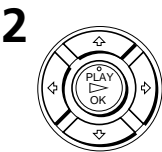

Set the date, start and stop times, programme position, and tape speed:

- 1 Press → to flash each item in turn.
 - 2 Press ↑/↓ to set each item.
- To correct a setting, press ← to return to that setting and reset.

TIMER SET / CHECK	DATE	START	STOP	PROG	SP
25 . 12 . MO					
▶	25 . 12 MO	---	---	---	---
	↑ ↓ ↑ ↓ ↑ ↓	---	---	---	---
	---	---	---	---	---
	---	---	---	---	---
	---	---	---	---	---
	---	---	---	---	---
	---	---	---	---	---
	---	---	---	---	---

To record the same programme every day or the same day every week, press **↓** while the date is flashing. For details, see "Daily/weekly recording" below.

To record from a source connected to the LINE-1 IN or LINE-2 IN jacks; press INPUT SELECT or PROG +/- to display "L1" or "L2" in the "PROG" position.

3

Press **→** to confirm the setting.

The cursor (▶) appears at the beginning of the line. To enter another setting, move the cursor to the next line and repeat step 2.

4

Press OK.

5

Press **I/O** to turn off the VCR.

The **I/O** indicator appears in the display window and the VCR stands by for recording.

To record from other equipment, leave the connected equipment switched on.

To stop recording

To stop the VCR while recording, press **■ STOP**.

Daily/weekly recording

In step 2 above, press **↓** to select the recording pattern. Each time you press **↓**, the indication changes as shown below. Press **↑** to change the indication in reverse order.

the current date → **SU-SA (Sunday to Saturday)** → **MO-SA (Monday to Saturday)** → **MO-FR (Monday to Friday)** → **EVERY SA** → **EVERY MO** → **EVERY SU** → **1 month later** → (dates count down) → **the current date**



Tips

- To set the programme position, you can also use the PROG +/- or programme number buttons.
- To set the tape speed, you can also use the SP/LP (SP/EP) button.
- To record NTSC signals, set the tape speed to SP or EP. To set to the EP mode, display "LP" in the tape speed position.

Note

- The **I/O** indicator flashes in the display window when you press **I/O** with no tape inserted.

Playing/searching at various speeds

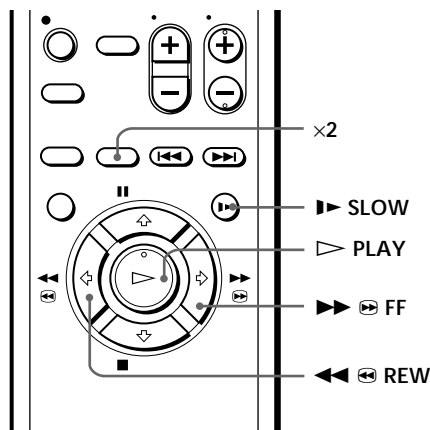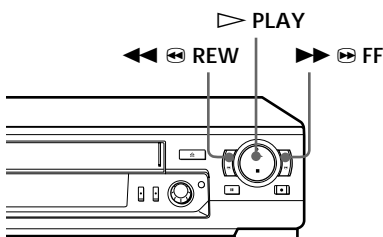

Playback options	Operation
View the picture during fast-forward or rewind	During fast-forward, hold ►► FF down. During rewind, hold ◀◀ REW down.
Play at high speed	<ul style="list-style-type: none"> • During playback, press ►► FF or ◀◀ REW on the remote commander. • During playback, hold ►► FF or ◀◀ REW down. When you release the button, normal playback resumes.
Play at twice the normal speed	During playback or pause, press x2.
Play in slow motion	During playback or pause, press ► SLOW.
Play frame by frame	During pause, press ►► FF or ◀◀ REW on the remote commander. Hold the button down to play one frame each second.
Rewind and start play	During stop, press ► PLAY on the VCR while holding ◀◀ REW down on the VCR.

To resume normal playback

Press ► PLAY.

Tips


- Adjust the picture using TRACKING +/- on the VCR if:
 - streaks appear while playing in slow motion.
 - the picture shakes while pausing.
 To set tracking to the centre position, press both buttons (+/-) at the same time.
- If noise appears during pause or frame-by-frame playback, first switch to the slow motion playback, then adjust the picture using TRACKING +/- on the VCR.

Notes

- The playback sound is muted during these operations.
- In LP or EP mode, noise may appear or there may be no colour.
- The picture may have snow when playing at high speed in reverse.
- On-screen symbols may shake while playing or searching at various speeds.

Setting the recording duration time


After starting recording in the normal way, you can have the VCR stop recording automatically after a specified duration.

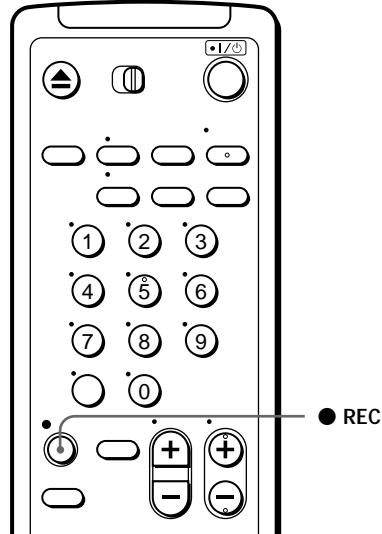

- 1 While recording, press ● REC.
The ⏸ indicator appears in the display window.



 - 2 Press ● REC repeatedly to set the duration.
Each press advances the time in increments of 30 minutes.



The tape counter decreases minute by minute to 0:00, then the VCR stops recording and turns off automatically.

To extend the duration

Press ● REC repeatedly to set to the new duration.

To cancel the duration

Press ● REC repeatedly until the ⏸ indicator turns off and the VCR returns to normal recording mode.

To stop recording


To stop the VCR while recording, press ■ STOP.

Synchronised recording


The Synchronised Recording feature enables you to record from the connected equipment such as a satellite tuner, a cable TV decoder or a TV that has a timer function. Once you set the timer on the other equipment, the VCR will start recording the programme synchronised with the timer.

How to connect to use this function

Connect the other equipment to the LINE-1 IN jacks of this VCR.

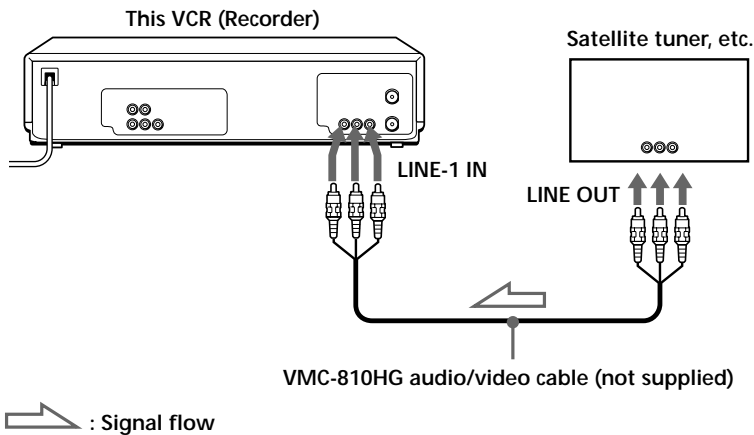

To prepare the Synchronised recording

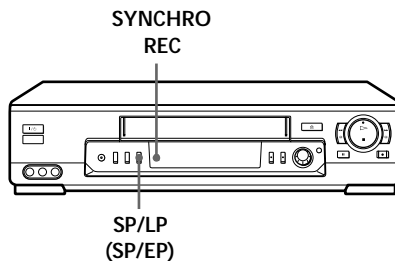

- 1 Press INPUT SELECT or PROG +/- on the remote commander to display "L1" in the display window.
- 2 Set the timer on the equipment to the time of the programme you want to record, then turn it off.
- 3 Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.

4 Press SP/LP (SP/EP) to select the tape speed (SP or LP for the PAL colour system, and SP or EP for the NTSC colour system).

5 Hold SYNCHRO REC down for more than two seconds.

The SYNCHRO REC button lights up and the VCR stands by for recording.

The VCR automatically turns on and starts recording when it receives video/audio signals from the connected equipment.

To cancel the Synchronised recording

Press SYNCHRO REC so that the button's light turns off.

To stop recording

Press ■ STOP while recording.

The VCR automatically stops recording when the tape reaches the end or when the other equipment stops transmitting the video/audio signals.


Notes

- Some TVs or other equipment automatically turn off in a certain time if you do not operate it after it turns on with the timer. In this case the Synchronised Recording also stops automatically.
- The Synchronised Recording starts and stops according to the signals from the connected equipment. Refer also to the instruction manual of the connected equipment for its timer function.
- Some equipment keeps transmitting signals even though the power is off. In this case, the Synchronised Recording feature does not work because the VCR will not be able to know when to start recording. To record the programme, set the timer on the VCR. If you use a satellite tuner or a cable TV decoder, make sure to turn it on. For details, see "Setting the timer manually".
- If the settings for timer recording and Synchronised Recording overlap, the programme that starts first has priority and the second programme starts recording only after the first programme has finished.

Checking/ changing/ cancelling timer settings

Before you start...

- Turn on your TV and set it to the video channel.

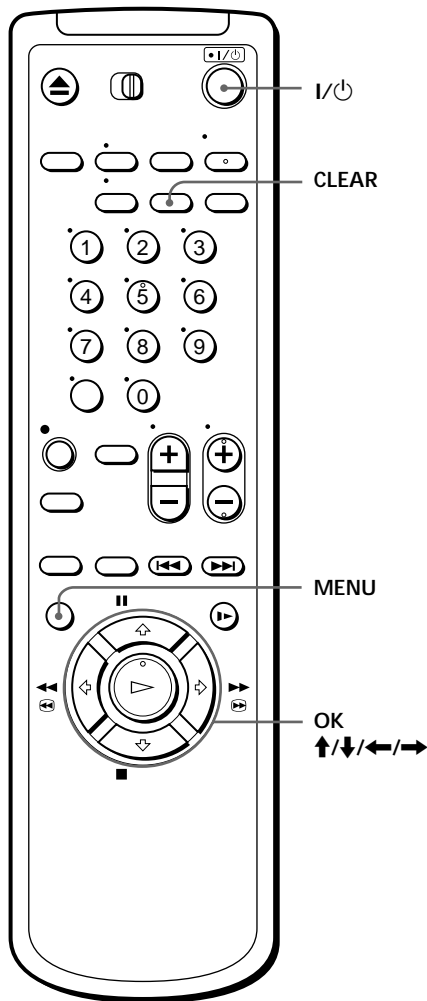

- 1 Press I/Power to turn on the VCR.
- 2 Press MENU, then select TIMER SET/CHECK:


- If you want to change or cancel a setting, go on to the next step.
- If you do not need to change or cancel the settings, press OK, then turn off the VCR to return to recording standby.

TIMER SET / CHECK				25 . 12	MO
DATE	START	STOP	PROG		
▶ 6 . 1 SA	7 : 00	8 : 00	6	SP	
8 . 1 MO	21 : 00	0 : 00	50	LP	
MO - SA	0 : 12	13 : 00	27	LP	
EVERY SU	23 : 00	0 : 00	L2	SP	
---	---	---	---	---	---
---	---	---	---	---	---
---	---	---	---	---	---

-
- 3** Press **↑/↓** to select the setting you want to change or cancel:
- To change the setting, press **←/→** to flash the item you want to change, and press **↑/↓** to reset it. Then, press **→** repeatedly until the cursor (**▶**) appears at the beginning of the line.
 - To cancel the setting, press **CLEAR**.
- 4** Press **OK**.
- If any timer settings remain, turn off the VCR to return to recording standby.

When the timer settings overlap

The programme that starts first has priority and the second programme starts recording only after the first programme has finished. If the programmes start at the same time, the programme listed first in the menu has priority.

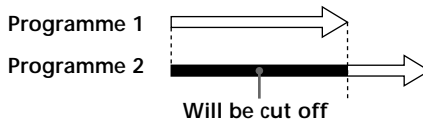

Recording stereo and bilingual programmes

In ZWEITON (German stereo) system

This VCR automatically receives and records stereo and bilingual programmes based on the ZWEITON system. When a stereo or bilingual programme is received, the STEREO indicator appears in the display window.

To select bilingual sound while recording

Press AUDIO MONITOR to select the sound you want.

To listen to	On-screen display	Display window
Main	MAIN	STEREO
Sub	SUB	STEREO
Main and sub	MAIN/SUB	STEREO

In NICAM system

This VCR receives and records stereo and bilingual programmes based on the NICAM system (the NICAM indicator appears). When a stereo or bilingual programme is received, the STEREO indicator appears in the display window.

To record a NICAM programme, HIFI AUDIO in the SET UP MENU should be set to NICAM (initial setting). To check the menu setting, see page 66.

To select the sound while recording

Press AUDIO MONITOR to select the sound you want.

Stereo programme

To listen to	On-screen display	Display window
Stereo	STEREO	STEREO
Standard sound*	No indicator	No indicator

* Usually the mixed sound of left and right channels (monaural)

Bilingual programme

To listen to	On-screen display	Display window
Main	MAIN	STEREO
Sub	SUB	STEREO
Main and sub	MAIN/SUB	STEREO
Standard sound*	No indicator	No indicator

* Usually the main sound (monaural)

Selecting the sound while playing


Press AUDIO MONITOR to select the sound you want.

To listen to	On-screen display	Display window
Stereo/main and sub (left and right channels)	STEREO	STEREO
Left channel/main	L CH	STEREO
Right channel/sub	R CH	STEREO
Standard sound*	No indicator	No indicator

* The mixed sound of left and right channels (monaural)

How sound is recorded on a video tape

The VCR records sounds onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

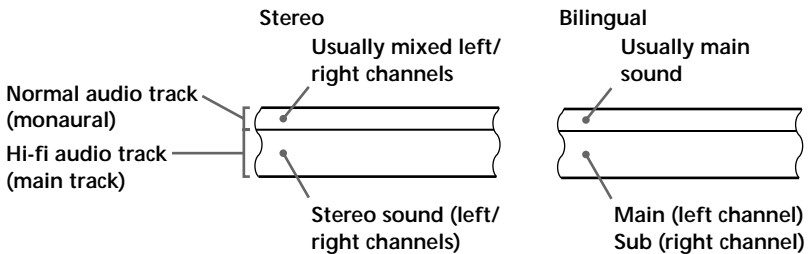


Notes

- To listen to playback sounds in stereo, you must use the AUDIO OUT connections.
- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO MONITOR setting.
- If the AUDIO MONITOR button does not function, check that AUDIO MIX in the SET UP MENU is set to OFF.
- If HIFI AUDIO is set to STD, the standard sound will be recorded on both the hi-fi and normal audio tracks. Pressing AUDIO MONITOR will not change the sound.

Searching the beginning of an Easy Timer recorded programme

If you record a programme using the Easy Timer function, you can easily find the beginning of the recording with this SEARCH function. The SEARCH indicator flashes when the VCR finishes the Easy Timer recording.

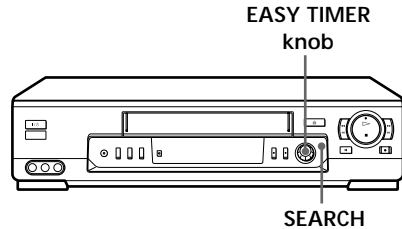

Press the EASY TIMER knob.

The VCR turns on, rewinds to the beginning of the recorded programme and starts playback automatically.

Tip


- To stop the flashing of the SEARCH indicator, first turn the VCR on, then press the SEARCH button. (Do not press any button at this point, otherwise this SEARCH mode will be cancelled.) To start the SEARCH function, press the SEARCH button once. If you press the SEARCH button repeatedly, you can enter the index search or Time Search mode (for details, see pages 62 and 63).

Notes

- This SEARCH function will be cancelled (the SEARCH indicator turns off) if:
 - The VCR starts recording other programmes.
 - You press ▷ PLAY, ►► FF, ◀◀ REW or ⏏ EJECT button while the VCR is on.
- With this SEARCH function, you can find the beginning of a programme recorded using the Easy Timer function only.

Searching using the index function


The VCR marks the tape with an index signal at the point where each recording begins. Use these signals as references to find a specific recording. The VCR can search up to 99 index signals ahead of or behind the current position. You can either use the INDEX SEARCH buttons on the remote commander or the SEARCH button and EASY TIMER knob on the VCR.

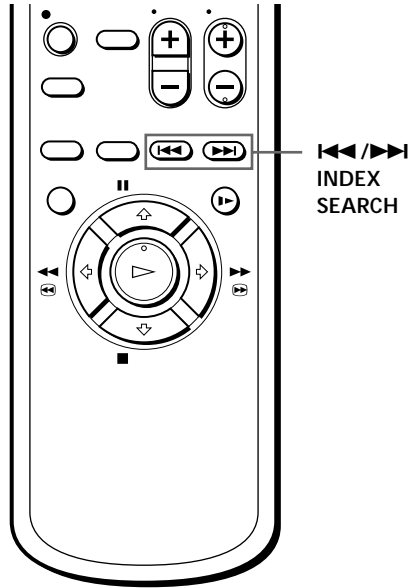

Using the INDEX SEARCH buttons on the remote commander

- 1 Insert an indexed tape into the VCR.
- 2 Press **◀◀/▶▶** INDEX SEARCH repeatedly to specify how many index signals ahead or behind you want to search:
 - To search ahead, press **▶▶** INDEX SEARCH.
 - To search backwards, press **◀◀** INDEX SEARCH.


The VCR starts searching and the index number on the TV screen counts down to zero. The playback starts from the point about five seconds ahead of the specified index mark.

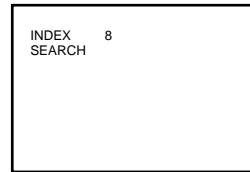


continued

Searching using the index function (continued)


Using the SEARCH button and EASY TIMER knob on the VCR

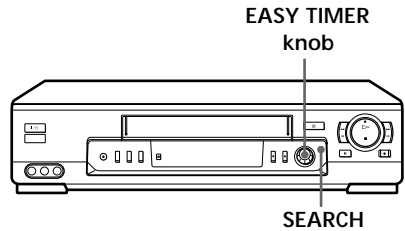

 - 1 Press SEARCH on the VCR repeatedly until "INDEX" appears in the display window (the SEARCH indicator lights up).



 - 2 Turn the EASY TIMER knob to specify how many index signals ahead or behind you want to search:
 - To search ahead, turn the EASY TIMER knob clockwise.
 - To search backwards, turn the EASY TIMER knob counterclockwise.



- 3 Press the EASY TIMER knob.

The VCR starts searching. The playback starts (the SEARCH indicator turns off) from the point about five seconds ahead of the specified index mark.

To stop searching


Press ■ STOP.

Note


- No index signal will be added when recording starts from recording pause. However, an index signal will be marked if you change the channel during recording pause.

Searching using the Time Search function

You can easily find a specific point on a tape by using the Time Search function. For example, you can find a recorded portion 15 minutes ahead of or behind the current position of a tape by using the Time Search function.

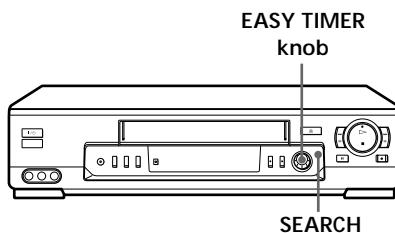

 
- 1 Press **SEARCH** repeatedly until “TIME” appears in the display window (the **SEARCH** indicator lights up).



- 2 Turn the **EASY TIMER** knob clockwise or counterclockwise to set the length of the time portion you want the VCR to fast-forward or rewind the tape. Each turn on the knob increases or decreases the duration by 15 minutes.


For example, if you want to watch a recorded portion 15 minutes ahead of the current position, turn the **EASY TIMER** knob once clockwise.

 To change the time by one minute, press **PROGRAM +/-**.



- 3 Press the **EASY TIMER** knob.

 The VCR starts searching and the tape counter starts counting until it reaches the specified point.



The VCR starts playback automatically when the tape counter reaches the specified point (the **SEARCH** indicator turns off).

To stop searching


Press **■ STOP**.


Tip


- The VCR can search up to three hours ahead of or behind the current position of a tape.

Adjusting the picture

Adjusting the tracking

Although the VCR automatically adjusts the tracking when playing a tape (the  indicator flashes in the display window, then goes off), distortion may occur if the tape was recorded in poor condition. If so, manually adjust the tracking.


Press the TRACKING +/- buttons on the VCR to display the tracking meter. The distortion should disappear as you press one of the two buttons (the  indicator lights up). To resume automatic tracking adjustment, eject the tape and reinsert it.

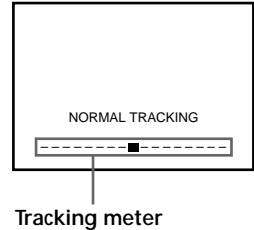

About the R² (Reality Regenerator) function

The R² function automatically adjusts the picture to the most suitable quality during playback.

When playback starts, the R² function activates and the R² button lights up.

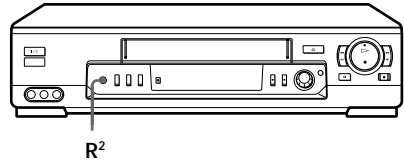

Each pressing of the button changes the effect and indication in the display window as follows:

REAL (status of playback started) → SOFT → DYNA (dynamic)



About the Adaptive Picture Control (APC) function

The Adaptive Picture Control (APC) function automatically improves recording and playback quality by adjusting the VCR to the condition of the video heads and tape. To maintain better picture quality, we recommend that you set APC to ON in the SET UP MENU (with the APC indicator in the display window lit).

SET UP MENU		
AUDIO MIX	ON	•OFF
HIFI AUDIO	STD	•NICAM
▶APC	•ON	OFF
PAL / MESECAM		
•AUTO	PAL	MESECAM
NTSC PB		
•ON	PAL TV	4.43 3.58
SELECT	: [↑↓]	
SET	: [←→]	

APC playback

The APC function automatically works on all types of tapes, including rental tapes and tapes that were not recorded with APC.

APC recording

Whenever you insert a tape and first start recording, the VCR adjusts to the tape using the APC function (the APC indicator flashes rapidly). This adjustment is retained until the tape is ejected.

To deactivate the APC function

Press MENU and select SET UP MENU, then set APC to OFF. The APC indicator in the display window goes off.

Tip


- To set the tracking to the centre position, press the TRACKING + and - buttons at the same time.

Note

- There is a delay of a few seconds before the VCR actually starts recording while the VCR analyses the tape. To avoid the delay, first set the VCR to recording pause (the APC indicator flashes slowly) and press ● REC to have the VCR analyse the tape (the APC indicator flashes rapidly). After the APC indicator stops flashing, press ■ PAUSE to start recording immediately. If you press ■ PAUSE before the APC indicator stops flashing, the APC function is cancelled.

Changing menu options

- 1 Press MENU, then select SET UP MENU.

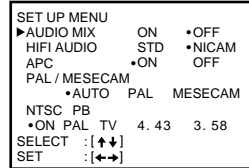

- 2 Press ↑/↓ to select the option to change, then press ←/→ to change the setting.
- 3 Press OK to return to the original screen.


Menu choices

Initial settings are indicated in bold print.

Menu option	Set this option to
AUDIO MIX	ON to listen to the hi-fi and normal audio tracks at the same time. The AUDIO MONITOR button will not function. OFF to listen to hi-fi and normal audio tracks separately. Select the sound using the AUDIO MONITOR button.
HIFI AUDIO	STD to record standard sound on the hi-fi audio track. NICAM to record NICAM broadcasts on the hi-fi audio track. For details, see page 58.
APC	ON to switch on the APC (Adaptive Picture Control) function and improve picture quality. OFF to switch off APC.
PAL/MESECAM	AUTO to have the VCR automatically select the colour system for recording and playback. If the picture has no colour or unusual colours, set to PAL or MESECAM according to your local colour system.
NTSC PB	ON PAL TV to play back an NTSC-recorded tape on a PAL TV. 4.43 or 3.58 according to the colour system of your NTSC TV. For details, see page 35.

Connecting to a VCR or stereo system

How to connect to record on this VCR

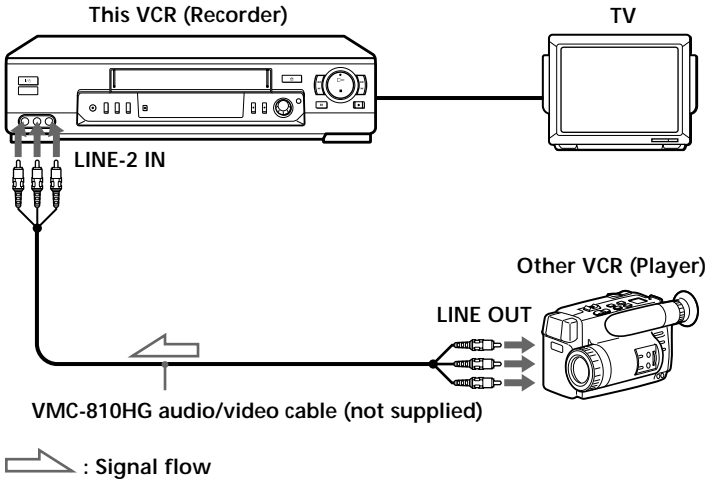

How to connect to a stereo system

Connect LINE-2 IN AUDIO on this VCR to the audio output jacks on the stereo system, using the RK-C510HG audio cable (not supplied).

Tips

- If the other VCR is a monaural type and connected to this VCR's LINE-2 IN jacks, connect the audio plug to the AUDIO L (white) jack. The sound is recorded on both right and left channels. When connecting to the AUDIO R (red) jack, the sound is recorded only on the right channel.
- You can also use the LINE-1 IN jacks instead. If the other VCR is a monaural type, the sound is recorded only on the channel whose jack is connected to the audio plug. To record on both right and left channels, connect the audio plugs to the AUDIO R/L jacks using a VMC-910HG audio/video cable (not supplied).

Notes

- Make sure you connect the plugs to the jacks of the same colour.
- If you connect this VCR to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.


continued

Connecting to a VCR or stereo system (continued)

Operation (when recording on this VCR)

Before you start editing

- Turn on your TV and set it to the video channel.
- Press INPUT SELECT or PROG +/- to display “L1” or “L2” in the display window.
- Press SP/LP (SP/EP) to select the tape speed (SP or LP for the PAL system, and SP or EP for the NTSC system).

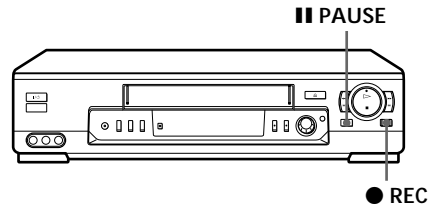

- 1 Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2 Insert a tape with its safety tab in place into this (recording) VCR. Search for the point to start recording and press **|| PAUSE**.
- 3 Press **● REC** on this VCR and set it to recording pause.
- 4 To start editing, press the **|| PAUSE** buttons on both VCRs at the same time.

To stop editing

Press the **■ STOP** buttons on both VCRs.

Tips

- To edit more precisely, press the **|| PAUSE** buttons on the VCRs to release pause.
- To cut out unwanted scenes while editing, press **|| PAUSE** on this VCR when an unwanted scene begins. When it ends, press **|| PAUSE** again to resume recording.

Note

- If you start recording following the procedure above, the VCR will not start recording with the APC function. To record a tape with the APC function, press **● REC** again during recording pause in step 3 so that the VCR analyses the tape. Then when you start recording in step 4, press **|| PAUSE** after the APC indicator stops flashing. If you press **|| PAUSE** before the APC indicator stops flashing, the APC function is cancelled.

Troubleshooting

If you have any questions or problems not covered below, please consult your nearest Sony service facility.

	Symptom	Remedy
Power	The I/⏻ ON/STANDBY switch does not function.	<ul style="list-style-type: none"> Connect the mains lead to the mains securely.
	The power is turned on but the VCR does not operate.	<ul style="list-style-type: none"> Moisture condensation has occurred. Turn the power off, unplug the mains lead and leave the VCR to dry for over four hours.
Clock	The clock has stopped and “-:- -” lights in the display window.	<ul style="list-style-type: none"> The clock stops if the VCR is disconnected from the mains for more than eight hours. Reset the clock (and timer).
	The playback picture does not appear on the TV screen.	<ul style="list-style-type: none"> Make sure the TV is set to the video channel. If you are using a monitor, set it to video input. If you made connections using the aerial cable only, make sure the RF channel number is set correctly for your area.
Playback	The playback picture has no colour or unusual colour.	<ul style="list-style-type: none"> Set the PAL/MESECAM option in the SET UP MENU according to your local colour system.
	The picture or sound is distorted.	<ul style="list-style-type: none"> Adjust the tracking with the TRACKING +/- buttons. Make sure the colour system is set to the system that the tape was recorded in. If you made connections using the aerial cable only, make sure the TV system is set correctly for your area.
	The picture is not clear, or a message appears indicating that the video heads need cleaning.	<ul style="list-style-type: none"> The video heads are dirty (page 71). Clean the video heads using the Sony T-25CLD, T-25CLW or E-25CLDR video head cleaning cassette. If these cleaning cassettes are not available in your area, have the heads cleaned at your nearest Sony service facility (a standard service charge will be required). Do not use a commercially available liquid type cleaning cassette other than Sony's, as they may damage the video heads. If a message appears, this indicates that the Head Condition Sensor has detected dirty video heads. Follow the on-screen message. For details about the Head Condition Sensor, see page 72. The video heads may have to be replaced. Consult your local Sony service facility for more information.
	The picture rolls vertically during picture search.	<ul style="list-style-type: none"> Adjust the vertical hold control on the TV or monitor.
	The picture has no sound.	<ul style="list-style-type: none"> The tape is defective. If you made A/V connections, check the audio cable connection. If you made connections using the aerial cable only, make sure the TV system is set correctly for your area.
	The sound is unstable or has an echo.	<ul style="list-style-type: none"> When you play a tape with the same sound recorded on both the hi-fi and normal sound tracks, make sure the AUDIO MIX option in the SET UP MENU is set to OFF.


continued

Troubleshooting (continued)

	Symptom	Remedy
Recording	No TV programmes appear on the TV screen.	<ul style="list-style-type: none"> • Make sure the TV is set to the video channel. If you are using a monitor, set it to video input. • Select the correct source with the INPUT SELECT or PROG +/- buttons. Select a programme position when recording TV programmes; select "L1" or "L2" when recording from other equipment.
	TV reception is poor.	<ul style="list-style-type: none"> • Adjust the TV aerial. • Make sure SYSTEM (B/G, D/K, I, or M) in the TUNER PRESET menu is set to the system in your area.
	The recorded picture has no colour or unusual colour.	<ul style="list-style-type: none"> • Set the PAL/MESECAM option in the SET UP MENU according to your local colour system.
	The tape starts playing as soon as it is inserted.	<ul style="list-style-type: none"> • The safety tab has been removed. To record on this tape, cover the tab hole.
	The tape is ejected when you press ● REC.	<ul style="list-style-type: none"> • Check that the safety tab has not been removed.
Timer recording	Nothing happens when you press ● REC.	<ul style="list-style-type: none"> • Make sure the tape is not at its end.
	The timer does not operate.	<ul style="list-style-type: none"> • Check that the clock is set. • Make sure a tape has been inserted. • Check that the safety tab has not been removed. • Make sure the tape is not at its end. • Make sure a programme has been set for timer recording. • Make sure your timer settings are past the current time. • The clock stops if the VCR is disconnected from the mains for more than eight hours. Reset the clock and timer.
Synchronised Recording	The SYNCHRO REC button turns off while recording or does not go back to recording standby mode.	<ul style="list-style-type: none"> • The tape has reached its end. Insert a new tape and press SYNCHRO REC again.
	The Synchronised Recording function does not work.	<ul style="list-style-type: none"> • The connected equipment was not turned off. Turn off the connected equipment and press SYNCHRO REC again. • There was a power failure. Press SYNCHRO REC again.
	The programme recorded with the Synchronised Recording function is incomplete.	<ul style="list-style-type: none"> • If the settings for timer recordings and Synchronised Recording overlap, the programme that starts first has priority and the second programme starts recording only after the first programme has finished. • There was a power failure. Press SYNCHRO REC again.

Symptom	Remedy
A tape cannot be inserted.	<ul style="list-style-type: none"> • Check that a tape is not already in the tape compartment.
The remote commander does not function.	<ul style="list-style-type: none"> • Make sure you are pointing the remote commander at the remote sensor on the VCR. • Replace all the batteries in the remote commander with new ones if they are weak. • Make sure the TV/VIDEO remote control switch is set correctly.
The tracking meter does not appear on the screen.	<ul style="list-style-type: none"> • The recording condition of the tape is very poor and tracking cannot be adjusted.
The VCR needs to be cleaned.	<ul style="list-style-type: none"> • Clean the cabinet, panel and controls with a dry, soft cloth, or a soft cloth slightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzine.

Symptoms caused by contaminated video heads

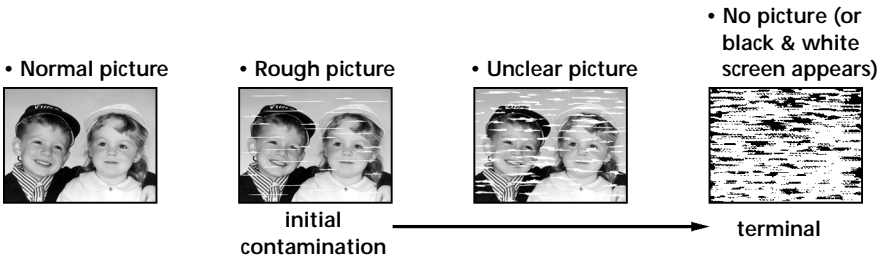

Troubleshooting (continued)

Sapphire tape cleaner

The unit incorporates a sapphire tape cleaner which cleans a video tape when it is loaded. This cleaner can prevent the video heads from contamination by removing dust or mold from a tape with the sapphire edge.

Head Condition Sensor

The Head Condition Sensor checks the video heads condition. If the heads are dirty, a message will instruct you to insert a video head cleaning cassette.

The VCR may temporarily switch to a different head and resume playback. To switch the heads, press ▷ PLAY while the "PUSH [PLAY] TO RESUME TEMPORARILY" message appears on the screen. Although playback will resume, the sound will be monaural. When playback is finished, be sure to clean the heads with a video head cleaning cassette.

Be sure to use the Sony T-25CLD, T-25CLW or E-25CLDR video head cleaning cassette. If these cleaning cassettes are not available in your area, have the heads cleaned at your nearest Sony service facility (a standard service charge will be required).

Specifications

System

Colour system

PAL, MESECAM, NTSC 3.58, NTSC 4.43

TV system

B/G, D/K, I, M

Channel coverage

B/G: VHF E2 to E12/UHF E21 to E69/
CATV S01 to S05, S1 to S41

D/K: VHF R1 to R12/UHF R21 to R69

I: VHF SA4 to SA13/UHF B21 to B69/
CATV S01 to S05, S1 to S41

M: VHF A2 to A13/UHF A14 to A69/
CATV A-8 to A-1, A to W, W+1 to W+84

Stereo system

NICAM STEREO:B/G, I

ZWEITON German stereo: B/G

RF output signal

UHF channels 21 to 69

Aerial out

75-ohm asymmetrical aerial socket

Inputs and outputs

LINE-1 IN and LINE-2 IN

VIDEO IN, phono jack (1 each)

Input signal: 1 V_{p-p}, 75 ohms, unbalanced, sync negative

AUDIO IN, phono jack (2 each)

Input level: 327 mV_{rms}

Input impedance: more than 47 kilohms

LINE-1 OUT

VIDEO OUT, phono jack (1)

Output signal: 1 V_{p-p}, 75 ohms, unbalanced, sync negative

AUDIO OUT, phono jack (2)

Standard output: 327 mV_{rms}

Load impedance: 47 kilohms

Output impedance: less than 10 kilohms

LINE-2 OUT

AUDIO OUT, phono jack (2)

Standard output: 327 mV_{rms}

Load impedance: 47 kilohms

Output impedance: less than 10 kilohms

General

Power requirements

110 – 240 V AC, 50/60 Hz

Power consumption

18 W

Operating temperature

5°C to 40°C

Storage temperature

-20°C to 60°C

Dimensions

Approx. 430 × 97 × 288 mm (w/h/d)

including projecting parts and controls

Mass

Approx. 4.1 kg

Power back-up

Built-in self-charging capacitor

Back-up duration: up to 8 hours at a time

Supplied accessories

Remote commander (1)

R6 (size AA) batteries (2)


Aerial cable (1)

Design and specifications are subject to change without notice.

Index to parts and controls


Refer to the pages indicated in parentheses () for details.

Front panel

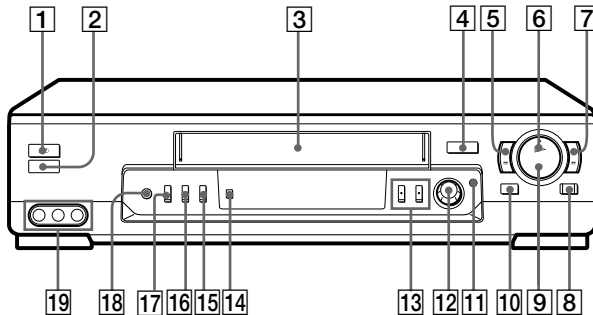


- | | |
|--|---|
| 1 I/⏻ ON/STANDBY switch (8) | 12 EASY TIMER knob (41, 60, 62, 63) |
| 2 Remote sensor (5) | 13 PROGRAM/TRACKING +/- buttons (8, 64) |
| 3 Tape compartment | 14 SYNCHRO REC button (54) |
| 4 ≡ EJECT button (35) | 15 SP (Standard Play)/LP (Long Play)/EP (Extra Play) button (39) |
| 5 ◀◀ ⏮ REW (rewind) button (35, 52) | 16 COLOR SYSTEM button (35) |
| 6 ▷▶ PLAY button (35) | 17 ONE TOUCH TUNING/RF (Radio Frequency) CHANNEL button (8, 10) |
| 7 ▶▶▶ FF (fast-forward) button (35, 52) | 18 R ² (Reality Regenerator) button (64) |
| 8 ● REC (record) button (39) | 19 LINE-2 IN VIDEO/AUDIO L/R jacks (67) |
| 9 ■ STOP button (35) | |
| 10 PAUSE button (35) | |
| 11 SEARCH button/indicator (60, 62, 63) | |

Display window

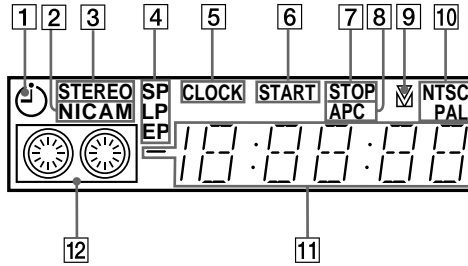

- | | |
|---|---|
| <ul style="list-style-type: none"> 1 Timer indicator (42) 2 NICAM indicator (58) 3 STEREO indicator (58) 4 Tape speed indicator (39) 5 CLOCK indicator (43) 6 START indicator (41) 7 STOP indicator (41) | <ul style="list-style-type: none"> 8 APC (Adaptive Picture Control) indicator (65) 9 Tracking indicator (64) 10 Colour system indicator (35) 11 Time counter/clock/line/programme/TV system indicator (8, 36, 38, 43, 68) 12 Tape/recording indicator (39) |
|---|---|

Rear panel

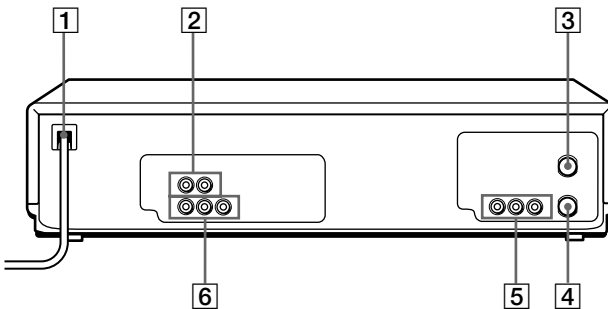


- | | |
|---|--|
| <ul style="list-style-type: none"> 1 Mains lead (6) 2 LINE-2 OUT AUDIO R/L jacks (7) 3 AERIAL IN connector (6) 4 AERIAL OUT connector (6) | <ul style="list-style-type: none"> 5 LINE-1 IN AUDIO R/L/VIDEO jacks (54) 6 LINE-1 OUT AUDIO R/L/VIDEO jacks (7) |
|---|--|

continued

Index to parts and controls (continued)

Remote commander

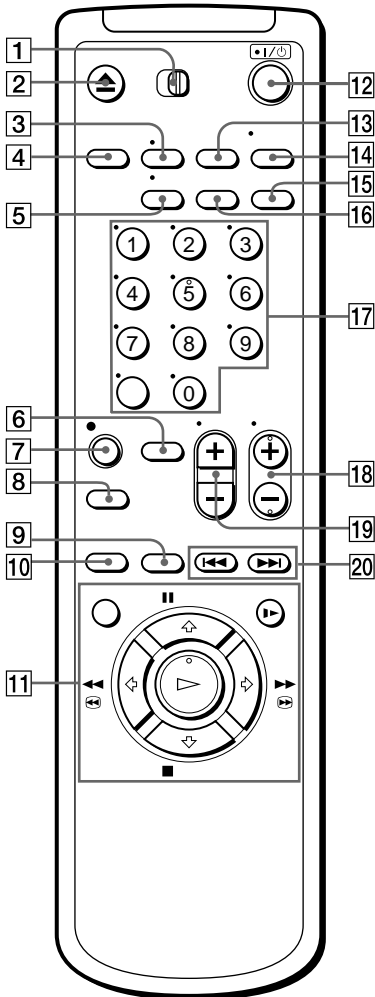

- 1 **TV** / **VIDEO** remote control switch (5)
- 2 **▲** EJECT button (35)
- 3 **DISPLAY** button (39)
- 4 **TRINITRON TV SYNCHRO PLAY** button (37)
- 5 **TV/VIDEO** button (*for TV*) (5)
- 6 **EASY TIMER** button (44)
- 7 **●** REC button (39, 53)
- 8 **SP** (Standard Play)/**LP** (Long Play)/**EP** (Extra Play) button (39)
- 9 **x2** button (52)
- 10 **INPUT SELECT** button (40, 51)
- 11 **Tape/menu operation** buttons
 - MENU** button (11, 66)
 - ||** PAUSE/**▲** button (35)
 - STOP/**▼** button (35)
 - ◀◀** **⏮** REW (rewind)/**←** button (35, 52)
 - ▶▶** **⏭** FF (fast-forward)/**→** button (35, 52)
 - ▷** PLAY/OK button (35)
 - ▶** SLOW button (52)
- 12 **I/⏻** (on/standby) switch (48)
- 13 **R²** (Reality Regenerator) button (64)
- 14 **AUDIO MONITOR** button (58)
- 15 **G-CODE** button (47)
- 16 **CLEAR** button (36, 48, 57)
- 17 **Programme number** /-/-- (ten's digit) buttons (44, 48)
- 18 **PROG** (programme) **+/-** buttons (38)
- 19 **VOL** (volume) **+/-** buttons (*for TV*)
- 20 **◀◀/▶▶** INDEX SEARCH buttons (61)

Index

A, B

- Accessories supplied 4
- Adjusting
 - picture 16, 52, 64
 - tracking 52, 64
- Aerial hookup 6
- AFT (Auto Fine Tuning) 16
- APC (Adaptive Picture Control) 65
- Audio track 59
- AV (audio/video) connection 7

C

- Cancelling timer settings 56
- Changing timer settings 56
- Checking timer setting 56
- Cleaning the video heads 69
- Clock setting 32
- Colour system
 - compatible colour systems 2
 - setting 35
- Connecting
 - the VCR and your TV 6
 - to a stereo system 7
 - to a TV with audio/video jacks 7
- Counter 36

D

- Disabling programme position 15, 30
- Dubbing. *See* Editing

E, F

- Easy Clock 43
- Easy Timer recording 41
- Editing 67
- EP mode 39

G

- G-CODE
 - recording 47
 - setting 25
- Guide channel setting 25

H

- Head Condition Sensor 72
- Hi-fi audio track 59

I, J, K

- Index searching 61

L

- LP mode 39

M

- Monitoring audio
 - during playback 59
 - during recording 58

N

- NICAM broadcasts 58
- Normal audio track 59
- NTSC-recorded tapes 35

O

- One Touch Tuning 10

P, Q

- Picture adjustment 16, 52, 64
- Playback 34
 - at various speeds 52
 - frame-by-frame 52
 - slow motion 52
- Presetting channels 10
 - automatically 11
 - manually 13
 - One Touch Tuning 10

R

- R² (Reality Regenerator) 64
- Recording 38
 - bilingual programmes 58
 - duration time 53

- saving 39
- stereo programmes 58
- using the G-CODE system 47
- using the Easy Timer function 41
- while watching another programme 39

- Remote commander 5

S

- Safety tab 39
- Searching
 - at various speeds 52
 - the beginning of an Easy Timer recorded programme 60
 - using the index function 61
 - using the Time Search function 63
- SP mode 39
- Synchronised recording 54

T, U, V, W, X, Y

- Time Search 63
- Timer recording 50
 - cancelling timer settings 56
 - changing timer settings 56
 - checking timer settings 56
 - daily/weekly recording 51
 - Easy Timer 41
 - overlapping timer recordings 57
 - using the G-CODE system 47
- Tracking adjustment 52, 64
- Trinitron TV Synchro Play 37
- Tuning your TV to the VCR 8
- TV system 2, 8

Z

- ZWEITON broadcasts 58