

Video Cassette Player



SLV-GA58ME/SG

© 2003 Sony Corporation

COLOUR SYSTEM USER SET

0:00:00

PAL

NTSC

MESECAM PAL

DISPLAY

0:00:22

REMAIN 1:46

DISPLAY

MENU 3

LANGUAGE SET

ARABIC ENGLISH

ENGLISH ARABIC

INSTALLATION

VCR OUTPUT CH

TV SYSTEM : K

VCR OUTPUT CH : 3 2

SELECT : OK SET : MENU

SELECT : OK SET : MENU

AA R6

AA R6

PAL MESECAM NTSC 4.43 NTSC 3.58

PAL MESECAM NTSC 4.43 NTSC 3.58

MESECAM

NTSC

MENU 1

USER SET

ASC 2

OFF ON ASC

ON

OFF

TRACKING

MENU 3

ASC : OFF

SOFTEN SHARPEN

ON/OFF : SET

END : OK EXIT : MENU

MENU 4

PLAY 3

EJECT

PLAY

REW

PAUSE

STOP

REC

FF

REW

FF

REW

FF

REW

STOP

REW

EJECT

PLAY

DISPLAY

PAUSE

PLAY

FF

STOP

REW

AERIAL IN

AERIAL OUT

VIDEO AUDIO

LINE IN 1

LINE OUT

 
 
 
SLV-GA58ME

A/V

F

(SLV-GA58ME)

AA R6

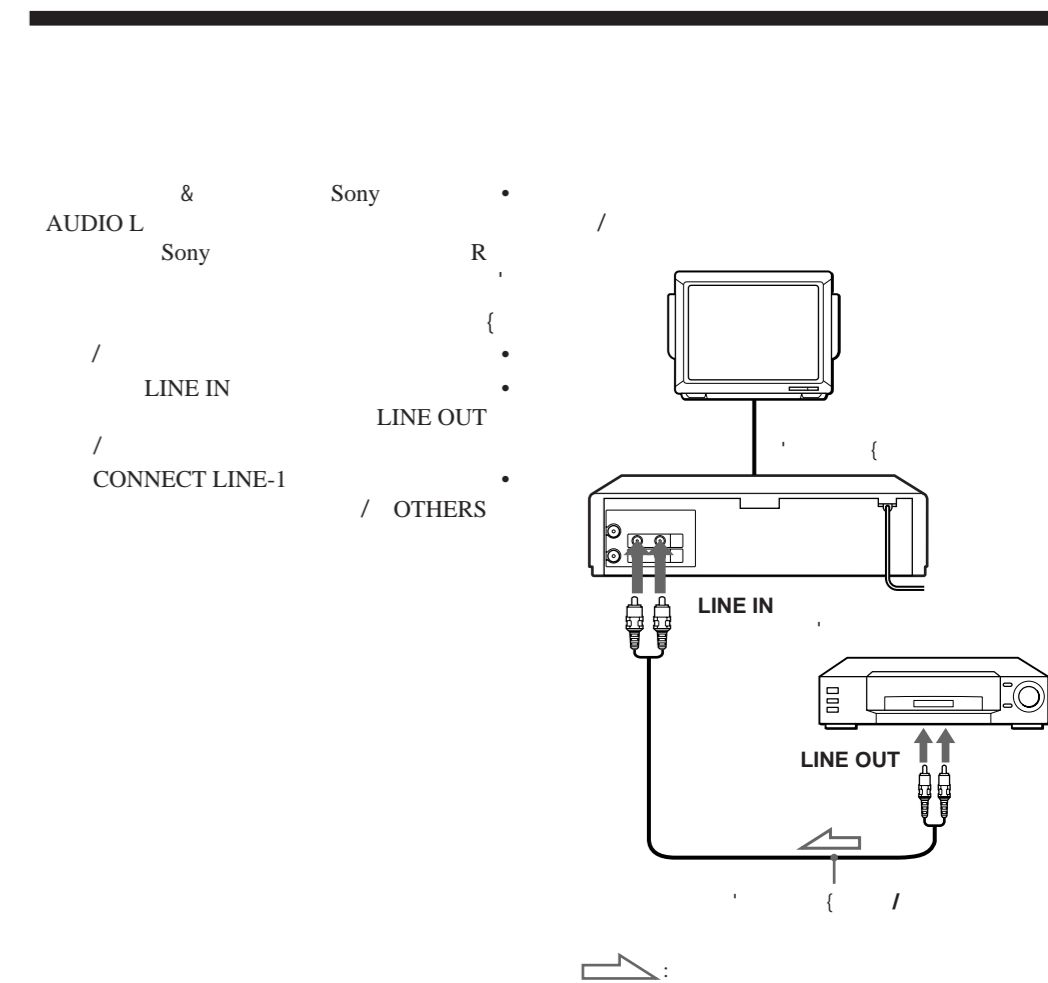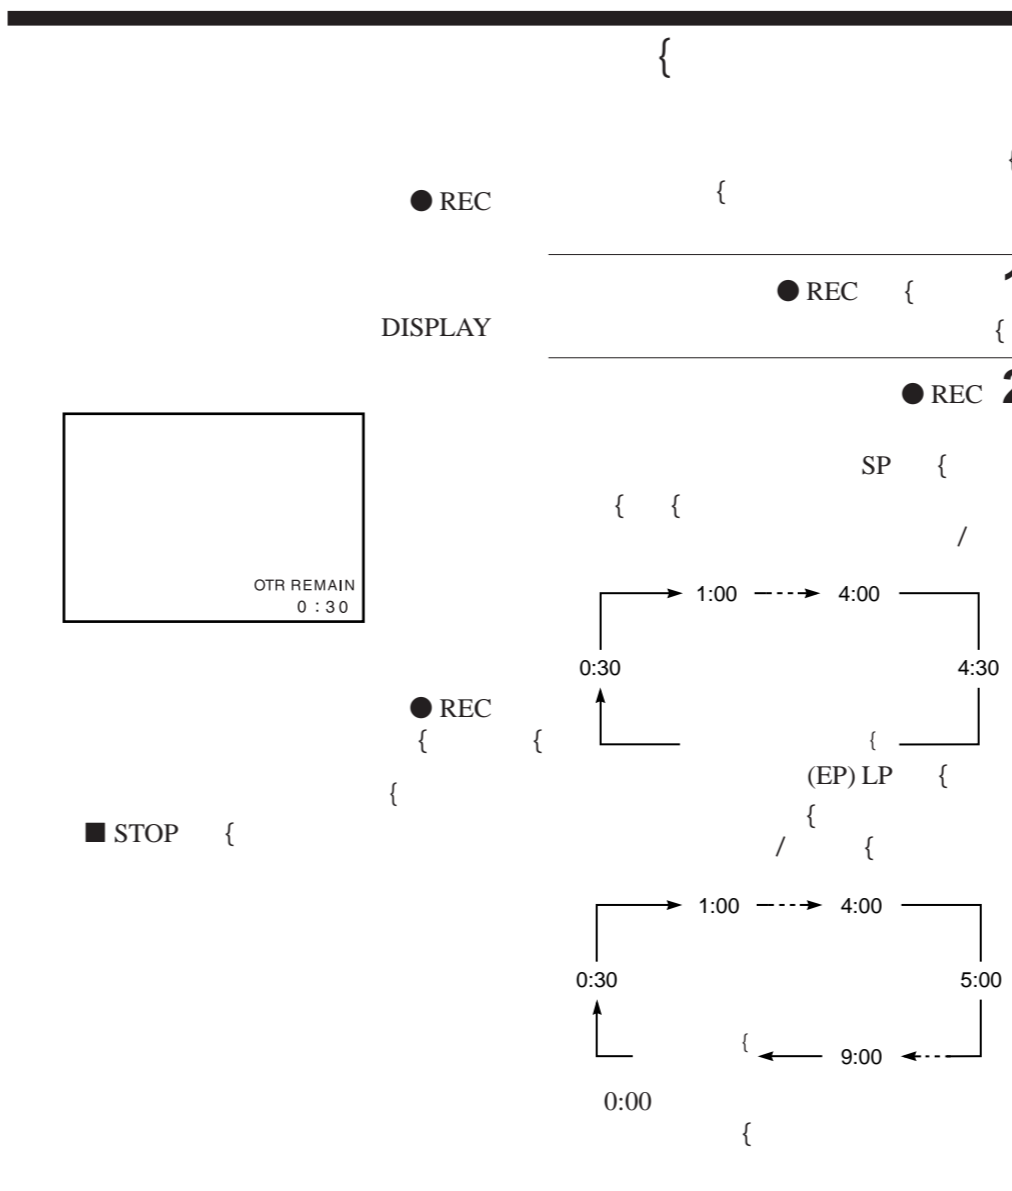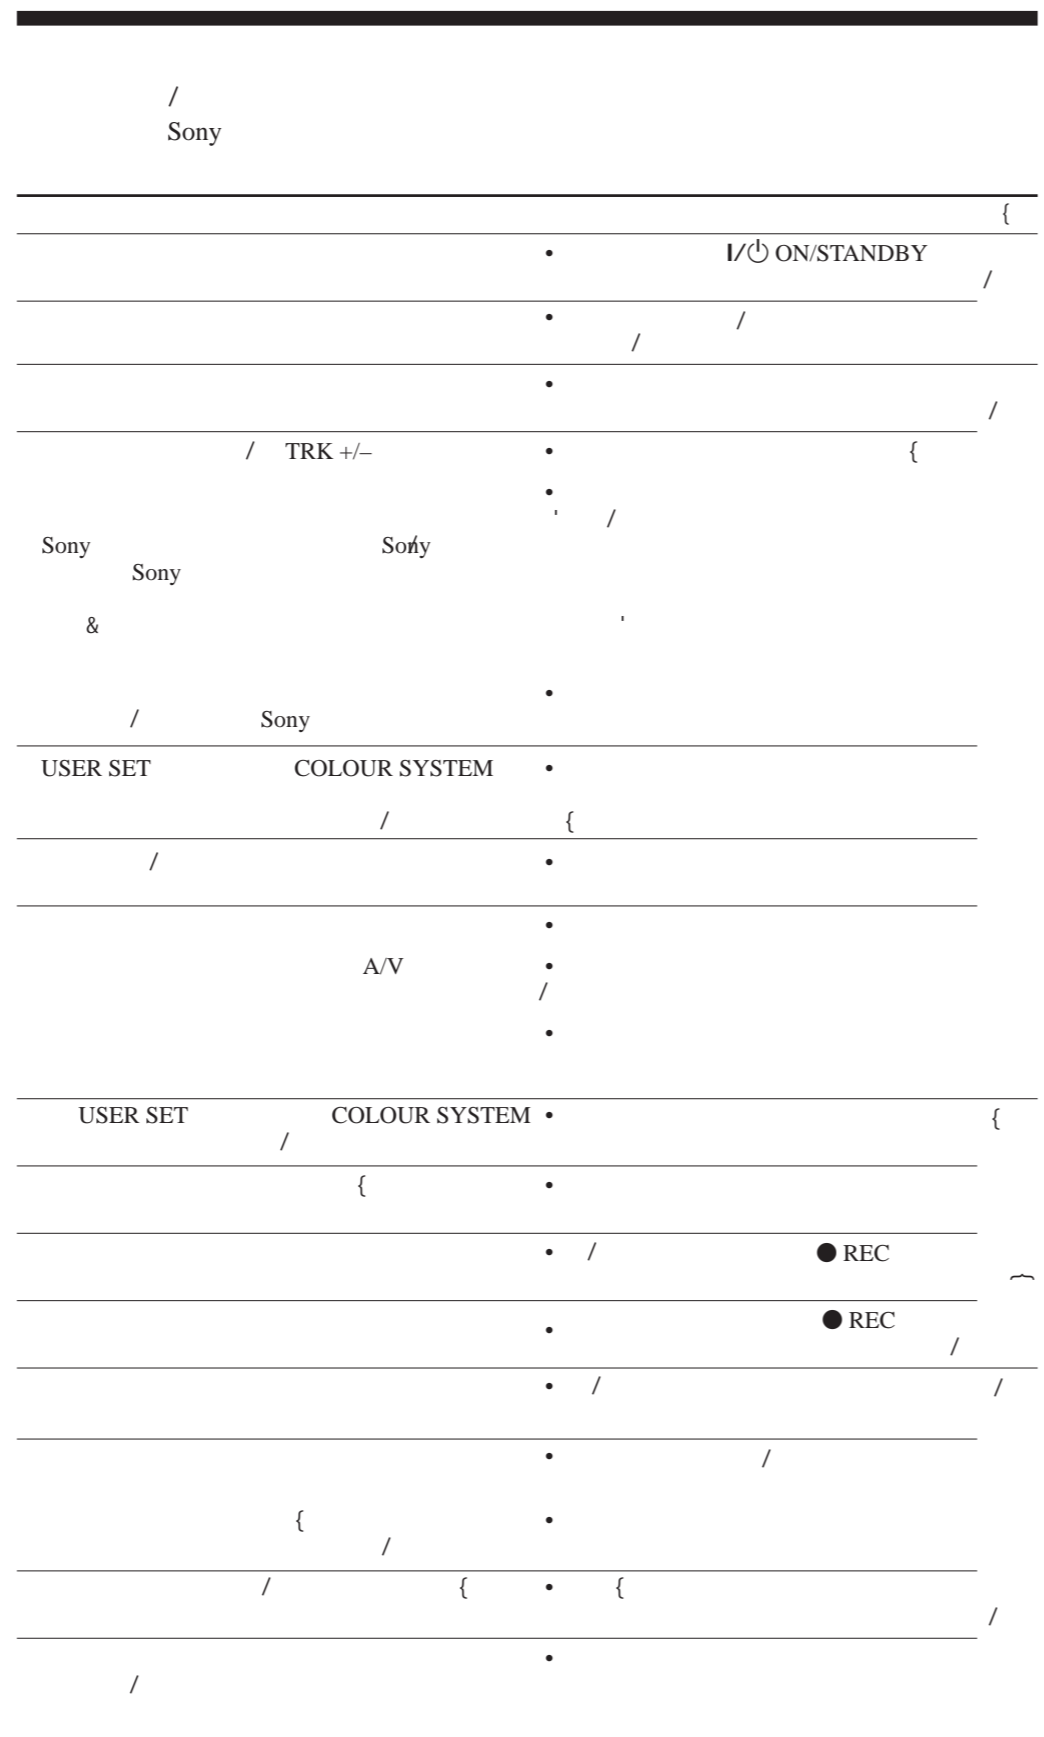

NTSC 4.43 NTSC 3.58 MESECAM PAL
I K G

- [PAL SP
- [NTSC LP
- [• PAL LP
- [• NTSC EP
- [NTSC EP

 
'E300 LP {
'E180

'G/K/I UHF RF

- LINE IN
- VIDEO IN
- Vp-p
- AUDIO IN
- mVrms
- LINE OUT
- VIDEO OUT
- Vp-p
- AUDIO OUT
- mVrms

- ON • OSD
- OFF •
- E180 • TAPE SELECT
- E-180
- E240 •
- E-240
- E260 •
- E-260
- E300 •
- E-300
- AUTO • COLOUR SYSTEM
- PAL •
- MESECAM •
- MESECAM {
- B/W •
- NTSC {
- NT3.58 •
- NT4.43 •
- NTSC 4.43
- NTPB •
- PAL NTSC
- ON • ASC
- OFF •


▲/▼/◀/▶ MENU 1
OK USER SET

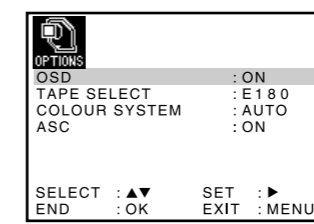


▶ 2
OK ▶ 3

REC 4
PAUSE 5

 
STOP
DISPLAY

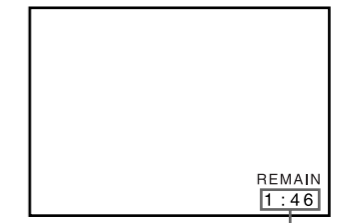

DISPLAY / /

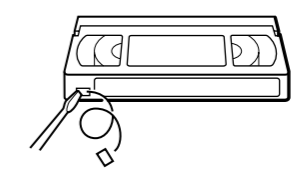 

PAUSE
PAUSE)
PAUSE {

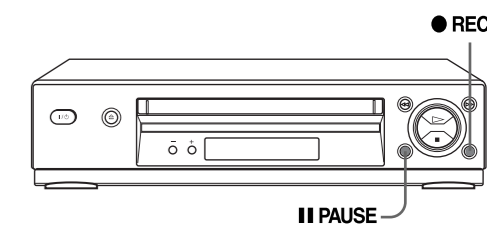 

REC SPEED 1
SP PAL LP SP
'NTSC EP
SP LP {
EP
SP

2
PAUSE {

3
PAUSE {