

Wireless Stereo Headphone System

Operating Instructions

MDR-RF875RK

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.



Hereby, Sony Corp., declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For details, please access the following URL :
<http://www.compliance.sony.de/>

This product is intended to be used in the following countries.

CEK version: United Kingdom

CED version: Germany, Sweden, Denmark,
Finland, Norway, Belgium,
Switzerland, Austria, Netherlands,
France

To check for version, please refer to the barcode label located on the top of the box.

Welcome!

Thank you for purchasing the Sony MDR-RF875RK Wireless Stereo Headphone System. Before operating the unit, please read this manual thoroughly and retain it for future reference.

Some features are:

- Wireless system that allows you to listen to a program free from the restriction of a cord
- High fidelity sound reproduction
- A compact transmitter with an AC power adaptor (supplied) enables simple charging of the headphone battery. Just by placing the headphones on the transmitter, headphone battery can be charged.
- Comfortable Circum-aural headphones with self-adjusting head band
- Automatic ON/OFF function on headphones to preserve battery power

Notes on receiving performance

The system for this equipment utilizes very high frequency signals in the 800 MHz band so the receiving performance may deteriorate due to the surroundings. The following examples illustrate conditions that may reduce the possible receiving range or cause interference with reception.

- Inside a building with walls containing steel beams.
- Area with many steel file cabinets, etc.
- Area with many electrical appliances capable of generating electromagnetic noise.
- Transmitter is placed on a metal instrument.
- Area facing a roadway.
- Noise or interfering signals exist in the surroundings due to radio transceivers in trucks, etc.
- Noise or interfering signals exist in the surroundings owing to wireless communication systems installed along roadways.

Table of contents

Getting started

Unpacking	4
Setting up the transmitter	4
Charging the headphone battery	6

Operating the system

Listening to a program	7
The effective areas of the transmitter	9
Replacing the ear pads	9

Additional information

Precautions	10
Troubleshooting	10
Specifications	11


Unpacking

Check that you have the following items:


- The headphones




- The transmitter

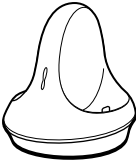

- AC power adaptor

 

 - Unimatch plug adaptor (stereo mini jack ↔ stereo phone plug)




- Connecting cord (phono plugs ↔ stereo mini plug), 1 m




Setting up the transmitter

- 1 Connect the transmitter to audio/video equipment. Select one of the hookups below depending on the jack type:


- Ⓐ To connect to a headphone jack

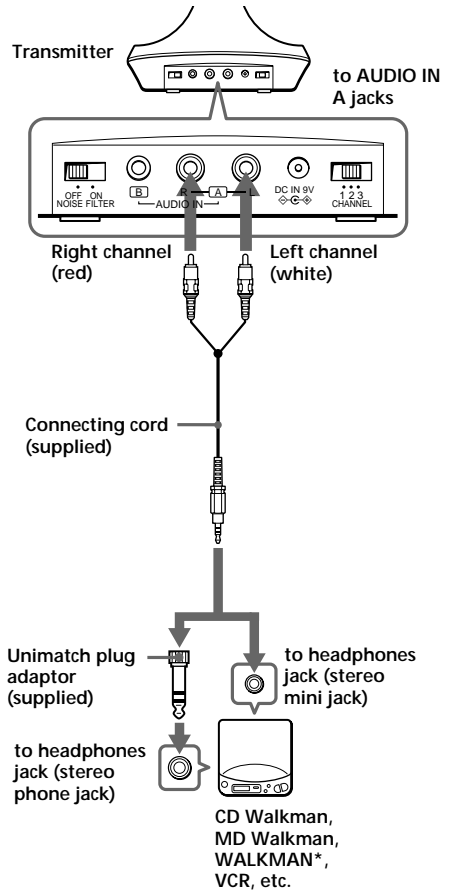

- Ⓑ To connect to LINE OUT or REC OUT jacks

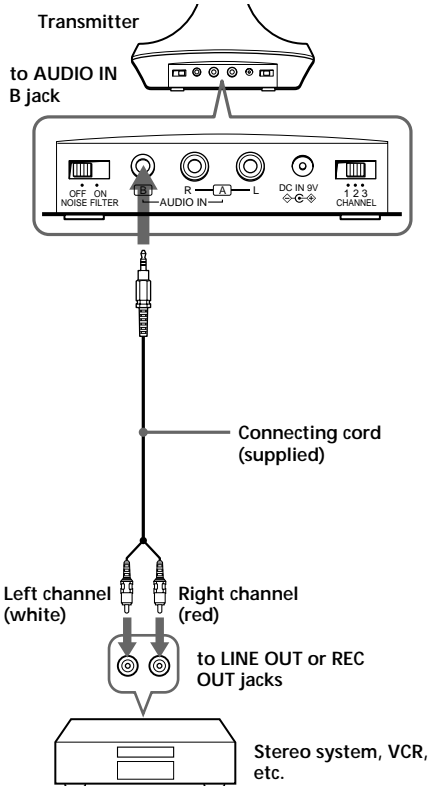

- Ⓒ To connect to a headphone jack of a TV or VCR.
Set the NOISE FILTER switch to ON if noise is heard.

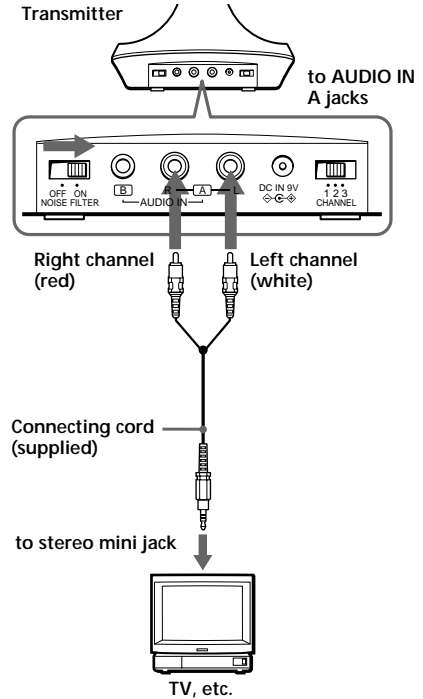

Notes

- If you connect the transmitter to LINE OUT or REC OUT jack of an audio reproducer such as an MD player or CD player, do not set the NOISE FILTER switch to ON. Otherwise, the volume will be limited.
- When the transmitter is placed on or near a TV, it may pick up noise.
In such case, place the transmitter away from the TV.

continue to next page

Continued

2 Connect the transmitter to an AC outlet using the supplied AC power adaptor.

Notes

- Use only the supplied AC power adaptor. Do not use any other AC power adaptor.



Polarity of the plug

- When you connect the transmitter directly to a monaural earphone jack, the audio signal will not be output through the right channel. In such a case, use the separately sold PC-236HG plug adaptor.
- If the connected equipment has the AVLS (Automatic Volume Limiter System) function, be sure to turn the function off when using the transmitter. Otherwise, you will have to turn up the volume of the headphones, and that may cause noise.


* WALKMAN is a registered trademark of Sony Corporation.

Charging the headphone battery

Using the headphones for the first time

When you use the headphones for the first time, charge the battery in the following manner.

1 Connect the transmitter to a power source.

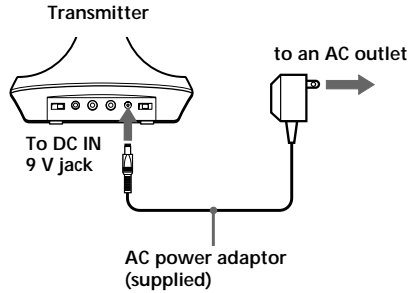


Place the headphones on the transmitter such that the charging pins on the transmitter engage the charging contacts on the bottom of the housing.

The charge indicator on the transmitter will light in green to indicate that the battery is being charged.


Once 24 hours have elapsed since the start of battery charging, the charger automatically shuts off, and the green indicator goes out.

Listening to a program

- 1 First turn on the audio/video equipment and start playing.
- 2 Remove the headphones from the transmitter. The transmitter's power indicator will light in red.

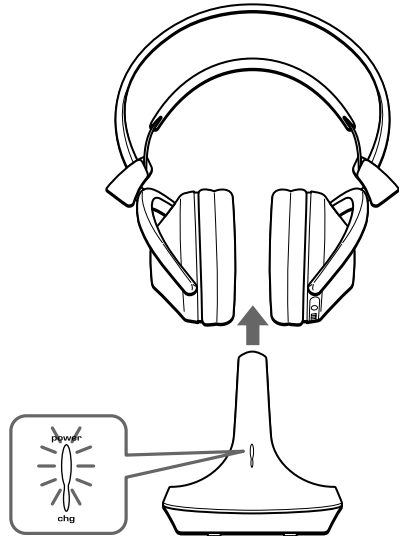

- 3 Select the radio frequency with the CHANNEL selector switch.

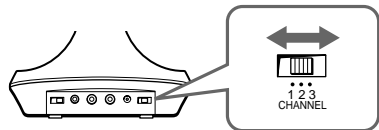

To recharge the headphone battery after use

Since the charger shuts itself off in response to its internal timer after 24 hours, there is no need to worry about overcharging.

Charging and using hours

Approx. charging hours	Approx. using time*
1	60 minutes
24**	25 hours

* at 1 kHz, 1 mW + 1 mW output


** The hours required to fully charge empty batteries

Continued

- 4** When you put on the headphones the headphone power turns on automatically.



- 5** Turn up the volume to a moderate level with the VOL control. Press the TUNING button briefly for automatic tuning of the headphones. If you do not receive a clear audio signal, press it again.

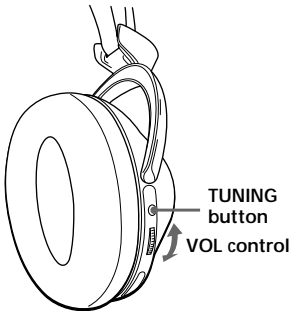

Try the above steps 3 and 5 until the receiving performance becomes better.

Sending RF signals from the Transmitter

The transmitter starts sending the RF signals automatically, when it detects audio signals from the equipment connected.

If it does not detect an audio signal for more than approximately four minutes, the transmitter will stop sending RF signals, and the power indicator turns off.


When the transmitter receives an audio signal again, it starts sending the RF signals, and the power indicator will light in red again.

If the audio signal is very weak, the transmitter does not send RF signals. If the transmitter is connected to a headphone jack, make sure the volume of the equipment connected is set to 5 – 6 or higher.

You may not hear the beginning of the sound from the headphones until the transmitter starts sending the RF signals after detecting an audio signal.

Auto power on/off function

When you remove the headphones from your head, the power turns off automatically. Do not allow the self adjusting band to be pulled up, otherwise the headphones will be switched on.

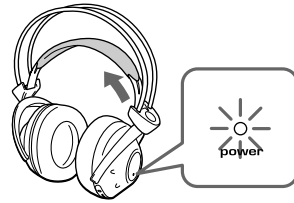

The power turns on.

Note

If a hissing noise is heard move closer to the transmitter.

The effective areas of the transmitter

The optimum distance is up to approximately 100 m without the system picking up some interference. However, the distance may vary according to the surroundings and environment. If the system picks up noise, reduce the distance between the transmitter unit and the headphones, or select the other channel.


Notes

- When you use the headphones inside the effective areas of the transmitter, the transmitter can be placed in any direction from the listener.
- Even within the signal reception area, there are some spots (dead spot) where the RF signal can not be received. This characteristics is inherent to RF signals, and does not indicate malfunction. By slightly moving the transmitter, location of the dead spot can be changed.


Replacing the ear pads

When the ear pads become dirty or damaged, you can get replacements from your Sony dealer. Replace them as illustrated below.

- 1** Remove the old ear pad by pulling it out of the groove on the housing.

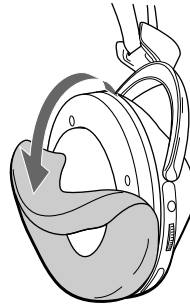

- 2** Place the new ear pad on the driver unit and insert the edge of the pad into the groove as illustrated.

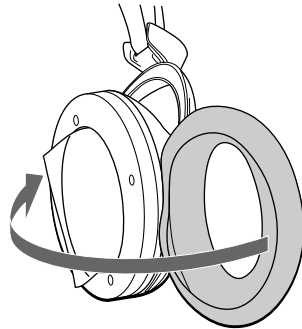

Make sure that the entire edge of the ear pad is securely inserted into the groove.

Troubleshooting

Precautions

- When the transmitter is not to be used for a long period of time, disconnect the AC power adaptor from the AC outlet holding the plug. Do not pull on the cord.
- Do not leave the wireless stereo headphone system in a location subject to direct sunlight, heat or moisture.

Notes on headphones

Preventing hearing damage

Avoid using headphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce the volume or discontinue use.

Caring for others


Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

If you have any questions or problems concerning the system that are not covered in this manual, please consult the nearest Sony dealer.

Be sure to bring the headphones and the transmitter to the Sony dealer when requiring repair work.

Disposing of the headphones

Be sure to remove the built-in rechargeable batteries from the headphones before you dispose of the headphones. First remove the left headphone's ear pad. You will see four screws. Remove the four screws and open the housing.

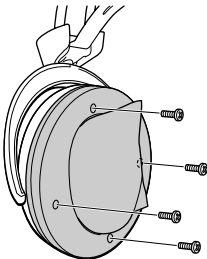

Problem	Solution
No sound/ Muffled sound	Check the connection of the audio/video equipment or the AC power adaptor. <hr/> Check that the audio/video equipment is turned on. <hr/> Turn up the volume on the connected audio/video equipment, if the transmitter is connected to a headphone jack. <hr/> Change the radio frequency with the CHANNEL selector on the transmitter, then press the TUNING button again. <hr/> The mute function is activated. Use the headphones near the transmitter. <hr/> The headphones' POWER indicator light is weak or turned off. <ul style="list-style-type: none">• Charge the built-in rechargeable battery or if the POWER indicator is still off after charging the built-in rechargeable battery, take the headphones to a Sony dealer for replacement of the rechargeable battery. <hr/> If you connect the transmitter to the LINE OUT or REC OUT jack of an audio reproducer, make sure that the NOISE FILTER switch is set to OFF. <hr/> Make sure that the NOISE FILTER switch is set to either ON or OFF (If the switch gets stuck between ON and OFF, the sound will be cut off).

Problem	Solution
Distortion	<p>If the transmitter is connected to a headphone jack, turn down the volume of the connected audio/video equipment.</p> <hr/> <p>Change the radio frequency with the CHANNEL selector on the transmitter.</p> <hr/> <p>The headphones' POWER indicator light is weak or turned off.</p> <ul style="list-style-type: none"> • Charge the built-in rechargeable battery or if the POWER indicator is still off after charging the built-in rechargeable battery, take the headphones to a Sony dealer for replacement of the rechargeable battery. <hr/> <p>If you connect the transmitter to LINE OUT or REC OUT jack of an audio reproducer, make sure that the NOISE FILTER switch is set to OFF.</p>
Loud background noise	<p>Move closer to the transmitter. As you move away from the transmitter, more noise is likely to be heard.</p> <hr/> <p>If the transmitter is connected to a headphone jack, turn up the volume of the connected audio/video equipment.</p> <hr/> <p>Change the radio frequency with the CHANNEL selector on the transmitter, then press the TUNING button again.</p> <hr/> <p>The headphones' POWER indicator light is weak or turned off.</p> <ul style="list-style-type: none"> • Charge the built-in rechargeable battery or if the POWER indicator is still off after charging the built-in rechargeable battery, take the headphones to a Sony dealer for replacement of the rechargeable battery. <hr/> <p>If you connect the transmitter to the LINE OUT or REC OUT jack of an audio reproducer, make sure that the NOISE FILTER switch is set to OFF.</p>

Specifications

General

Carrier frequency	863.5 – 864.5 MHz
Channel	Ch1, Ch2, Ch3
Modulation	FM stereo
Frequency response	18 – 22,000 Hz

Transmitter TMR-RF875R

Power source	DC 9 V: supplied AC power adaptor
Audio input	phono jacks/stereo mini jack
Dimensions	Approx. 130 × 135 × 150 mm (5 ¹ / ₄ × 5 ³ / ₈ × 6 in.) (w/h/d)
Mass	Approx. 200 g (7 oz.)

Headphones MDR-RF875R

Power source	DC 2.4 V: Built-in rechargeable battery
Mass	Approx. 350 g (12.3 oz.) incl. built-in rechargeable battery

Built-in Ni-MH rechargeable battery

Model name	NH-AAC
Voltage	1.2 V
Capacity	1,000 mAh

Optional accessory

Plug adaptor	PC-236HG (stereo mini jack ↔ monaural mini plug)
--------------	--

Design and specifications are subject to change without notice.



Svenska

Härmed intygar Sony Corp. att detta högtalarsystem står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG. Mer information finns på webbadressen: <http://www.compliance.sony.de/>

Den här produkten är avsedd att användas i följande länder.
Version CEK: Storbritannien
Version CED: Tyskland, Sverige, Danmark, Finland, Norge, Belgien, Schweiz, Österrike, Nederländerna, Frankrike

Produktens version framgår av streckkodsetiketten på lådans översida.

Dansk

Undertegnede, Sony Corp., erklærer herved, at følgende udstyr overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

Yderligere oplysninger findes på <http://www.compliance.sony.de/>

Dette produkt er beregnet til brug i følgende lande.

CEK-version: Storbritannien
CED-version: Tyskland, Sverige, Danmark, Finland, Norge, Belgien, Schweiz, Østrig, Holland, Frankrig.

Øverst på kassen findes en stregkode, hvor du kan se, hvilken version kassen indeholder.

Suomi

Sony Corp. vakuuttaa täten, että tämä laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Lisätietoja on seuraavassa Web-sivustossa:

<http://www.compliance.sony.de/>

Tämä tuote on tarkoitettu käytettäväksi seuraavassa maissa.

CEK-malli: Iso-Britannia
CED-malli: Saksa, Ruotsi, Tanska, Suomi, Norja, Belgia, Sveitsi, Itävalta, Alankomaat, Ranska

Näet version pakkausn yläosassa olevasta viivakooditarrasta.

Norsk

Herved erklærer Sony Corp. at dette utstyret er i overensstemmelse med vesentlige krav og andre relevante bestemmelser som fremgår av direktiv 1999/5/EC.

Gå til denne URL-en for mer informasjon:

<http://www.compliance.sony.de/>

Dette produktet er ment for bruk i følgende land:

CEK-versjon: Storbritannia
CED-versjon: Tyskland, Sverige, Danmark, Finland, Norge, Belgia, Sveits, Østerrike, Nederland, Frankrike

Du kan sjekke versjon ved å se på strekkode-etiketten på toppen av esken.

Ελληνικά

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Η Sony Corp. ΔΗΛΩΝΕΙ ΟΤΙ Η ΣΥΣΚΕΥΗ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.

Για περισσότερες λεπτομέρειες, παρακαλούμε να επισκεφθείτε την παρακάτω ηλεκτρονική διεύθυνση (URL): <http://www.compliance.sony.de/>

Αυτό το προϊόν προορίζεται για να χρησιμοποιηθεί στις παρακάτω χώρες.

Έκδοση CEK: Ηνωμένο Βασίλειο
Γερμανία, Σουηδία, Δανία, Φιλανδία, Νορβηγία, Βέλγιο, Ελβετία, Αυστρία, Ολλανδία, Γαλλία

Για να ελέγξετε την έκδοση, παρακαλούμε ανατρέξτε στην ετικέτα με τον κωδικό ραβδώσεων που βρίσκεται στο επάνω μέρος του κουτιού.

Français

Par la présente, Sony Corp. déclare que cet appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Pour de plus amples informations, veuillez vous reporter à l'URL suivante : <http://www.compliance.sony.de/>

Ce produit est conçu pour être utilisé dans les pays suivants.

Versions CEK : Royaume-Uni
Version CED : Allemagne, Suède, Danemark, Finlande, Norvège, Belgique, Suisse, Autriche, Pays-Bas, France

Pour connaître la version que vous utilisez, veuillez vous reporter au code barre situé sur la partie supérieure de la boîte.

Deutsch

Hiermit erklärt die Sony Corporation, dass sich dieses Gerät in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet. Erläuterungen dazu finden Sie unter folgendem URL: <http://www.compliance.sony.de/>

Dieses Gerät kann in folgenden Ländern verwendet werden.

Version CEK: Großbritannien
Version CED: Deutschland, Schweden, Dänemark, Finnland, Norwegen, Belgien, Schweiz, Österreich, Niederlande, Frankreich

Wenn Sie nachsehen wollen, um welche Version es sich bei Ihrem Modell handelt, schauen Sie bitte nach dem Strichcodeetikett oben auf dem Karton.

Español

Por medio de la presente, Sony Corp. declara que el equipo cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE. Para obtener más información, visite la dirección URL siguiente: <http://www.compliance.sony.de/>

Este producto está destinado a utilizarse en los siguientes países:

Versión CEK: Reino Unido
Versión CED: Alemania, Suecia, Dinamarca, Finlandia, Noruega, Bélgica, Suiza, Austria, Holanda, Francia

Para comprobar la versión, consulte la etiqueta del código de barras situada en la parte superior de la caja.

Nederlands

Hierbij verklaart Sony Corp. dat dit toestel in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Ga naar de volgende URL voor meer informatie:

<http://www.compliance.sony.de/>

Dit product is bestemd voor gebruik in de volgende landen:

CEK versie: Verenigd Koninkrijk
CED versie: Duitsland, Zweden, Denemarken, Finland, Noorwegen, België, Zwitserland, Oostenrijk, Nederland, Frankrijk

De versie vindt u op het barcode label boven op de doos.

Italiano

Con la presente Sony Corp. dichiara che questo apparecchio è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Per ulteriori informazioni, accedere al seguente indirizzo URL:

<http://www.compliance.sony.de/>

Il presente prodotto è destinato all'utilizzo nei paesi elencati di seguito.

Versione CEK: Regno Unito
Versione CED: Germania, Svezia, Danimarca, Finlandia, Norvegia, Belgio, Svizzera, Austria, Olanda, Francia

Per verificare la versione, fare riferimento all'etichetta con il codice a barre situata sulla parte superiore della scatola.

Português

A Sony Corp., declara que este equipamento está conforme com os requisitos essenciais e outras provisões da directiva 1999/5/CE. Para saber mais pormenores, aceda ao seguinte URL :

<http://www.compliance.sony.de/>

Este produto destina-se a ser utilizado nos seguintes países:

Versão CEK: Reino Unido
Versão CED: Alemanha, Suécia, Dinamarca, Finlândia, Noruega, Bélgica, Suíça, Áustria, Países Baixos, França

Para verificar a versão, consulte a etiqueta do código de barras localizada na parte de cima da caixa.

<http://www.sony.net/>

Printed in Korea