

FM Stereo/AM Headphone Radio

Operating Instructions



"WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products.

WALKMAN is a registered trademark of Sony Corporation.

FM/AM WALKMAN
SRF-H11

© 2003 Sony Corporation Printed in China

<http://www.sony.net/>

For customers who purchased this product in the USA

Please register this product on line at <http://www.sony.com/productregistration>. Proper registration will enable us to send you periodic mailings about new products, services, and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or modification. Thank you.

WARNING

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Before You Begin

Thank you for choosing the Sony radio! It will give you many hours of reliable service and listening pleasure.

Before operating the radio, please read these instructions thoroughly and retain them for future reference.

Features

- Designed for hands free use.
- Water-resistant body for all weathers operation.
- Light reflector to reflect car lights at night for your safety.
- MEGA BASS for dynamic bass sound system.
- DX/LOCAL selector for better reception.

Precautions

- Operate the unit only on 1.5 V DC with one size AAA (R03) battery.
- Avoid exposure to temperature extremes, direct sunlight, moisture, sand, dust, or mechanical shock. Never leave in a car parked under the sun.
- Should solid object or liquid fall into the unit, remove the battery, and have the unit checked by a qualified personnel before operating it any further.
- In vehicles or buildings, radio reception may be difficult or noisy. Try listening near a window.
- To clean the casing, use a soft cloth dampened with a mild detergent solution.

Notes on Headphones

Road safety

Do not use headphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in many areas. It can also be potentially dangerous to play your headphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Avoid using headphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to people around you.

Warning

If there is lightning when you are using the unit, take off the headphone radio immediately.

Cautions on Water-resistance

This unit is designed so that it can be used with slight exposure to rain, snow and other forms of moisture, but there are several points on which caution should be observed.

- Do not allow it to come in contact with large amounts of water.
- Do not immerse it in water.
- If water should get on it or if it should fall into water, take it out immediately and wipe it off with a dry cloth. The interior of the battery compartment has no water-resistance. The battery may corrode, so wipe out the interior of the battery compartment as follows.
 - Open or close the battery compartment with dry hands in a place without exposure to any water.
 - Wipe off the battery and the inside of the battery compartment. Give special attention to the contacts so that no water remains on them.

If you have any questions or problems concerning your unit, please consult the nearest Sony dealer.

Specifications

Frequency range:

FM: 87.5 – 108 MHz

AM: 530 – 1 710 kHz

Power output:

6 mW + 6 mW (at 10% harmonic distortion)

Headphone type:

Dynamic

Power requirements:

1.5 V DC, one size AAA (R03) battery

Mass:

Approx. 115 g (4 oz) incl. a battery

Design and specifications are subject to change without notice.

SONY®

Portable Audio

LIMITED WARRANTY (U.S. Only)

Sony Electronics Inc. ("Sony") warrants this product against defects in material or workmanship for the time periods and as set forth below. Pursuant to this Limited Warranty, Sony will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. For purposes of this Limited Warranty, "refurbished" means a product or part that has been returned to its original specifications. **In the event of a defect, these are your exclusive remedies.**

Term: For a period of one (1) year from the original date of purchase of the product, Sony will, at its option, repair or replace with new or refurbished product or parts, any product or parts determined to be defective.

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; any such software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. Please refer to the End User License Agreements included with the Product for your rights and obligations with respect to the software.

Instructions: To obtain warranty service, you must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the Sony authorized service facility specified. **It is your responsibility to backup any data, software or other materials you may have stored or preserved on your unit. It is likely that such data, software, or other materials will be lost or reformatted during service and Sony will not be responsible for any such damage or loss.** A dated purchase receipt is required. For specific instructions on how to obtain warranty service for your product,

The Address of the Laredo Fulfillment Center is:

Laredo Fulfillment Center
10227 Crossroads Loop Suite B
Laredo, TX 78045

Visit Sony's Web Site:
www.sony.com/service

Or call the **Sony Customer Information Service Center**
1-800-222-SONY (7669)

For an accessory or part not available from your authorized dealer, call:

1-800-488-SONY (7669)


Repair / Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of Sony.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reason, including but not limited to product issues due to commercial use, acts of God, misuse, limitations of technology, or modification of or to any part of the Sony product. This Limited Warranty does not cover Sony products sold AS IS or WITH ALL FAULTS or consumables (such as fuses or batteries). This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product. This Limited Warranty is valid only in the United States.

LIMITATION ON DAMAGES: SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.

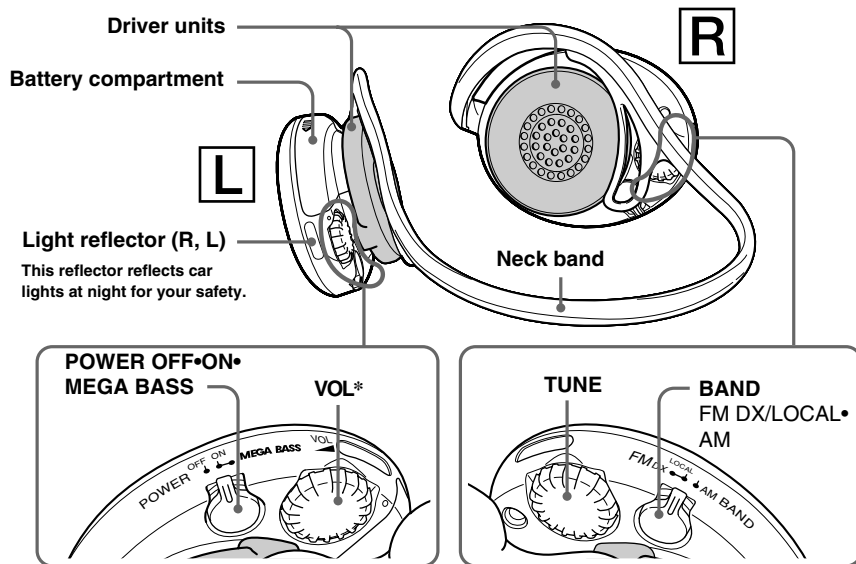

* There is a tactile dot beside volume to show the direction tune up the volume.

Installing the Battery (See Fig. A)

- 1 Open the battery compartment lid and install one size AAA (R03) battery (not supplied) with correct polarity.
- 2 Close the lid.

When to replace the battery

Replace the battery when the sound becomes weak or distorted. Remove the old battery and insert a new one.

Battery life (Approx. hours) (JEITA*)

When using	FM	AM
Sony alkaline size AAA (LR03)	42	54
Sony size AAA (R03)	18	23

* Measured by JEITA (Japan Electronics and Information Technology Industries Association) standards. The actual battery life may vary depending on the circumstance of the unit.

Notes on battery

- Do not charge the dry battery.
- Do not carry the dry battery together with coins or other metallic objects. It can generate heat if the positive and negative terminals of the battery are accidentally come into contact with metallic objects.
- When you are not going to use the unit for a long time, remove the battery to avoid damage from battery leakage and corrosion.

To attach the battery compartment lid if it is accidentally detached (See Fig. B)

- 1 Engage the catch of the lower half of the unit in the hole of the lid.
- 2 Press the lid into the unit and downwards to lock it.

Wearing the Radio (See Fig. C)

- 1 Wear the neckband around the back of your head.
- 2 Wear the headphones with your left ear between the Driver unit (marked **L** on the outside) and the neckband, and your right ear between the Driver unit (marked **R** on the outside) and the neckband.
- 3 Adjust the angle of the neckband to fit the headphones on your ears.

Improving Radio Reception

FM: Set **BAND** to **LOCAL** if interference is prevalent and reception is too strong. Under normal conditions, set it to **DX**.

AM: Move around to obtain better reception.

Playing the Radio

- 1 Set **POWER** to **ON**.
- 2 Set **BAND** to select **FM** or **AM**.
The neckband serves as an FM antenna.
- 3 Turn **TUNE** to tune in to a station.
- 4 Adjust **VOL** (volume).

To turn off the radio, set **POWER** to **OFF**.

To obtain powerful bass sound

Set **POWER** to **MEGA BASS**.
The "MEGA BASS" system produces a powerful bass sound.
When the sound becomes distorted, switch **POWER** to **ON**.

