

FM/AM Portable CD Player

Operating Instructions 使用说明书



 
D-FJ211

Sony Corporation ©2003

http://www.sony.net/


“WALKMAN” is a registered trademark of Sony Corporation to represent Headphone Stereo products. WALKMAN is a trademark of Sony Corporation.

CD player (front)/CD 播放机 (正面)

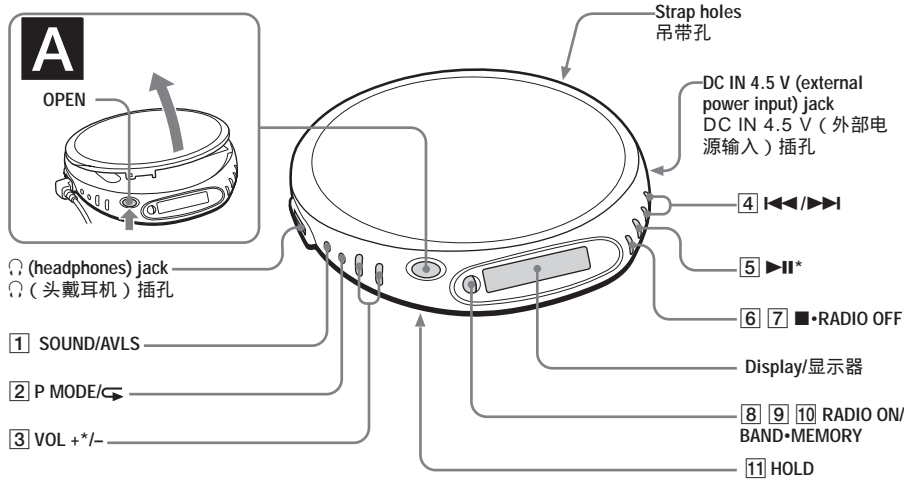


*The button has a tactile dot.
* 按键带有触感圆点。

 
CD player (inside)/CD 播放机 (里面)

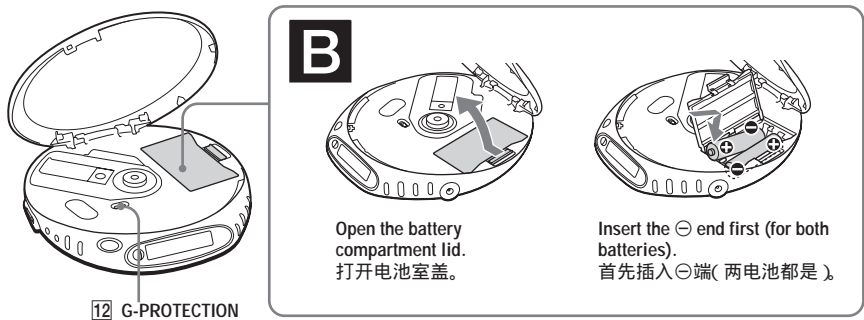


Display/显示器

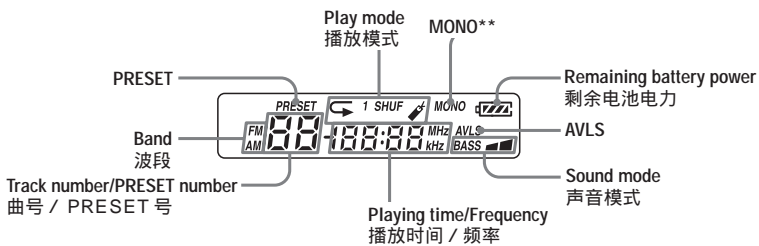 


C

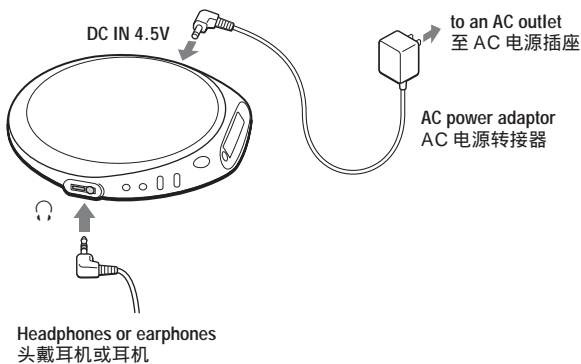 

D

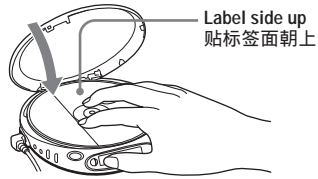 

E

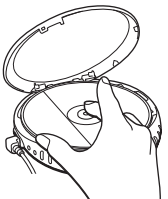 

English

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

CAUTION

- INVISIBLE LASER RADIATION WHEN OPEN
- DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENT

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Power Sources

To use the AC power adaptor (C)

- 1 Connect the AC power adaptor to an AC outlet.

To use the batteries (B)

Use only the following batteries for your CD player:

Dry batteries

- LR6 (size AA) alkaline batteries

To insert the batteries

- 1 Open the battery compartment lid inside your CD player.
- 2 Insert two batteries by matching the ⊕ to the diagram in the battery compartment and close the lid until it clicks into place.

Battery life* (approx. hours)

(When the CD player is used on a flat and stable place.)
Playing time varies depending on how the CD player is used.

	G-PROTECTION ON	OFF	RADIO ON
Two Sony alkaline batteries LR6 (SG) (produced in Japan)	40	36	70

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association).

To check the remaining power of the batteries

You can check it in the display.
Replace the batteries when "Lo batt*" flashes.



→ Lo batt*

*Beep sounds.

Notes

- The indicator sections of the battery level indicator roughly shows the remaining battery power. One section does not always indicate one-fourth of the battery power.
- Depending on operating conditions, the indicator sections of the battery level indicator may increase or decrease.

Notes on using the dry batteries

- Be sure to remove the AC power adaptor.
- When the batteries are depleted, replace both batteries with new ones.

Playing a CD

To insert a CD

- 1 Press OPEN to open the lid (A).
- 2 Fit the CD to the pivot, then close the lid (D).

Notes

- This CD player can play CD-Rs/CD-RWs recorded in the Compact Disc Digital Audio (Audio CD) format, but playback capability may vary depending on the quality of the disc and the condition of the recording device.

This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

To operate the CD player

Button/Switch Function/Operation

- 1 SOUND/AVLS*1 • Use to emphasize the bass-boosted sound. Press repeatedly to select BASS or BASS. BASS enhances more than BASS.*2
- 2 P MODE/◀ For CD player: Press repeatedly until the play mode you want appears in the display. No indication: Normal play "1": Single track play "SHUF": Shuffle play "•": Bookmark track play To repeat the play mode you selected, press and hold until "◀" appears. For radio: Press to switch the tuning mode and the preset mode.
- 3 VOL+/- Press to adjust the volume.
- 4 ◀▶/AMS*3/search For CD player: Press ◀ or ▶ once to find the beginning of the current/next track. Press ◀ or ▶ repeatedly to find the beginning of the previous/succeeding tracks. Press and hold ◀ or ▶ to go backward/forward quickly. For radio: Press to tune in the station you want. Also press to select the preset station you want.
- 5 ▶⏸ (play/pause) Press to start play. Press again to pause play. To play from the first track, press for 2 seconds or more while the CD player is stopped.
- 6 ■ (stop) Press to stop playing.
- 7 RADIO OFF Press to turn off the radio.
- 8 RADIO ON Press to turn on the radio.
- 9 BAND Press to change the band.
- 10 MEMORY Press and hold to enter the preset mode. Also press to store the station in memory.
- 11 HOLD Use to lock the controls to prevent accidental button presses.
- 12 G-PROTECTION Set it to ON to protect against sound skipping.*4

For CD player: Press repeatedly until the play mode you want appears in the display. No indication: Normal play "1": Single track play "SHUF": Shuffle play "•": Bookmark track play To repeat the play mode you selected, press and hold until "◀" appears. For radio: Press to switch the tuning mode and the preset mode.

Press to adjust the volume.

For CD player: Press ◀ or ▶ once to find the beginning of the current/next track.

Press ◀ or ▶ repeatedly to find the beginning of the previous/succeeding tracks. Press and hold ◀ or ▶ to go backward/forward quickly. For radio: Press to tune in the station you want. Also press to select the preset station you want.

Press to start play. Press again to pause play. To play from the first track, press for 2 seconds or more while the CD player is stopped.

Press to stop playing.

Press to turn off the radio.

Press to turn on the radio.

Press to change the band.

Press and hold to enter the preset mode. Also press to store the station in memory.

Use to lock the controls to prevent accidental button presses.

Set it to ON to protect against sound skipping.*4

- *1 AVLS = Automatic Volume Limiter System
- *2 If the sound is distorted when using the SOUND function, turn down the volume.
- *3 AMS = Automatic Music Sensor
- *4 Sound may skip:
 - if the CD player receives stronger continuous shock than expected,
 - if a dirty or scratched CD is played or
 - when using poor-quality CD-Rs/CD-RWs or if there is a problem with the recording device or application software.

To remove the CD

Remove the CD while pressing the pivot (E).

(Continue to the reverse side)

中文

警告

为防火灾或触电危险，切勿让机器暴露于雨中或潮湿处。

别把机器安装在诸如书橱或壁橱等密闭处。

为防火灾，请勿让装置的通风孔盖住报纸，桌布，窗帘等。也不可在装置上点放蜡烛。

为防火灾或触电危险，不可在装置上摆设花瓶等装满液体的物体。

一部分国家对于本产品的电源用电池可能规定有处置的标准。请咨询当地有关当局。

注意

- 开着时，将有看不见的激光辐射
- 别凝视激光束或直接用光学仪器观看

CE 标志的有效性，仅限于那些有法律限制的国家，主要在 EEA (欧洲经济区) 国家。

连接电源

使用 AC 电源转接器 (C)

- 1 将 AC 电源转接器连接到 AC 电源插座。

使用电池 (B)

本 CD 播放机限使用下列电池：

干电池

- LR6 (AA, 5号) 碱性电池

插入电池

- 1 打开 CD 播放机里面的电池室盖。
- 2 装入 2 个电池使 ⊕ 对准电池室中的图示，然后关上盖子至卡搭定位。

电池使用时间* (大约时数)

(在平稳表面使用 CD 播放机时)
播放时间因 CD 播放机的使用状况而异。

	G-PROTECTION ON	OFF	RADIO ON
两 Sony 碱性电池 LR6 (SG) (日本制)	40	36	70

* JEITA (Japan Electronics and Information Technology Industries Association) (日本电子和信息技术产业协会) 的标准测值。

检查电池剩余电力

可以在显示器上检查。
当 "Lo batt*" 闪烁时请更换电池。



→ Lo batt*

* 哔声。

注

- 的指示段落指示剩余电池电力。其一个段落不一定正确代表电池电力的四分之一。
- 根据操作条件，的指示段落的使用时间可能增加或减少。

使用干电池的注意事项

- 务必卸下 AC 电源转接器。
- 当电池用完时，同时更换两节新电池。

播放 CD

插入 CD

- 1 滑动 OPEN 打开顶盖 (A)。
- 2 把 CD 接入中心轴，然后盖上顶盖 (D)。

注

- 本 CD 播放机可以播放以激光光盘数码音频 (音频 CD) 格式录制的 CD-R/CD-RW。但播放能力取决于光盘质量和录音设备的状况。
- 本产品设计用于播放符合 Compact Disc (CD) 标准的光盘。近来，许多录制公司都出售各种用版权保护技术编码的音乐光盘。请注意，这些光盘中可能会有不符合 CD 标准的光盘，且可能无法用本产品播放。

操作 CD 播放机

按钮 / 开关

功能 / 操作

- 1 SOUND/AVLS*1 • 用来加强低音。反复按此钮以选择 BASS 或 BASS。BASS 的作用强于 BASS。*2
- 2 P MODE/◀ 对于 CD 唱机：反复按直到所要的播放模式出现在显示器上。无显示：正常播放 "1"：单首曲子播放 "SHUF"：随机播放 "•"：书签轨迹播放 要重现选定的播放模式，按住此钮直到 "◀" 出现。对于收音机：按此按钮切换调谐模式和预设模式。
- 3 VOL+/- 按此钮调节音量。
- 4 ◀▶/AMS*3 / 搜索 对于 CD 唱机：朝 ◀ 或 ▶ 按此钮一次查找当前 / 下一曲子的开头。反复按 ◀ 或 ▶ 查找前面 / 后面的曲子的开头。按住 ◀ 或 ▶ 快速 / 快速。对于收音机：按此按钮调入所要的电台。也可按此按钮选择所要的预设电台。
- 5 ▶⏸ (播放 / 暂停) 按此钮开始播放。再按一次暂停播放。要从第一个曲子开始播放，当 CD 播放机停止时，按住此钮 2 秒以上。
- 6 ■ (停止) 按此钮停止播放。
- 7 RADIO OFF 按此按钮关闭收音机。
- 8 RADIO ON 按此按钮打开收音机。
- 9 BAND 按此按钮改变波段。
- 10 MEMORY 按住此按钮进入预设模式。按此按钮也可在存储器中保存电台。
- 11 HOLD 用于锁定控制钮以防止意外按动。
- 12 G-PROTECTION 设为 ON 以防声音跳跃。*4

对于 CD 唱机：反复按直到所要的播放模式出现在显示器上。无显示：正常播放 "1"：单首曲子播放 "SHUF"：随机播放 "•"：书签轨迹播放 要重现选定的播放模式，按住此钮直到 "◀" 出现。对于收音机：按此按钮切换调谐模式和预设模式。

按此钮调节音量。

对于 CD 唱机：朝 ◀ 或 ▶ 按此钮一次查找当前 / 下一曲子的开头。反复按 ◀ 或 ▶ 查找前面 / 后面的曲子的开头。按住 ◀ 或 ▶ 快速 / 快速。对于收音机：按此按钮调入所要的电台。也可按此按钮选择所要的预设电台。

按此钮开始播放。再按一次暂停播放。要从第一个曲子开始播放，当 CD 播放机停止时，按住此钮 2 秒以上。

按此钮停止播放。按此按钮关闭收音机。按此按钮打开收音机。按此按钮改变波段。

按住此按钮进入预设模式。按此按钮也可在存储器中保存电台。用于锁定控制钮以防止意外按动。设为 ON 以防声音跳跃。*4

- *1 AVLS= 自动音量控制系统
- *2 当使用 SOUND 功能时，如果声音失真，请降低音量。
- *3 AMS= 自动音乐传感器
- *4 声音可能跳动：
 - 如果 CD 播放机受到比预计更强的连续震动，
 - 如果播放脏的或划伤的 CD 或
 - 当使用低劣的 CD-R/CD-RW 时或录制设备或应用软件有问题。

要取出 CD

- 按住中心轴，取下 CD (E)。

(续背面)

English

To turn off the operation beep sound

You can turn off the beep sound that is heard from your headphones/earphones when you operate your CD player.

- Remove the power source (AC power adaptor, dry batteries) from the CD player.
- Connect the power source while pressing ■.

To turn on the beep sound

Remove the power source and then connect the power source without pressing ■.

Playing your favorite tracks by adding Bookmarks (Bookmark track play)

You can add Bookmarks to up to 99 tracks for each CD. You can use this function for up to 5 CDs.

To add Bookmarks

- During playback of the track where you want to add a Bookmark, press and hold ▶|| until “🚩 (Bookmark)” flashes in the display. When the Bookmark has been added successfully, flashing of “🚩” becomes slow.
- Repeat step 1 to add Bookmarks to the tracks you want.

To listen to the tracks with Bookmarks

- Press P MODE/🔊 repeatedly until “🚩” flashes.
- Press ▶||. “🚩” lights up in the display and the playback of the tracks with Bookmarks starts.

To remove the Bookmarks

During playback of the track with a Bookmark, press and hold ▶|| until “🚩” disappears from the display.

To check the tracks with Bookmarks

During playback of the tracks with Bookmarks, “🚩” keeps flashing slowly in the display.

Notes

- During playback of the tracks with Bookmarks, tracks are played in order of track number, and not in the order you added the Bookmarks.
- If you try to add Bookmarks to the tracks on the 6th CD, the Bookmarks of the CD you played back first will be erased.
- If you remove all power sources, all Bookmarks stored in memory will be erased.

Listening to the radio

- Press RADIO ON to turn on the radio.
- Press BAND until the band you want appears.

Each time you press the button, the display changes as follows:

◀ FM → AM ▶

- Press ◀◀ or ▶▶ to tune in the station you want and adjust the volume.

Tuning mode and Preset mode

To switch the tuning mode and the preset mode, use P MODE/🔊.

When the preset number appears in the display, the CD player is in the preset mode and you can use ◀◀/▶▶ to select the preset number.

To enter the tuning mode, press P MODE/🔊 to make the preset number disappear from the display. Use ◀◀/▶▶ to tune in the station.

To turn off the radio

 
Press ■•RADIO OFF.

To tune in the station quickly


Press and hold ◀◀ or ▶▶ in step 3 until the frequency digits begin to change in the display. The CD player automatically scans the radio frequencies and stops when it finds a clear station.

To improve broadcast reception

For FM, extend the headphones cord.

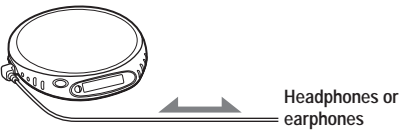

For AM, reorient the CD player itself.

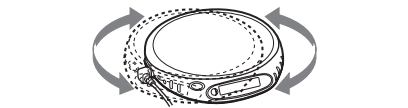 

Note

Keep the headphones connected to the 🔌 jack of the CD player. The headphones cord works as the FM antenna.

If it is hard to hear the FM broadcast

Press and hold P MODE/🔊 until “MONO” appears in the display.

The noise will be reduced but the radio will play in monaural.

When listening to the radio on batteries

If you connect the external power source plug to the DC IN 4.5 V jack of your CD player, the CD player will turn off. Turn it on by pressing RADIO ON to continue listening to it.

Presetting radio stations

You can preset up to 40 stations: 30 for FM and 10 for AM.

- Press RADIO ON to turn on the radio.
- Press BAND to select the band.
- Press ◀◀ or ▶▶ to tune in the station you want.
- Hold down MEMORY until “PRESET” flashes in the display.

From this step on, start the next operation within 30 seconds after you finished the previous operation. If 30 seconds pass with nothing done, “PRESET” stops flashing which shows that the CD player has exited the PRESET MEMORY standby mode. If this happens, start from step 4 again.

- Press ◀◀ or ▶▶ repeatedly to select the preset number you want to store the station on while “PRESET” flashes.
- Press MEMORY.

When the station is preset successfully, the beep sounds and “PRESET” stops flashing in the display. The new station replaces the old one.

To preset another station, press PLAY MODE/🔊 and repeat steps 2 to 6.

To exit the PRESET MEMORY standby mode

When the radio is turned on, you can exit the PRESET MEMORY standby mode using one of the following procedures.
Preset stations, however, will remain stored in the CD player’s memory.

- Press and hold MEMORY until “PRESET” stops flashing.
- Do not press any button for 30 seconds. “PRESET” stops flashing.
- Press ■•RADIO OFF. The radio turns off.

To cancel all preset stations

- Disconnect the power source (alkaline batteries, AC power adaptor).
- While you press and hold down MEMORY, insert alkaline batteries or connect the AC power adaptor again. The indications in the display keep flashing until all preset stations are cleared, then stop flashing and disappear from the display.

 
Playing preset radio stations

- Press BAND to select the band.
- Switch your CD player to the preset mode*, then press ◀◀ or ▶▶ to tune in a stored station.

*For details, refer to “Tuning mode and Preset mode.”

9 kHz area: Asia and Europe

10 kHz area: the U.S.A., Canada and South America

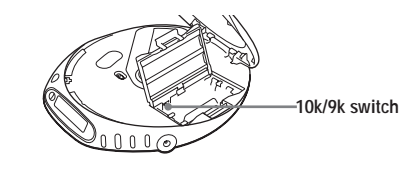

Notes

- The interval will not change until you once turn off the radio and then turn it on again.
- After changing the tuning interval, you need to preset radio stations again.

Precautions

On safety


- Should any solid objects or liquid fall into the CD player, unplug it and have it checked by qualified personnel before operating it any further.
- Do not put any foreign objects in the DC IN 4.5 V (external power input) jack.

On power sources

- When you are not using the CD player for a long time, disconnect all power sources from the CD player.

On AC power adaptor

- Use only the AC power adaptor supplied. If your CD player is not supplied with it, use the AC-E45HG AC power adaptor. Do not use any other AC power adaptor. It may cause a malfunction.

Polarity of the plug	
-----------------------------	---

- Do not touch the AC power adaptor with wet hands.
- Connect the AC power adaptor to an easily accessible AC outlet. Should you notice an abnormality in the AC power adaptor, disconnect it from the AC outlet immediately.

On dry batteries

- Do not throw the batteries into fire.
- Do not carry the batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the battery are accidentally contacted by a metallic object.
- Do not mix new batteries with old ones.
- Do not use different types of batteries together.
- When the batteries are not to be used for a long time, remove them.
- If battery leakage occurs, wipe off any deposit in the battery compartment, and install new batteries. In case the deposit adheres to you, wash it off thoroughly.

On the CD player

- Keep the lens on the CD player clean and do not touch it. If you do so, the lens may be damaged and the CD player will not operate properly.
- Do not put any heavy object on top of the CD player. The CD player and the CD may be damaged.
- Do not leave the CD player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unlevelled surface, or in a car with its windows closed.
- If the CD player causes interference to the radio or television reception, turn off the CD player or move it away from the radio or television.
- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this CD player. Attempting to do so may damage the CD player. Do not use such discs.

On headphones/earphones

Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Avoid using headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Consideration for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Maintenance

To clean the casing

Use a soft cloth slightly moistened in water or a mild detergent solution. Do not use alcohol, benzine or thinner.

To clean the plugs

If the plugs become dirty, there is no audio or noise is heard. Clean them with a dry soft cloth periodically.

Troubleshooting

Should any problem persist after you have made these checks, consult your nearest Sony dealer.

“Hold” appears in the display when you press a button, and the CD does not play.

 
→The buttons are locked. Slide HOLD back.

The volume does not increase even if you press VOL + repeatedly.

→Press and hold SOUND until “AVLS” disappears from the display.

The battery compartment lid is detached by an accidental drop, excessive force, etc.

→Attach it as illustrated below.

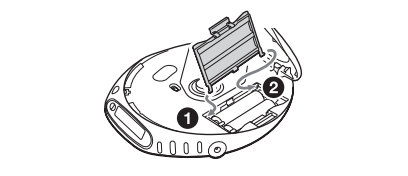

Specifications

System
Compact disc digital audio system
Laser diode properties
Material: GaAlAs
Wavelength: λ = 780 nm
Emission duration: Continuous
Laser output: Less than 44.6 μW (This output is the value measured at a distance of 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)
Frequency range (10k/9k switch)
• 9 kHz step: <p>FM: 87.5 - 108.0 MHz</p> <p>AM: 531 - 1 602 kHz</p>
• 10 kHz step: <p>FM: 87.5 - 108.0 MHz</p> <p>AM: 530 - 1 710 kHz</p>

Power requirements

For the area code of the model you purchased, check the upper left side of the bar code on the package.

- Two LR6 (size AA) batteries: 1.5 V × 2 DC
- AC power adaptor (DC IN 4.5 V jack):

U, U2, CA, CA2, E92, MX2, TW2 and CA2/C models: 120 V, 60 Hz

CED, CED/4, CE7, CE7/C, EE, EE1, E, E13 and E13/2 models: 220 - 230 V, 50/60 Hz

CEK model: 230 V, 50 Hz

AU2 model: 240 V, 50 Hz

EU8, EU8/C, JE.W, E18, KR4 and EE8 models: 100 - 240 V, 50/60 Hz

HK4 model: 230 V, 50 Hz

CNA model: 220 V, 50 Hz

Dimensions (w/h/d) (without projecting parts and controls)

Approx. 136 × 26 × 150 mm (5 ¾ × 1 ⅛ × 6 in.)

Mass (excluding accessories)

Approx. 205 g (7.3 oz)

Operating temperature

5°C - 35°C (41°F - 95°F)

Design and specifications are subject to change without notice.

Supplied Accessories

AC power adaptor (1)

Headphones/earphones (1)

中文

关掉操作哔声
可以关掉当操作 CD 播放机时在头戴耳机 / 耳机上可听到的哔声。
<ol style="list-style-type: none">从 CD 播放机上卸下电源（AC 电源转接器，干电池）。 按着 ■ 同时连接上电源。
要打开哔声时
卸下电源，然后不必按 ■ 而再连接上电源。

给喜欢的曲子加记 Bookmark 以便选播（播放加记书签曲子）

每张 CD 最多能给 99 首曲子加记书签。最多能为 5 张 CD 使用此功能。

要加记 Bookmark 时

- 播放曲子当中，在所要加记书签处按住 ▶|| 至显示器中闪烁着 “🚩 (Bookmark)” 。当成功地加记完书签时，“🚩” 闪烁即变慢。
- 反复步骤 1 给所有喜欢的曲子加记书签。

要利用 Bookmark 听曲子时

- 请反复按 P MODE/🔊 至闪烁着 “🚩” 。
- 按 ▶||。显示器中那点亮 “🚩” 而开始播放带有 Bookmark（书签）的曲子。

要去除 Bookmark 时

请在播放带有 Bookmark（书签）的曲子当中，按住 ▶|| 至显示器中的 “🚩” 消失了显示。

要检查带有 Bookmark 的曲子时

在播放带有 Bookmark（书签）的曲子当中，显示器中的 “🚩” 将闪烁得较慢。

注

- 在播放带有 Bookmark（书签）的曲子时，是以曲号顺序播放曲子的，而不是以您加记书签的顺序播放的。
- 您如果试图给第 6 张 CD 加记书签，则第 1 张播放的 CD 其所加记的书签，即被擦去。
- 您如果拆开了所有的电源，则储存在存储器中的所有 Bookmark 都将被擦去。

听收音机

- 按 RADIO ON 打开收音机。
- 按 BAND 直到所要的波段出现。每次按此按钮，显示变化如下：◀ FM → AM ▶
- 按 ◀◀ 或 ▶▶ 调入所要的电台并调节音量。

调谐模式和预设模式

要切换调谐模式和预设模式，请使用 P MODE/🔊。

当预设号出现在显示屏上时，CD唱机处于预设模式，可以使用 ◀◀/▶▶ 选择预设号。

要进入调谐模式，按 P MODE/🔊 使预设号从显示屏上消失。使用 ◀◀/▶▶ 调入电台。

要关闭收音机

 
按 ■•RADIO OFF。

要迅速调入电台时


在第 3 步按住 ◀◀ 或 ▶▶ 直到频率数开始在显示屏中变化。CD唱机即自动扫描无线电广播频率，当找到声音清晰的电台时，即停止扫描。

要改善广播接收状况时

听 FM 时，可展开头戴耳机导线。

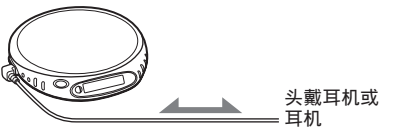

听 AM 时，可调整 CD 唱机本身的方位。

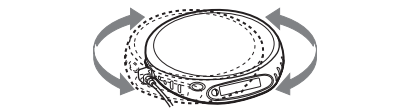 

注

应使头戴耳机保持连接在 CD 唱机的 🔌 插孔上。因为头戴耳机导线也当作 FM 天线使用。

如果不能清楚收听 FM 广播

按住 P MODE/🔊 直到 “MONO” 出现在显示屏上。

噪音可减轻，但只能收听单声道。

当用电池作电源收听收音机时

如果把外接电源插头连到 CD 唱机的 DC IN 4.5 V 插孔，CD 唱机的电源将关闭。此时，可按 RADIO ON 打开电源继续收听。

预设电台

最多可预设 40 个电台：其中 FM 30 个，AM 10 个。

- 按 RADIO ON 打开收音机。
- 按 BAND 选择波段。
- 按 ◀◀ 或 ▶▶ 调入所要的电台。
- 按住 MEMORY 直到 “PRESET” 在显示屏上闪烁。从这一步开始，要在完成上一步操作后的 30 秒内开始下一步操作。如果 3 0 秒过后还没有动作，“PRESET” 停止闪烁，表示 CD 唱机已退出 PRESET MEMORY 待机模式。此时，请从第 4 步再次开始。
- 当 “PRESET” 闪烁时，反复按 ◀◀ 或 ▶▶ 以选择要存储电台的预设号。
- 按 MEMORY。当成功预设了电台时，便听到哔声；PRESET 在显示屏上停止闪烁。新电台取代旧电台。要预设另一个电台，按 PLAY MODE/🔊 并重复第 2 到第 6 步。

要退出 PRESET MEMORY 待机模式

当收音机打开时，可以使用下列步骤之一退出 PRESET MEMORY 待机模式。但是，预设的电台仍存储在 CD 唱机的存储器上。

- 按住 MEMORY 直到 “PRESET” 停止闪烁。
- 30 秒内不要按任何按钮，“PRESET” 停止闪烁。
- 按 ■•RADIO OFF。收音机关闭。

要取消所有预设电台时

- 断开电源（碱性电池、AC 交流电转换器）。
- 当按住 MEMORY 时，再次插入碱性电池或连上 AC 交流电转换器。

 
显示屏中的指示保持闪烁直到所有预设电台被清除，然后停止闪烁并从显示屏中消失。

播放预设电台

- 按 BAND 选择波段。
- 把 CD 唱机切换到预设模式*，然后按 ◀◀ 或 ▶▶ 调入存储的电台。* 详情，请参看“调谐模式和预设模式”。

改变调谐间隔

在国外使用本 CD 唱机时，或许要改变 AM 调谐间隔。如有必要，使用尖头工具把 10k/9k 开关（在电池舱里）设为“9 kHz”或“10 kHz”。

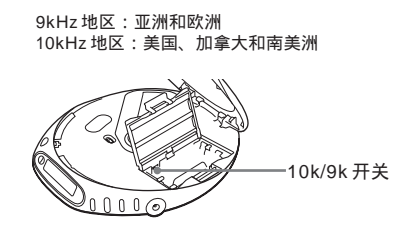

注

- 直到关掉收音机并再次打开，调谐间隔才会改变。
- 改变调谐间隔后，需要再次预设电台。

使用前须注意

安全须知

 
- 万一有任何异物或液体掉进 CD 播放机内时，即请立刻卸下电源并找有资格的人检查过以后才可再操作使用。
- 别试图用任何物体塞入 DC IN 4.5 V（外部电源输入）插孔。

电源须知

- 当长期不使用 CD 播放机时，请卸下所有的电源。

AC 电源转接器须知

- 限使用附带的 AC 电源转接器。如果 CD 播放机没有附带 AC 电源转接器，使用 AC-E45HG AC 电源转接器。请别使用任何其他 AC 电源转接器。因为可能造成故障。

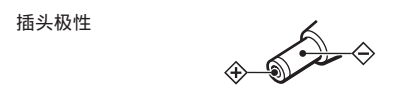

- 潮湿着手不要去碰 AC 电源转接器。
- 将 AC 电源转接器接插到方便的 AC 电源插座。万一发现 AC 电源转接器有异常时，请立即从 AC 电源插座上拔下 AC 电源转接器。

干电池须知

- 别把电池投入火中。
- 电池不要和硬币等别的金属小件混在一起携带。因为电池的+、- 极若与金属件接触，将会生热造成危险。
- 别混用新、旧电池。
- 别混用不同类型的电池。
- 长时间不用电池时，请把它卸下保存。
- 电池发生漏液时 须即擦拭干净电池室里沾染的电解液，然后装用新电池。万一皮肤上沾染了漏液时，必须赶快洗净。

CD 播放机须知

- 须保持 CD 播放机上的透镜干净清洁，不要用手触摸。否则，透镜可能受损而 CD 播放机将不能操作正常。
- 别在 CD 播放机上堆置重物以免压坏 CD 播放机或 CD 光盘。
- 别把 CD 播放机放置靠近热源或可直接照射到阳光，或多沙尘、潮湿、淋到雨、有机械冲击、不平坦的地方，或紧闭着窗门的汽车里面。
- 如果 CD 播放机给附近的收音机或电视接收造成干扰，即请关掉 CD 播放机或把它移离开收音机或电视机远些使用。
- 本 CD 播放机不能用于播放不规则形（例如心形，方形，星形）的光盘。若试图那样做，将可能损坏您的 CD 播放机。切勿使用该类光盘。

头戴耳机 / 耳机须知

路上安全

开车、骑车、或在操作任何机动车辆时，请勿使用头戴耳机 / 耳机。因为可能有造成交通事故的危险。有些地区是禁止使用的。步行中如果用太大声耳机也会有潜在危险的，尤其是在横过马路时。在有潜在危险的地方，必须特别注意或暂停使用。

防止损伤听觉

避免用大音量听头戴耳机 / 耳机。最好也不要长时间连续使用。如有耳鸣经历，更应降低音量和避免连续用耳机听。

顾虑他人

请用适当的音量听。如此则仍可听到周围的声音并且不至于骚扰到旁边的人。

保养

清洁机壳

用清水或温和的洗涤剂溶液蘸湿软布擦拭清洁，不可使用酒精、汽油或稀釋剂。

清洁端子