SONY



遥控器 Remote commander

制造商:索尼(中国)有限公司

地 址:北京市朝阳区太阳宫中路12号楼

冠城大厦701 产 地: 广东省东莞市 产品标准: 0/CYSN0C0042 出版日期: 2011 年 12 月

使用产品前请仔细阅读本使用说明书,并请妥善保管。

操作说明

Operating Instructions

RM-PCM1

©2008 Sony Corporation Printed in China

产品中有毒有害物质或元素的名称及含量



(O:不含有, x:含有)

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
内置线路板	×	0	0	0	0	0
外壳	×	0	0	0	0	0
附件	0	0	0	0	0	0

- 〇:表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
- ×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规 定的限量要求。

中文

开始

RM-PCM1 遥控器专为 Sony PCM-D50 线性 PCM 录音机录音操作而设计。将 RM-PCM1 与 PCM-D50 相连,您可手动控制录音操作。开始前,请仔细阅读录音机操作说明。

使用注意事项

- 不要让本机受到强烈的冲击或震动。否则 会导致机器故障。
- 不要将本机放在下列位置:
- 非常热的地方。任何时候都不要将本机 放在温度在 60°C 以上的位置。
- 阳光直射或靠近热源的地方。
- 阳光照射且紧闭车窗的车内(特别是夏天)
- 湿气重的地方,如浴室。
- 靠近强磁源的地方,如扬声器或电视机
- 多尘的地方
- 为避免对设备造成损坏,请勿将遥控器放入后包,坐在椅子上。或,请勿将线缠绕在机器上,将它放入包中,并施加大力在包上。
- 本机外部布满灰尘时,用一块软布蘸点水,轻轻擦拭表面,然后再用一块干布擦干。不要用酒精、苯、稀释剂等擦拭,以免损坏表面。

规格

尺寸 约 44 × 84.3 × 7 mm (宽/高/厚)

重量 约 26 g (包括线缆)

电线长度 约 2 m 随供附件 便携盒 (1) 操作说明 (1)

设计和规格如有变更、恕不另行通知。

English

Getting started

The RM-PCM1 is a remote commander designed specially for recording operations of the Sony PCM-D50 linear PCM recorder. By connecting the RM-PCM1 to the PCM-D50, you can control recording operations manually. Before you begin, read the operating instructions of the recorder.

Notes on use

- Do not subject the unit to strong shock or vibration. Doing so may cause a malfunction of the unit.
- Do not place the unit in the following locations:
- Anywhere extremely hot. Never expose it to temperatures above 60°C.
- Under direct sunlight or close to heaters
- In a sun-heated car with the windows closed (especially in summer)
- In a humid place, such as the bathroom
- Near strong magnetic sources such as speakers or a TV set
- Anywhere dusty
- To avoid damage to the case, do not put the commander into your back pocket and sit on in on a chair. Or, do not wind the cord around the case, put it into a bag, and apply strong force on the bag.
- When the exterior is dirty, clean the surface gently with a soft cloth slightly moistened in water, and then wipe it again with a dry cloth. Do not use alcohol, benzene, or thinner, etc., to avoid damaging the finish.

Specifications

Dimensions

Approx. $44 \times 84.3 \times 7 \text{ mm}$

(w/h/d) Approx. 26g

(including cable)

Cord length


Mass


Approx. 2 m


Supplied accessories
Carrying pouch (1)

Operating instructions (1)

Design and specifications are subject to change without notice.

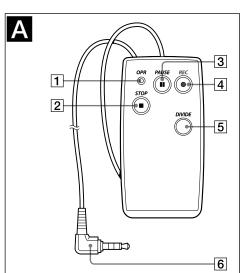

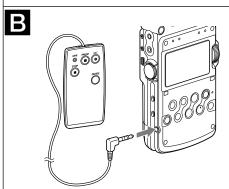

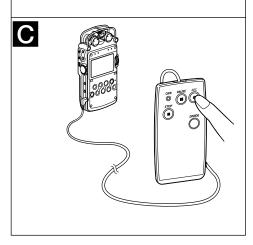

中文

识别部件和控制按钮(A)

1 0PR (操作) 指示灯

录音时,指示灯红灯亮。在录音暂停期间,指示灯红灯闪烁。分割曲目时,指示灯快速闪烁。

2 ■STOP 按钮

按下停止录音。

3 ■PAUSE 按钮

在录音待机或暂停模式下,当 0PR 指示 灯闪烁红灯时开始录音。在录音模式 下,当 0PR 指示灯红灯亮起时开始录 音。

4 ●REC 按钮

在录音待机模式下设置 PCM-D50。0PR 指示灯闪烁红灯。

5 DIVIDE 按钮

分割曲目并开始录音为新曲目。

6 REMOTE 插头

将该插头插入 PCM-D50 上的 REMOTE 插 孔。

连接遥控器(B)

将遥控器的 REMOTE 插头插入 PCM-D50 的 REMOTE 插孔。

使用遥控器(C)

按遥控器上的按钮以在 PCM-D50 上录制曲目。

1 按 ●REC 按钮。

录音机准备开始录音, OPR 指示灯闪烁 红色。

2 旋转 PCM-D50 的 REC LEVEL 旋钮,调节录音电平。

详细信息,请参阅 PCM-D50 的操作说明。

3 按 **IIPAUSE** 按钮开始录音。

解除录音待机模式, OPR 指示灯闪烁红灯。

暂停录音

按 ■PAUSE 按钮。OPR 指示灯闪烁红灯。 再次按此按钮解除暂停。

日注

PCM-D50 不会自动录音。确保继续录音时,解除暂停。

停止录音

按 ■STOP 按钮。

录音过程中分割曲目

录音过程中,在要分割曲目时按 DIVIDE 按 钮。OPR 指示灯快速闪烁。详细信息,请参 阅 PCM-D50 的操作说明。

English

Identifying the parts and controls (()

1 OPR (operation) indicator

Lights in red during recording. Flashes in red during recording pause or standby. When dividing a track, flashes rapidly.

2 ■STOP button

Press to stop recording.

3 II PAUSE button

Starts recording while the OPR indicator flashes in red in recording standby or pause mode. Pauses recording while the OPR indicator is lit in red in recording mode.

4 • REC (recording) button

Sets the PCM-D50 in recording standby mode. The OPR indicator flashes in red.

DIVIDE button

Divides a track and starts recording as a new track.

6 REMOTE plug

Connect this plug to the REMOTE jack of the PCM-D50.

Connecting the remote commander ()

Insert the REMOTE plug of the remote commander into the REMOTE jack of the PCM-D50.

Recording a track with the remote commander ()

Press the buttons on the remote commander to record a track on the PCM-D50.

1 Press the REC button.

The recorder stands by for recording, and the OPR indicator flashes in red.

2 Turn the REC LEVEL dial of the PCM-D50 to adjust the recording level.

For details, see the operating instructions of the PCM-D50.

3 Press the IIPAUSE button to start recording.

The standby for recording mode is released, and the OPR indicator lights in red.

To pause recording

Press the **II** PAUSE button. The OPR indicator flashes in red. Press the button again to release the pause.

Note

The PCM-D50 does not start recording automatically. Be sure to release the pause when you resume recording.

To stop recording

Press the ■ STOP button.

Dividing a track during recording

During recording, press the DIVIDE button at the point where you want to divide a track. The OPR indicator flashes rapidly. For details, see the operating instructions of the PCM-D50.