

Video Cassette Player

Operating Instructions



SLV-KA197TK
SLV-KF297TK Hi-Fi

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The mains lead must only be changed at a qualified service shop.

Precautions

Safety

- This unit operates on 110 – 240 V AC, 50/60 Hz. Check that the unit's operating voltage is identical with your local power supply.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- The unit is not disconnected from the mains as long as it is connected to the mains, even if the unit itself has been turned off.
- Unplug the unit from the mains if you do not intend to use it for an extended period of time. To disconnect the cord, pull it out by the plug, never by the cord.

Installing

- Allow adequate air circulation to prevent internal heat buildup.
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation slots.
- Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the unit and cassettes away from equipment with strong magnets, such as microwave ovens or large loudspeakers.
- Do not place heavy objects on the unit.
- If the unit is brought directly from a cold to a warm location, moisture may condense inside the unit and cause damage to the video head and tape. When you first install the unit, or when you move it from a cold to a warm location, wait for about one hour before operating the unit.

Caution

Television programmes, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws. Also, use of this recorder with cable television transmission may require authorization from the cable television transmitter and/or programme owner.

Compatible colour systems

- This unit is designed to record and play back using the PAL (B/G and D/K), MESECAM (B/G and D/K), NTSC 3.58, and NTSC 4.43 colour systems. Recording of video sources based on other colour systems cannot be guaranteed.
- Tapes recorded with the NTSC colour system can be played back on this unit using a TV or a colour monitor for the PAL colour system.
- To play back tapes recorded with the PAL and MESECAM colour systems, you need a TV or colour monitor compatible with these systems.

Table of contents

Getting Started

- 4 Step 1: Unpacking
- 5 Step 2: Setting up the remote commander
- 6 Step 3: Connecting the unit
- 8 Step 4: Tuning your TV to the unit

Basic Operations

- 10 Playing a tape

Additional Operations

- 14 Playing/searching at various speeds
- 16 Karaoke sing-along
- 19 Adjusting the picture
- 20 Editing with another VCR

Additional Information


- 22 Troubleshooting
 - 24 Specifications
 - 25 Index to parts and controls
- back cover
- Index

Step 1


Unpacking

Check that you have received the following items with the unit:


- Remote commander

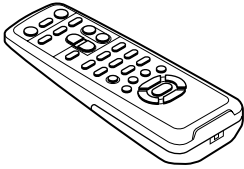


- Audio/video cable (3-phono to 3-phono) (SLV-KF297TK only)

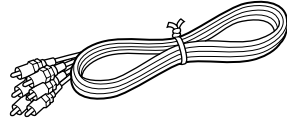


- R6 (Size AA) batteries

 

- Microphone

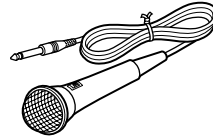

- Aerial cable

 

Checking your model name


The instructions in this manual are for the 2 models: SLV-KA197TK and KF297TK. Check your model number by looking at the rear panel of your unit. The SLV-KF297TK is the model used for illustration purposes. Any difference in operation is clearly indicated in the text, for example, “SLV-KA197TK only.”

Step 2

Setting up the remote commander


Inserting the batteries

Insert two R6 (size AA) batteries by matching the + and - on the batteries to the diagram inside the battery compartment.

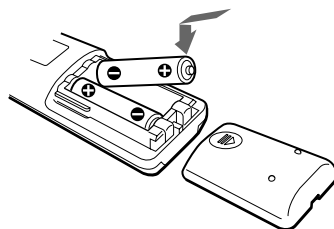

Using the remote commander

You can use this remote commander to operate the unit and a Sony TV. To operate this unit, point at the remote sensor on the unit. To operate the TV, point at the remote sensor on the TV.

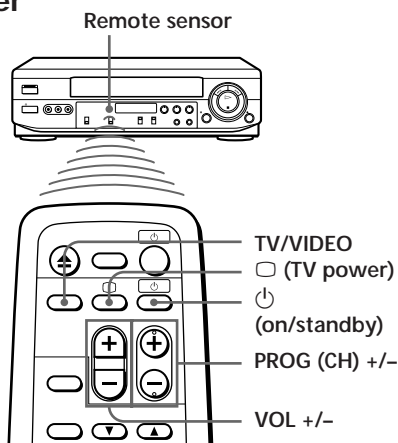


To	Press
Turn the TV to standby or active mode	⏻ (on/standby)
Turn on the TV power	⏻ (TV power)
Increase (+) or decrease (-) the TV volume	VOL +/-
Change the TV programme position	PROG (CH) +/-
Select an input source of the TV either from aerial in or from line in	TV/VIDEO

Notes

- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not mix different types of batteries.


Step 3

Connecting the unit

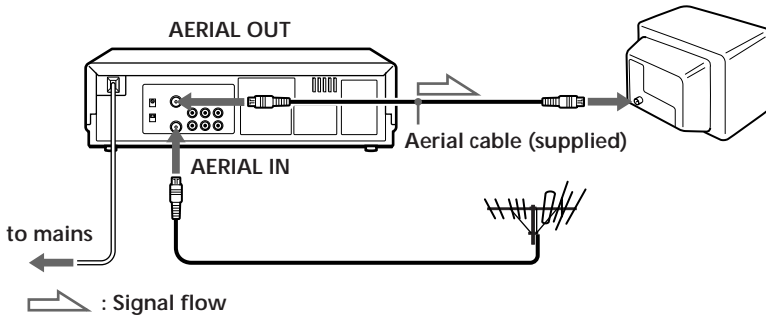


1

Disconnect the aerial cable from your TV and connect it to AERIAL IN on the rear panel of the unit.

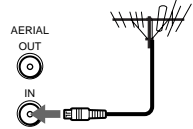

2

Connect AERIAL OUT of the unit and the aerial input of your TV using the supplied aerial cable.

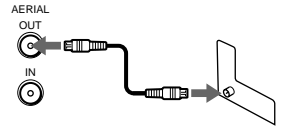

3

Connect the mains lead to the mains.


Additional connections

To a TV that has phono type audio/video input jacks


This additional connection improves picture and sound quality. Connect the TV as shown on the right.

If you want to use the Trinitron TV Synchro Play function (see page 13), this connection is necessary. (If your TV has two or more inputs, connect the audio/video cable to the VIDEO IN 1 jacks.)

For SLV-KA197TK

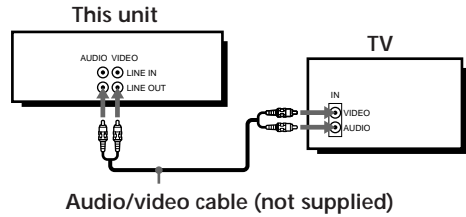


For SLV-KF297TK

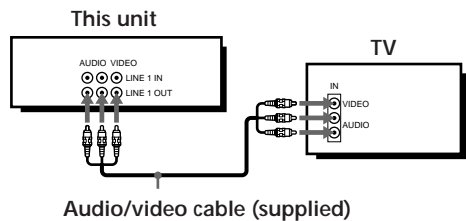

To a stereo system (SLV-KF297TK only)

You can improve sound quality by connecting a stereo system as shown on the right.

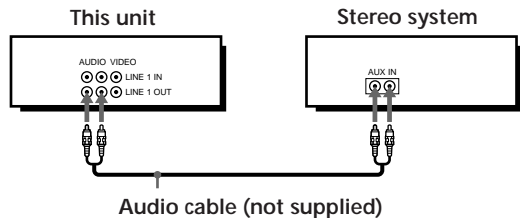


Step 4

Tuning your TV to the unit

If you have connected your unit to the TV using the audio/video cable, skip this step.

ON/STANDBY

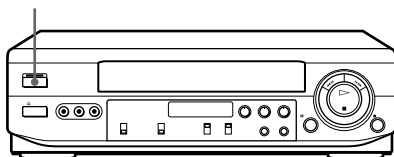

1

ON/STANDBY



Press ON/STANDBY to turn on the unit.

2

Turn on your TV and select a programme position for video playback.

Choose a channel between UHF 30 and 39 on the TV where there is no picture and no sound or only a steady rustling sound.

This channel will now be referred to as the video channel.

3

Insert a tape recorded in the colour system matching your TV into the cassette compartment.

The unit starts playing automatically if you insert a tape with its safety tab removed.

4

Press \triangleright PLAY on the unit.

5

Tune the TV until the video playback picture is clearly displayed on the TV screen.


Refer to your TV manual for tuning instructions.

You have now tuned your TV to the unit. From now on, whenever you want to play a tape, set the TV to the video channel.

If the playback picture does not appear clearly, see "To obtain a clear playback picture" on page 9.

To obtain a clear playback picture


If the playback picture does not appear clearly in step 5 above, turn the RF CHANNEL screw on the rear panel of the unit with a screwdriver to a position where the TV clearly displays the playback picture.

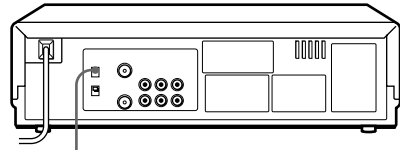

RF CHANNEL



To select the TV system

For your TV to receive the correct signal from your unit, you must set the TV SYSTEM switch on the rear panel of the unit to either G (for system B/G) or K (for system D/K). If this switch is set to the wrong position, the sound will be distorted.

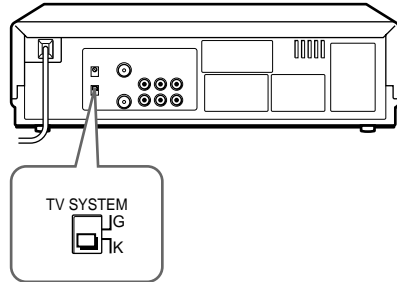


TV SYSTEM
G
K


Playing a tape

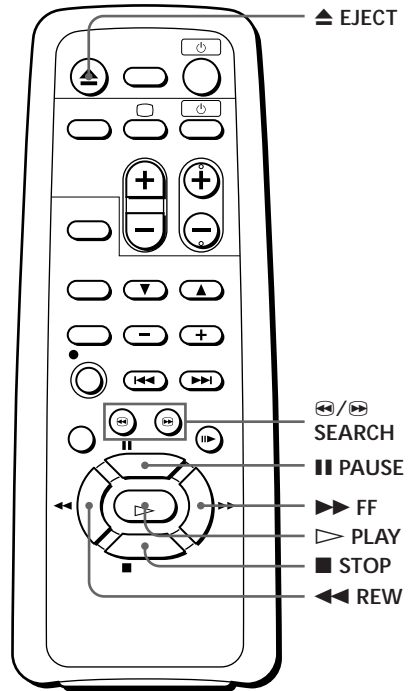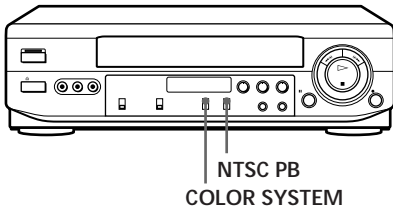

1 Turn on your TV and set it to the video channel.

 2 Insert a tape.
The unit turns on, and starts playing automatically if you insert a tape with its safety tab removed.



3  Press **▶ PLAY**.
When the tape reaches the end, it will rewind automatically.

Additional tasks

To	Press
Stop play	■ STOP
Pause play	PAUSE
Resume play after pause	PAUSE or ▷ PLAY
Search forward	▶▶ FF or Ⓜ SEARCH during playback
Search backward	◀◀ REW or Ⓜ SEARCH during playback
Fast-forward the tape	▶▶ FF during stop
Rewind the tape	◀◀ REW during stop
Eject the tape	▲ EJECT

To set the colour system

If streaks appear during playback, set COLOR SYSTEM on the unit to conform to the system that the tape was recorded in. (Normally set the switch to AUTO.)

If your tape was recorded in	Set COLOR SYSTEM to
PAL	PAL/MESECAM
NTSC	NTSC
MESECAM	PAL/MESECAM

To play an NTSC-recorded tape

Set NTSC PB on the unit according to the colour system of your TV.

If your TV is	Set NTSC PB to
PAL	ON PAL TV
NTSC 4.43	NTSC 4.43
NTSC 3.58	NTSC 3.58

Notes


- Depending on your TV, the following may occur while playing an NTSC-recorded tape:
 - the picture is black and white,
 - the picture shakes,
 - no picture appears on the TV screen,
 - black streaks appear horizontally on the TV screen, and
 - the colour density increases or decreases.
- You can play back tapes recorded in the SP mode only.
- You can eject a tape even when the power is off. When you press ▲ EJECT, the unit turns on automatically. After ejecting the tape, the unit turns off again.
- When the pause mode lasts for more than approximately five minutes, the unit will automatically enter the playback mode.

continued

Playing a tape (continued)

Selecting the sound during playback (SLV-KF297TK only)

Press AUDIO MONITOR to select the sound you want. Each press of the button changes the indicator in the display window. When you play a tape recorded in stereo or with a bilingual sound track, the Hi-Fi Stereo indicator in the display window lights up.

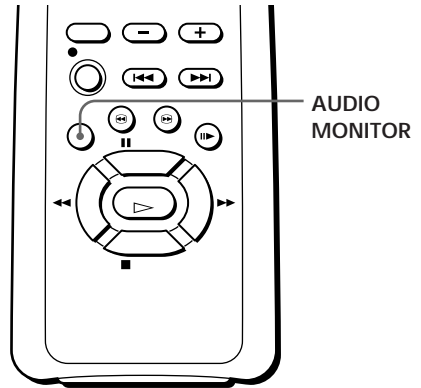


To listen to a		Press AUDIO MONITOR until the display window indicator shows
Stereo tape's	Bilingual tape's	
Stereo sound	Main and sub sounds	L/R
Left channel	Main sound	L
Right channel	Sub sound	R
Standard sound* ¹	Standard sound* ²	No indication

*¹ Usually the mixed sound of left and right channels (monaural)

*² Usually the main sound (monaural)

How sound is recorded on a video tape

The unit records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

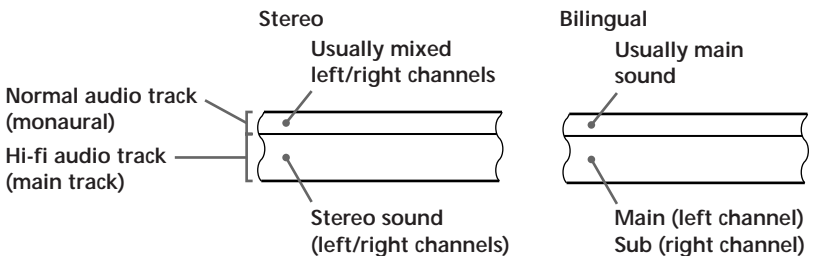

Notes

- To listen to playback sounds in stereo, you must use the AUDIO OUT connections.
- When you play back a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO MONITOR setting.
- You cannot select the sound to listen to while recording.

Turning on the unit and TV, and starting playback automatically (Trinitron TV Synchro Play)

You can only use this function if your TV is made by Sony (Trinitron TV).

How to connect to use this function

Connect the unit and TV with the audio/video cable (see “To a TV that has phono type audio/video input jacks” on page 7). Be sure to connect the audio/video cable to the VIDEO IN 1 jacks on the TV if the TV has two inputs or more. The TV must be placed where it will respond to the remote commander while you are pointing it at the unit.

Operation

Make sure that the TV's power is in standby mode.


Press TRINITRON TV SYNCHRO PLAY and hold the remote commander in place for about two seconds.

The unit and TV turn on, and the TV is set to the video channel. If there is a tape in the unit, playback starts automatically.

Notes

- If the Trinitron TV Synchro Play function does not work properly:
 - Wait a few moments, and press the button again.
 - Replace both of the batteries in the remote commander with new ones, and press the button again.
- Note that this function may not operate some Sony TVs because of the remote commander's signal limitations.
- Do not press TRINITRON TV SYNCHRO PLAY while playing back a video tape. If you do so, the TV's input source will momentarily switch to the TV's tuner.

Playing/searching at various speeds

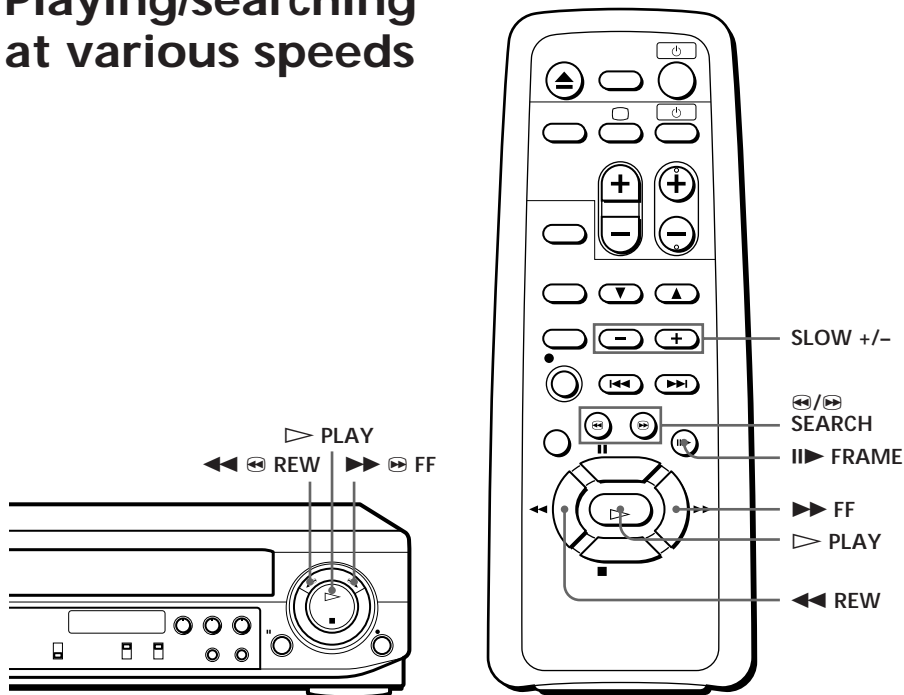

Playback options	Operation
Fast-forward/rewind	During stop, press ►► FF or ◄◄ REW.
View the picture during fast-forward or rewind	During fast-forward, hold ►► FF down. During rewind, hold ◄◄ REW down.
Play at high speed	During playback or pause, press ◀ SEARCH or ▶ SEARCH .
Play in slow motion	During playback or pause, press SLOW+/- . Press the +/- buttons to change the speed.
Play frame by frame	During pause, press ► FRAME to advance the picture one frame. Hold the button down to play one frame each second.
Rewind and start play	During stop, hold ◄◄ ◀ REW <u>on the unit</u> down and press ▷ PLAY <u>on the unit</u> .

To resume normal playback

Press ▷ PLAY.

Tip

- If the picture shakes while in the still mode, adjust the picture using ▼/▲ TRACKING NORMAL/SLOW STILL ADJUST.

Notes


- Streaks or snow cannot be eliminated completely in the various playback operations, especially in the slow motion mode.
- The sound is muted during these operations.
- If you press II▶ FRAME during playback, playback continues at the normal speed but the sound is muted. Press ▷ PLAY to resume normal playback.

Karaoke sing-along

You can sing along with a karaoke videotape, a TV broadcast, or music played back on equipment connected to the LINE IN jacks on the rear panel of the unit. You can sing duets if you use an extra microphone (not supplied).

Before you start...

- Turn on your TV and set it to the video channel.
- Connect the supplied microphone to the MIC IN 1 jack. To sing duets, connect the optional microphone to the MIC IN 2 jack.

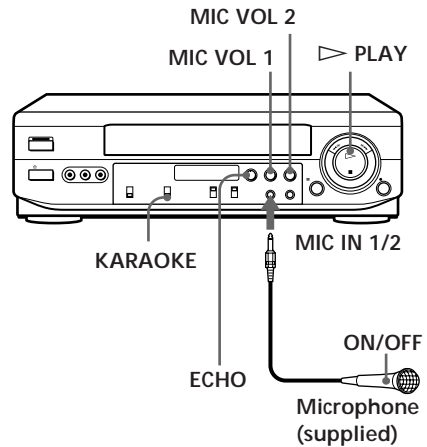

Singing along with karaoke video tapes

- 1** Set KARAOKE to ON.
- 2** Insert a karaoke video tape.
The unit turns on and starts playing automatically if you insert a tape with its safety tab removed.
- 3** Press ▷ PLAY.
If you want to playback a specific song, see “Searching with the AMS function” on page 17.
- 4** Set the ON/OFF switch on the microphone to ON.
Now you can enjoy playing karaoke.

To adjust the microphone volume

Turn MIC VOL 1 for the microphone connected to MIC IN 1.

Turn MIC VOL 2 for the microphone connected to MIC IN 2.

Setting the MIC VOL 1 and/or 2 control(s) to the centre position provides the best microphone volume.

To control the echo effect

Turn ECHO. This controls both microphones' echo effect in the same way.

To get the best effect, adjust the microphone volume to a slightly higher level than the music volume.

Reducing the playback vocals (Karaoke Pon) (SLV-KF297TK only)


You can use ordinary music sources with vocals for karaoke with this function. Use hi-fi stereo music sources.

Set KARAOKE to PON.

The singer's voice will be reduced.

To cancel Karaoke Pon



Set KARAOKE to OFF.

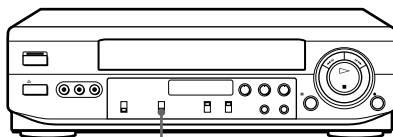

KARAOKE

Searching with the AMS function

The AMS (Automatic Music Sensor) function searches for the beginning of the next or previous song by detecting a blank space between songs.

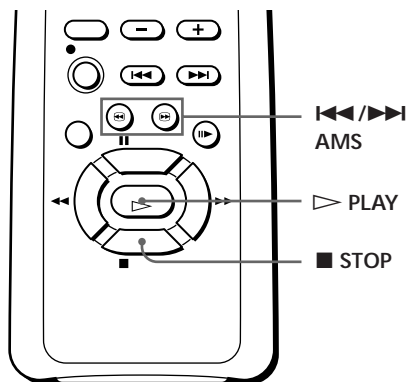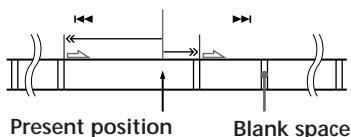

1 Press ■ STOP.

2 Press ◀◀/▶▶ AMS.

- To locate the beginning of the next song, press ▶▶ AMS.
- To locate the beginning of the previous song, press ◀◀ AMS.

The unit starts searching and stops automatically when it locates the beginning of the next or previous song.

3 Press ▷ PLAY to start playback.

continued

Karaoke sing along (continued)

Tip

- When you sing along with music played back on equipment connected to the LINE IN jacks on the unit, play the music source and follow steps 1 and 4 on page 16.

Notes


- If the sound is reproduced through a stereo amplifier, turn down the volume of amplifier before operation.
- If streaks appear during playback, select the colour system that the tape was recorded in (see “To set the colour system” on page 11).
- If feedback occurs, turn down the microphone or TV volume, or move the microphone away from the speakers.
- The AMS may not work correctly when:
 - the tape quality is poor,
 - a song is very short (less than 40 seconds),
 - the interval between songs is very short (less than 6 seconds),
 - a high level sound is recorded between songs or at the beginning of a song,
 - there are low level passages or passages without sound in a song,
 - narration is recorded at the beginning of a song,
 - fade-in or fade-out recording is made on the tape, or
 - AMS starts from the very beginning of the tape or near an interval between songs.
- (SLV-KF297TK only)
Karaoke Pon does not work with the following tapes:
 - tapes on which different vocal sounds are recorded on the left and right channels, such as a duet;
 - tapes recorded monaurally; or
 - tapes on which sound sources are recorded with strong echo effects and chorus effects.

Adjusting the picture

Adjusting the tracking

Although the unit automatically adjusts the tracking when playing a tape, distortion may occur if the tape was recorded in poor condition. If so, manually adjust the tracking.

Press ▼/▲ TRACKING NORMAL/SLOW to obtain the best possible picture. The distortion should disappear as you press one of the two buttons. If you cannot get a clear picture with manual adjustment, press TRACKING AUTO/MANU to return to automatic adjustment.

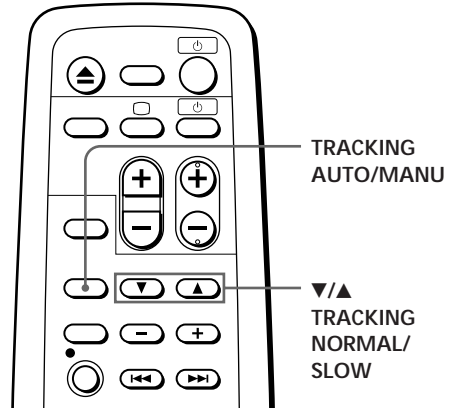

About OPC

OPC (Optimum Picture Control) automatically improves playback quality by adjusting the unit to the condition of the video heads and tape.


The OPC function automatically works on all types of tapes, including rental tapes and the tapes that were not recorded with OPC.

Notes

- The auto tracking function works automatically when you play back a tape just after inserting it.
- Sufficient picture quality may not be obtained when playing back tapes recorded on another VCR or tapes in poor condition.
- When a tape recorded with the copyguard system is played back, intermittent distortion may appear in the upper portion of the picture. However, this is not a malfunction of the unit.

Editing with another VCR

How to connect to record on this unit

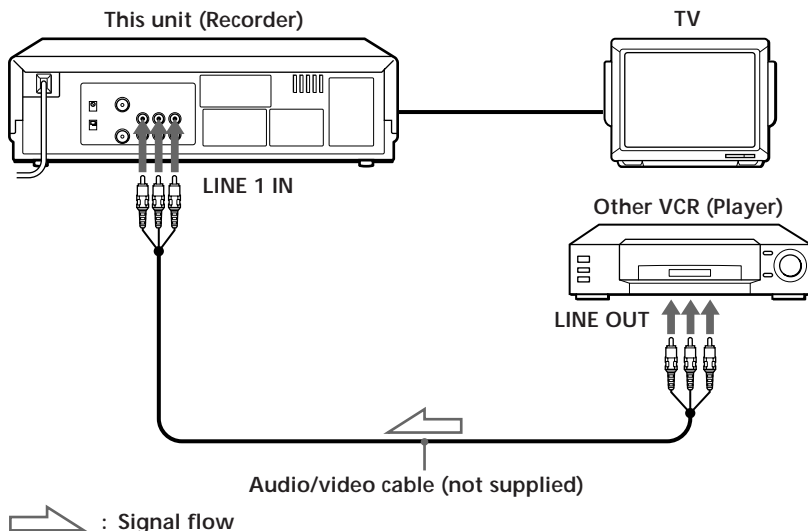

Tips


- (SLV-KA197TK only)
Use a commercially available 2-phono to 2-phono type audio/video cable. If the other VCR has the AUDIO L and R jacks, use a commercially available 3-phono to 2-phono type audio/video cable.
- (SLV-KF297TK only)
 - If the other VCR is a monaural type, use a commercially available 3-phono to 2-phono type audio/video cable.
 - You can also use the LINE 2 IN jacks on the front of the unit.

Notes

- Make sure you connect the plugs to the jacks of the same colour.
- When connecting the units, do not simultaneously connect the LINE IN and LINE OUT jacks on your unit with the other VCR. A humming noise may occur if you do this.

Operation (when recording on this unit)

You can make a copy of a tape using this unit for recording or playback. The unit cannot record TV programmes directly since it does not have a TV tuner.

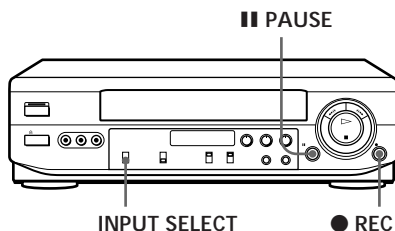

Before you start editing

- Turn on your TV and set it to the video channel.

- 1 (SLV-KF297TK only)
Set INPUT SELECT to LINE 1 (or LINE 2).
- 2 Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 3 Insert a tape with its safety tab in place into this (recording) unit. Search for the point to start recording and press || PAUSE.
- 4 Press ● REC on this unit to set it to recording pause.
- 5 To start editing, press the || PAUSE buttons on both units at the same time.

To stop editing

Press the ■ STOP buttons on both units.

To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on a tape again, cover the tab hole with adhesive tape.



Tips

- To edit more precisely, press the || PAUSE buttons on the units to release pause.
- To cut out unwanted scenes while editing, press || PAUSE on this unit when an unwanted scene begins. When that scene ends, press || PAUSE again to resume recording.

Note

- You can record tapes only in SP mode.

Troubleshooting

If you have any questions or problems not covered below, please consult your nearest Sony service facility.

	Symptom	Remedy
Power	The ON/STANDBY switch does not function.	<ul style="list-style-type: none"> • Connect the mains lead securely.
	The power is turned on but the unit does not operate.	<ul style="list-style-type: none"> • Moisture condensation occurs. Turn the power off, unplug the mains lead and leave the unit to dry for over an hour.
	The VCR enters standby mode or turns off automatically.	<ul style="list-style-type: none"> • The auto safety system is triggered to protect your tape and the unit's mechanism when there is something wrong with the tape or when the mechanism is overloaded. Press ON/STANDBY to restart the unit. If the unit does not work after pressing ON/STANDBY again, disconnect the mains lead from the mains. Wait for at least 15 seconds. Then reconnect mains, and press ON/STANDBY again. If the unit still does not work, please consult your nearest Sony service facility.
Playback	The playback picture does not appear on the TV screen.	<ul style="list-style-type: none"> • Make sure the TV is set to the video channel. If you are using a monitor, set it to video input.
	The picture is not clear.	<ul style="list-style-type: none"> • Adjust the tracking with the ▼/▲ TRACKING NORMAL/SLOW buttons. • Make sure the COLOR SYSTEM switch is set to the position corresponding to the colour system which the tape was recorded with. • The video heads are dirty (see the next page). Clean the video heads using a video head cleaning cassette. If a cleaning cassette is not available in your area, have the heads cleaned at your nearest Sony service facility (a standard service charge will be required). Do not use a commercially available wet-type cleaning cassette other than Sony's, as it may damage the video heads. • The video heads may have to be replaced. Consult your local Sony service facility for more information.
	The picture rolls vertically during picture search.	<ul style="list-style-type: none"> • Adjust the vertical hold control on the TV or monitor.
	The picture has no sound.	<ul style="list-style-type: none"> • The tape is defective. Use a new tape.
	The tape starts playing as soon as it is inserted.	<ul style="list-style-type: none"> • The safety tab has been removed. To record on this tape, cover the tab hole.
Recording	The tape is ejected when you press ● REC.	<ul style="list-style-type: none"> • Check that the safety tab has not been removed.
	Nothing happens when you press ● REC.	<ul style="list-style-type: none"> • Make sure the tape is not at its end. • (SLV-KF297TK only) Select the correct source with the INPUT SELECT switch, LINE 1 or LINE 2.



	Symptom	Remedy
Others	No tape can be inserted.	<ul style="list-style-type: none"> • Check that a tape isn't already in the tape compartment.
	The microphone sound is distorted.	<ul style="list-style-type: none"> • The MIC VOL control is set too high.
	The remote commander does not function.	<ul style="list-style-type: none"> • Make sure you are pointing the remote commander at the remote sensor on the unit. • Replace all the batteries in the remote commander with new ones if they are weak.
	The unit needs to be cleaned.	<ul style="list-style-type: none"> • Clean the cabinet, panel, and controls with a dry soft cloth, or a soft cloth slightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzine.

Auto head cleaner

The unit incorporates an auto head cleaner which cleans the video heads when a tape is loaded or unloaded. When the heads are not sufficiently clean, even after a tape has been loaded/unloaded several times, use a video head cleaning cassette.

Symptoms caused by contaminated video heads

- Normal picture
- Rough picture
- Unclear picture
- No picture (or black & white screen appears)

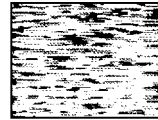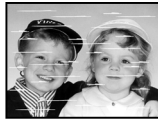

initial
contamination



terminal

Sapphire tape cleaner

The unit incorporates a sapphire tape cleaner which cleans a video tape when it is loaded. This cleaner can prevent the video heads from contamination by removing dust or mold from a tape with the sapphire edge.

Specifications

System

- RF output signal
 - UHF channels 30 to 39
- Aerial out
 - 75-ohm asymmetrical aerial socket

Inputs and outputs

- LINE IN (SLV-KA197TK)
- LINE 1 IN/LINE 2 IN (SLV-KF297TK)
 - VIDEO IN, phono jack (1)
 - Input signal: 1 Vp-p, 75 ohms, unbalanced, sync negative
 - AUDIO IN,
 - phono jack (1) (SLV-KA197TK)
 - phono jack (2) (SLV-KF297TK)
 - Input level: 327 mVrms
 - Input impedance: more than 47 kilohms
- LINE OUT (SLV-KA197TK)
- LINE 1 OUT (SLV-KF297TK)
 - VIDEO OUT, phono jack (1)
 - Output signal: 1 Vp-p, 75 ohms, unbalanced, sync negative
 - AUDIO OUT,
 - phono jack (1) (SLV-KA197TK)
 - phono jack (2) (SLV-KF297TK)
 - Standard output: 327 mVrms
 - Load impedance: 47 kilohms
 - Output impedance: less than 10 kilohms
- Microphone input
 - MIC IN 1/2 (2)
 - more than 3 kilohms, 1.84 mVrms

General

- Power requirements
 - 110 – 240 V AC, 50/60 Hz
- Power consumption
 - 12 W
- Operating temperature
 - 5°C to 40°C
- Storage temperature
 - 20°C to 60°C
- Dimensions
 - Approx. 355 × 100 × 280 mm (w/h/d) including projecting parts and controls
- Mass
 - Approx. 3.8 kg

Supplied accessories


- Remote commander (1)
- R6 (Size AA) batteries (2)
- Aerial cable (1)
- Audio/video cable (3-phono to 3-phono) (SLV-KF297TK only) (1)

Design and specifications are subject to change without notice.


Index to parts and controls

Refer to the pages indicated in parentheses () for details.

Front panel (SLV-KA197TK)

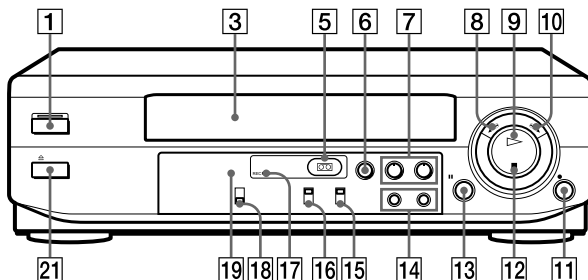

Front panel (SLV-KF297TK)

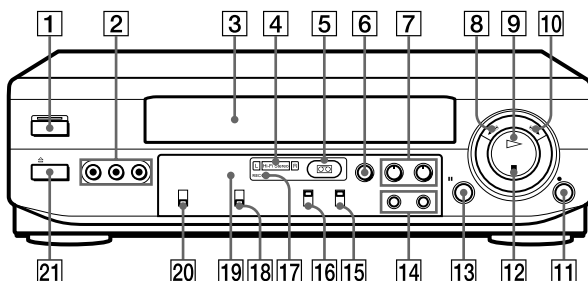


- | | |
|---|--|
| 1 ON/STANDBY switch/indicator (8) | 12 ■ STOP button (11) |
| 2 LINE 2 IN VIDEO/AUDIO/L/R jacks (SLV-KF297TK only) (20) | 13 ■ PAUSE button (11) |
| 3 Tape compartment | 14 MIC IN 1/2 jacks (16) |
| 4 Hi-Fi Stereo/L/R indicators (SLV-KF297TK only) (12) | 15 NTSC PB switch (11) |
| 5 Tape operation indicators | 16 COLOR SYSTEM switch (11) |
| 6 ECHO control (16) | 17 REC (recording) indicator |
| 7 MIC VOL 1/2 controls (16) | 18 KARAOKE switch (16, 17) |
| 8 ◀◀ REW button (11, 14) | 19 Remote sensor (5) |
| 9 ▷▶ PLAY button (10) | 20 INPUT SELECT switch (SLV-KF297TK only) (21) |
| 10 ▶▶▶ FF button (11, 14) | 21 ▲ EJECT button (11) |
| 11 ● REC button (21) | |


continued

Index to parts and controls (continued)

Rear panel (SLV-KA197TK)

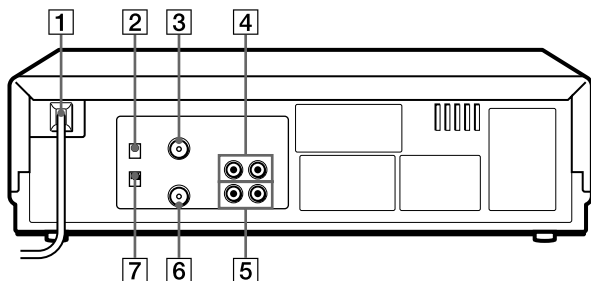

Rear panel (SLV-KF297TK)

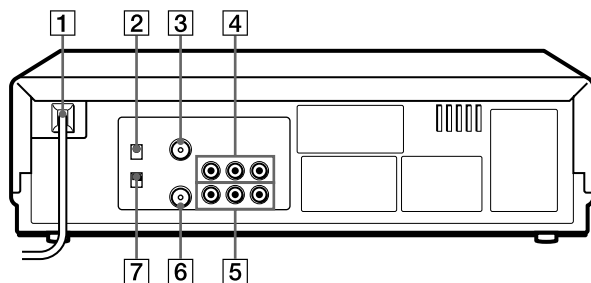

1 Mains lead (6)

2 RF CHANNEL screw (9)

3 AERIAL OUT connector (6)

4 LINE IN AUDIO/VIDEO
jacks (SLV-KA197TK only) (20)

LINE 1 IN AUDIO/VIDEO L/R
jacks (SLV-KF297TK only) (20)


5 LINE OUT AUDIO/VIDEO jacks
(SLV-KA197TK only) (7)

LINE 1 OUT AUDIO/VIDEO L/R
jacks (SLV-KF297TK only) (7)

6 AERIAL IN connector (6)

7 TV SYSTEM switch (9)

Remote commander

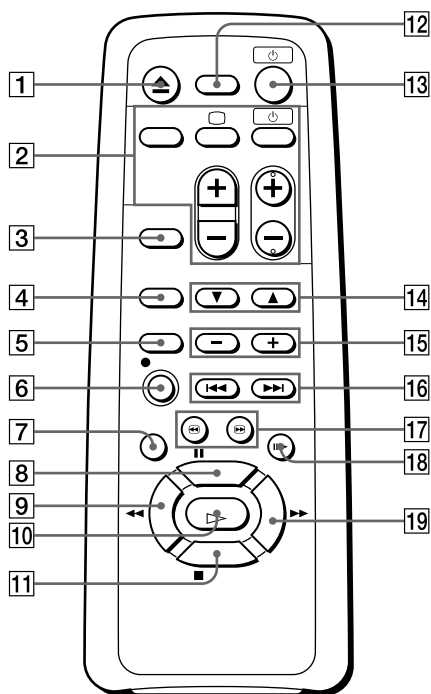

- 1 ▲ EJECT button (11)
- 2 TV control buttons (*Only for TV*) (5)
 TV/VIDEO
 □ (TV power)
 ⏻ (on/standby)
 VOL +/-
 PROG (CH) +/-
- 3 EFFECT button (*This button doesn't work with this unit.*)
- 4 TRACKING AUTO/MANU button (19)
- 5 TV/VTR button (*This button doesn't work with this unit.*)
- 6 ● REC button (21)
- 7 AUDIO MONITOR button (*This button works only for SLV-KF297TK.*) (12)
- 8 ■ PAUSE button (11)
- 9 ◀◀ REW button (11, 14)
- 10 ▷ PLAY button (10)
- 11 ■ STOP button (11)
- 12 TRINITRON TV SYNCHRO PLAY button (13)
- 13 ⏻ (on/standby) switch (8)
- 14 ▼/▲ TRACKING NORMAL/SLOW STILL ADJUST buttons (19)
- 15 SLOW +/- buttons (14)
- 16 ◀◀/▶▶ AMS buttons (17)
- 17 ◀/▶ SEARCH buttons (11, 14)
- 18 ■▶ FRAME button (14)
- 19 ▶▶ FF button (11, 14)

Index

A, B

Accessories supplied 4

Adjusting

 picture 19

 tracking 19

Aerial hookup 6

AMS searching 17

Audio track 12

Auto head cleaner 23

AV connection 7

C

Cleaning the video

heads 23

Colour system

 compatible colour

 systems 2

 setting 11

Connecting

 the unit and your TV 6

 to a TV with audio/
 video jacks 7

D

Dubbing. *See* Editing

E, F, G

Echo 16

Editing 20

H, I, J

Hi-fi audio track 12

K, L

Karaoke sing along 16

 Reducing the playback
 vocals 17

M

Monitoring

 during playback 12

N

Normal audio track 12

NTSC-recorded tapes 11

O

OPC (Optimum Picture

Control) 19

P, Q

Picture adjustment. *See*

Adjusting

Playback 10

 at various speeds 11, 14

 frame-by-frame 14

 slow motion 14

R

Recording 21

Remote commander 5

RF CHANNEL screw 9

S

Safety tab 21

Searching at various

speeds 14

SP mode 11, 21

T, U, V, W, X, Y, Z

Tracking adjustment. *See*

Adjusting

Trinitron TV Synchro

Play 13

Tuning your TV to the

unit 8

TV system 9