

# ***Video Cassette Player***

---

Operating Instructions

**VHS**

**Hi-Fi**

***KARAOKE***

***SLV-KH7PL***

## WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The AC power cord must be changed only at a qualified service shop.

## Caution

Television programs, films, video tapes and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws. Also, use of this recorder with cable television transmission may require authorization from the cable television transmitter and/or program owner.

## Precautions

### Safety

- This unit operates on 110 – 240 V AC, 50/60 Hz. Check that the unit's operating voltage is identical with your local power supply.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- Unplug the unit from the wall outlet if you do not intend to use it for an extended period of time. To disconnect the cord, pull it out by the plug, never by the cord.

### Installing

- Allow adequate air circulation to prevent internal heat buildup.
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation slots.
- Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the unit and cassettes away from equipment with strong magnets, such as microwave ovens or large loudspeakers.
- Do not place heavy objects on the unit.
- If the unit is brought directly from a cold to a warm location, moisture may condense inside the unit and cause damage to the video head and tape. When you first install the unit, or when you move it from a cold to a warm location, wait for about one hour before operating the unit.

---

# Table of contents

---

## Getting Started

- 4 Step 1: Unpacking
  - 5 Step 2: Setting up the remote commander
  - 6 Step 3: Hookups
- 

## Basic Operations

- 12 Playing a tape
- 16 Recording TV programs

## Additional Operations

- 19 Playing/searching at various speeds
- 21 Recording TV programs using the easy timer
- 22 Karaoke sing-along
- 30 Searching with the AMS or index function
- 32 Enjoying the surround sound (Virtual Sound)
- 33 Adjusting the picture
- 34 Changing menu options

## Editing

- 35 Hooking up to a VCR or stereo system
- 36 Basic editing
- 37 Audio dubbing

## Additional Information


- 40 General setup information
- 41 Troubleshooting
- 43 Specifications
- 44 Index to parts and controls
- back cover
- Index

# Step 1


## Unpacking

Check that you have received the following items with the unit:


- Remote commander

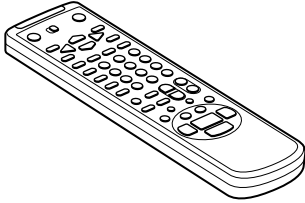


- Audio/video cable (3-phono to 3-phono)

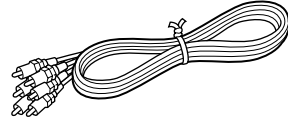


- Size AA (R6) batteries

 


- Microphone

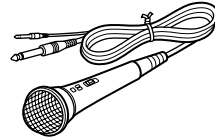

- 75-ohm coaxial cable with F-type connectors

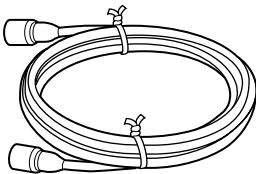

- Plug adaptor

 

If the plug supplied with your VCR does not fit your power outlet, attach the supplied adaptor to the plug.


## Step 2

# Setting up the remote commander

### Inserting the batteries


Insert two size AA (R6) batteries by matching the + and - on the batteries to the diagram inside the battery compartment.

Insert the negative (-) end first, then push in and down until the positive (+) end clicks into position.

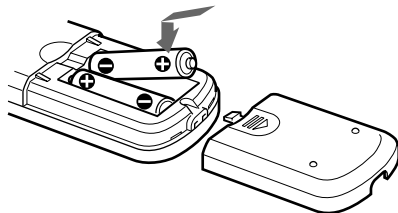

### Using the remote commander

You can use this remote commander to operate this unit and a Sony TV. Buttons on the remote commander marked with a dot (•) can be used to operate your Sony TV.

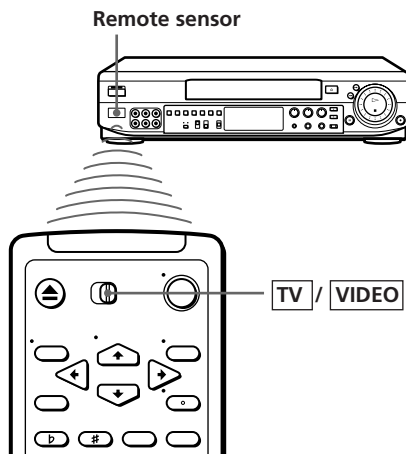

To operate	Set <b>TV / VIDEO</b> to
the unit	<b>VIDEO</b> and point at the remote sensor on the unit
a Sony TV	<b>TV</b> and point at the remote sensor on the TV

### Notes

- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not use different types of batteries.

## Step 3

# Hookups

### Selecting the best hookup option

There are many ways in which your unit can be hooked up. To hook up your unit so that it works best for you, first scan through the table below. Then use the accompanying diagrams and procedures on the following pages to set up your unit.

If you have	Use	Refer to
a TV that has both audio/video inputs and outputs	<b>Audio/video (A/V) hookup for viewing</b> <b>Audio/video (A/V) hookup for recording TV programs</b>	<b>Pages 7 and 8</b> <b>Page 9</b>
a TV that has only audio/video inputs	<b>Audio/video (A/V) hookup for viewing</b>	<b>Page 7</b>
a TV that has neither audio/video inputs nor outputs	<b>Antenna hookup</b>	<b>Pages 10 to 11</b>

After you've completed the connections, follow the instructions for setup. During setup, if you need more details on the procedure described, page numbers are provided where you can find complete, step-by-step instructions.

After you've completed the setup, you're ready to use your unit.

#### Before you get started

- Turn off the power to all equipment.
- Do not connect the AC power cords until all of the connections are completed.
- Be sure you make connections firmly. Loose connections may cause picture distortion.
- If your TV doesn't match any of the examples provided, see your nearest Sony dealer or qualified technician.


## Audio/video (A/V) hookup for viewing

Pages 7 and 8


If your TV has audio/video (A/V) input jacks, you will get a better picture and sound if you hook up your unit using these connections. In addition, for a true “home theater” experience, you should connect the audio outputs of your unit or TV to your stereo system. If your TV doesn’t have A/V inputs, see “Antenna hookup” on page 10.

If you’re planning to use your unit only to play back pictures and movies, you’re finished setting up the unit after you’ve made these connections. If you have a TV with audio/video outputs, and want to record TV programs from your TV, complete these connections first, and then go to “Audio/video (A/V) hookup for recording TV programs” on page 9.

### A Use this hookup if your TV has stereo jacks

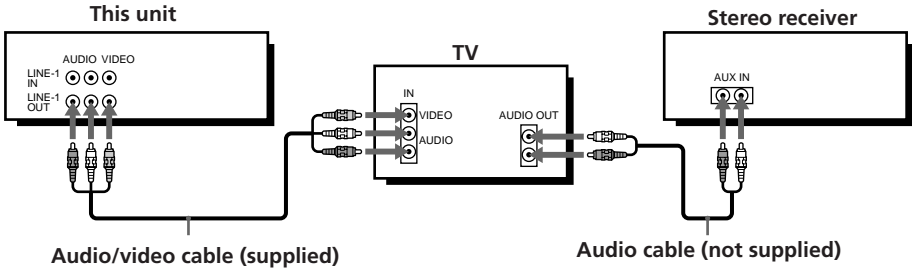

### B Use this hookup if your TV doesn't have stereo jacks

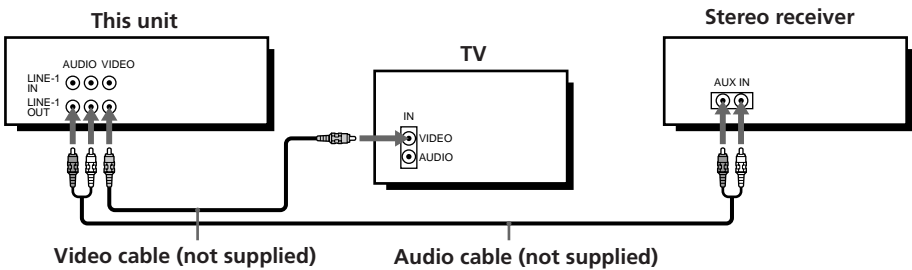

#### Notes

- To play a tape in stereo, you must use the A/V connection.
- If you want to use the Trinitron TV Synchro Play function (page 15), the connection using the audio/video cable is necessary. (If your TV has two or more inputs, connect the audio/video cable to the VIDEO IN 1 jacks.)

continued

## Step 3: Hookups (continued)

### A/V hookup: Video cassette player setup

After you've connected your TV, use the following procedure to set up the unit.

Press **MENU** and select  
**SET UP MENU.**

```
MENU
KARAOKE PROGRAM
SET UP KARAOKE
▶SET UP MENU

SELECT : [▲▼]
SET    : [EXECUTE]
```



Set **AUTO ANT SEL** to **OFF**  
and press **EXECUTE.**

```
SET UP MENU
▶AUTO ANT SEL  ON  •OFF
AUDIO MIX     ON  •OFF
APC           •ON  OFF
CONNECT L1    •TV  OTHER


SELECT : [▲▼]
SET    : [◆◆]
```

For details, see page 34.



If your TV has audio/video (A/V) output jacks, you can record a program showing on the TV. For details on recording, see “Recording TV programs” on page 16.


Use this hookup if your TV has audio/video output jacks

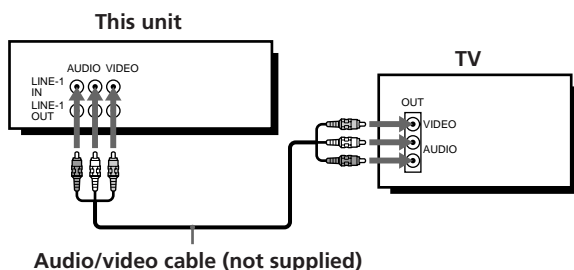


## AV hookup: Video cassette player setup

When you connect both LINE-1 IN and LINE-1 OUT on the unit to the TV, use the following procedure to set up the unit.

Press MENU and select SET UP MENU.

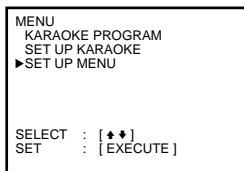

Set CONNECT L1 to TV and press EXECUTE.

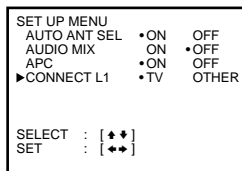

For details, see page 34.

### Note

- When you connect the LINE-1 IN jacks of the unit to other equipment, set CONNECT L1 to OTHER.

## Step 3: Hookups (continued)


### Antenna hookup

Pages 10 to 11


If you made A/V connections (page 7), skip this hookup.

#### **A** Use this hookup if you're using:

- VHF/UHF antenna (you get channels 2–13 and channels 14 and higher)
- UHF-only antenna (you get channels 14 and higher)
- Separate VHF and UHF antennas

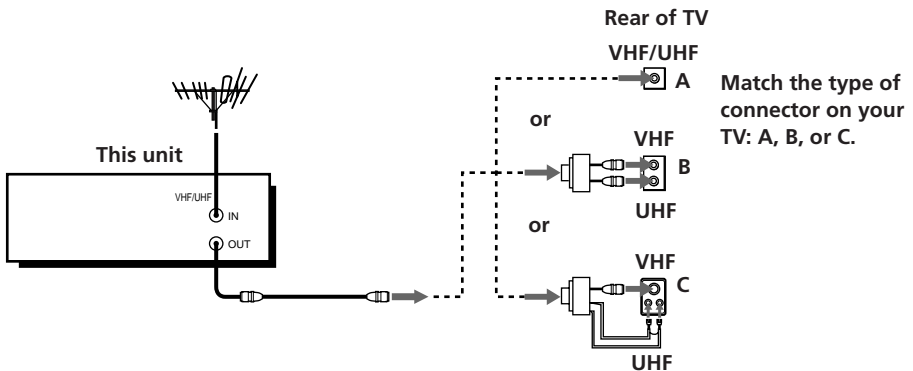

#### **B** Use this hookup if you're using a VHF-only antenna (you get channels 2–13 only)

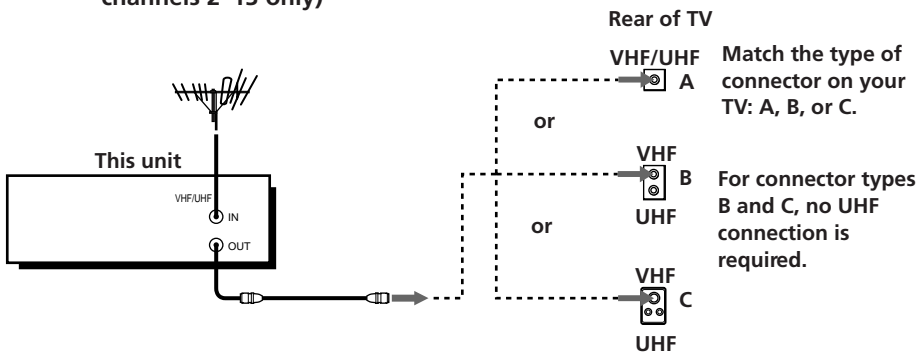


#### **If you cannot connect your antenna cable to the unit directly**

If your antenna cable is a flat cable (300-ohm twin lead cable), attach an external antenna connector (not supplied) so that you can connect the cable to the VHF/UHF IN connector. If you have separate cables for VHF and UHF antennas, you should use a U/V band mixer (not supplied). For details, see page 40.

## Antenna hookup: Video cassette player setup

When connecting the unit to the TV using only the antenna cable, you must set the RF UNIT switch on the rear of the unit so that the TV can receive the correct signal from the unit.

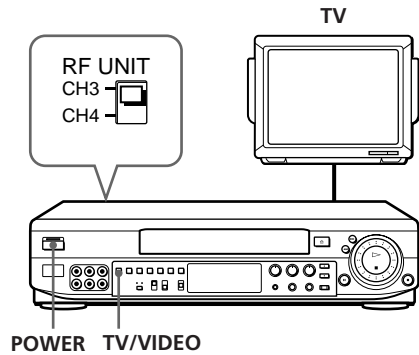


- 1** Set the RF UNIT switch on the rear of the unit to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel.
- 2** Press POWER to turn on the unit.
- 3** Press TV/VIDEO to turn on the VIDEO indicator in the unit's display window.
- 4** Turn on your TV and set it to the channel you selected in step 1 (channel 3 or 4).

The clear blue screen appears on the TV screen. To assure that you correctly select the TV channel for the unit, play a recorded tape.


Whenever you use the unit, set the TV to the channel selected in step 1.


# Playing a tape

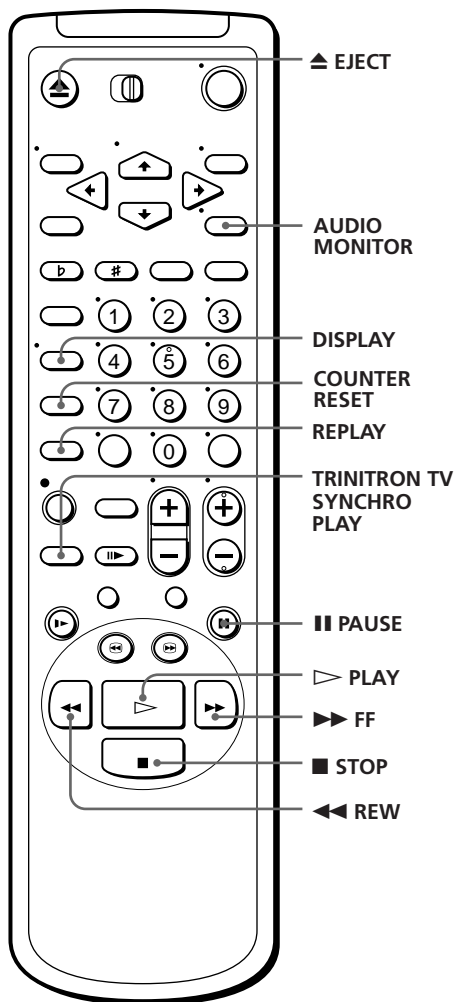

**1** Turn on your TV and set it to the video channel.

 **2** Insert a tape.  
The unit turns on and starts playing automatically if you insert a tape with its safety tab removed.



**3** Press  PLAY.  
When the tape reaches the end, it will rewind automatically.

## Additional tasks

To	Press
Stop play	■ STOP
Pause play	PAUSE
Resume play after pause	PAUSE or ▷ PLAY
Fast-forward the tape	▶▶ FF during stop
Rewind the tape	◀◀ REW during stop
Eject the tape	▲ EJECT


### To replay a recently watched scene

You can immediately rewind and playback the scene you want to watch again.

During playback, press REPLAY up to four times. The unit rewinds the tape about 10 seconds on the counter for each press of the button, and restarts playback.

### To use the time counter

At the point on the tape that you want to find later, press COUNTER RESET. The counter in the display window resets to "0H00M00S." Search for the point afterwards by referring to the counter.

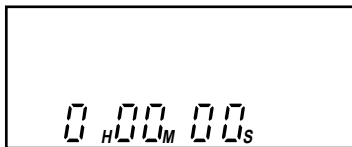

To display the counter on the TV screen, press DISPLAY.

continued

## Playing a tape (continued)

### To select the sound during playback

Press AUDIO MONITOR to select the sound you want.

#### Stereo program

To listen to	On-screen display	Display window
Stereo	STEREO	L, R, STEREO
Left channel	LCH	L, STEREO
Right channel	RCH	R, STEREO
Standard sound*	No indicator	No indicator

\* Usually the mixed sound of the left and right channels.


#### Bilingual program

To listen to	On-screen display	Display window
Main	LCH	L, STEREO
Sub	RCH	R, STEREO
Main and sub	STEREO	L, R, STEREO
Standard sound*	No indicator	No indicator

\* Usually the main sound (monaural).

### To check audio channel and sound level

You can check the audio channel and sound level visually with the indicators in the display window.

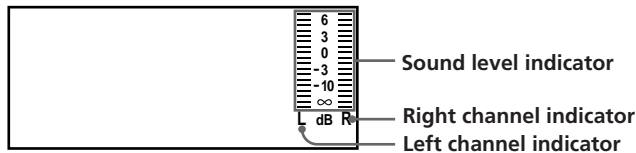

#### Notes

- The counter resets to "0H00M00S" whenever a tape is reinserted.
- The counter stops counting when it comes to a portion with no recording.
- Tapes recorded in the LP mode on other VCRs can be played back on this unit but the picture quality can not be guaranteed.
- To play a tape in stereo, you must use the AUDIO OUT connections.
- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO MONITOR setting.
- If the AUDIO MONITOR button does not function, check that AUDIO MIX in the SET UP MENU is set to OFF.

## Turning on the unit and TV, and starting playback automatically (Trinitron TV Synchro Play)

You can only use this function if your TV is made by Sony (Trinitron TV).

### How to connect to use this function

Connect the unit and TV with the audio/video cable (see “Audio/video (A/V) hookup for viewing” on page 7.) Be sure to connect the audio/video cable to the VIDEO IN 1 jacks on the TV if the TV has two inputs or more. The TV must be placed where it will respond to the remote commander while you are pointing it at the unit.

### Operation

Make sure that the TV's power is in standby mode.

Press TRINITRON TV SYNCHRO PLAY and hold the remote commander in place for about two seconds.

The unit and TV turn on, and the TV is set to the video channel. If there is a tape in the unit, playback starts automatically.

### Notes



- If the Trinitron TV Synchro Play function does not work properly:
  - Wait a few moments, and press the button again.
  - Replace both of the batteries with new ones, and press the button again.Note that this function may not operate some Sony TVs because of the remote commander's signal limitations.
- Do not press TRINITRON TV SYNCHRO PLAY while playing back a tape. If you do so, the TV's input source will momentarily switch to the TV's tuner.

# Recording TV programs

You can record TV programs from your TV by connecting the TV to the unit's LINE-1 IN jacks.

## Before you start...

- Connect the LINE-1 IN jacks of the unit to the audio/video output jacks of your TV (see "Audio/video (A/V) hookup for recording TV programs" on page 9).
- Set CONNECT L1 to TV in the SET UP MENU (see page 9).

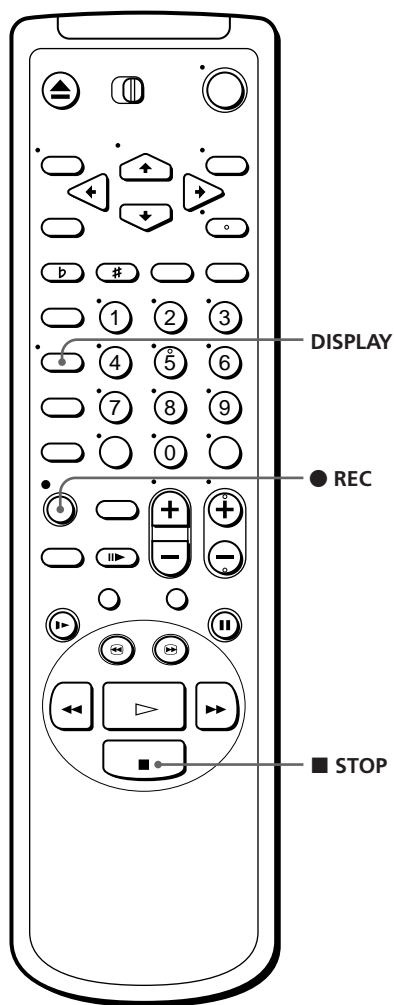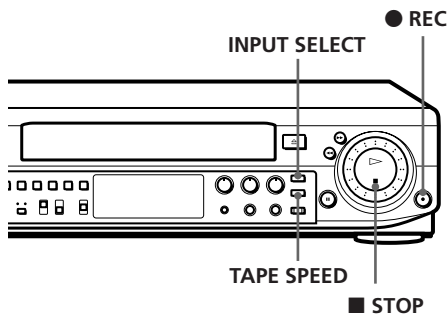


**1**


Turn on your TV and select the TV channel you want to record on your TV.


**2**

Insert a tape with its safety tab in place.




- 3** **INPUT SELECT**  Press INPUT SELECT to display "L1" in the display window.

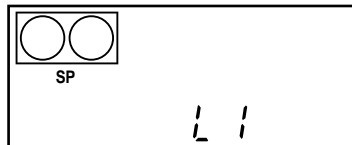

- 4** **TAPE SPEED**  Press TAPE SPEED to select the tape speed, SP or EP.

EP (Extra Play) provides recording time three times as long as SP (Standard Play), however, SP produces better picture and audio quality.



- 5** **REC**  Press **REC** to start recording. The REC indicator appears in the display window.

### To stop recording

Press **STOP**.

### To check the remaining tape length

Press **DISPLAY**. The white bar indicates the approximate length of tape remaining.



### To record stereo and bilingual programs


Set the connected TV to output stereo or bilingual sound. You cannot select the sound to listen to while recording.

continued

## Recording TV programs (continued)

### How sound is recorded on a video tape

The unit records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

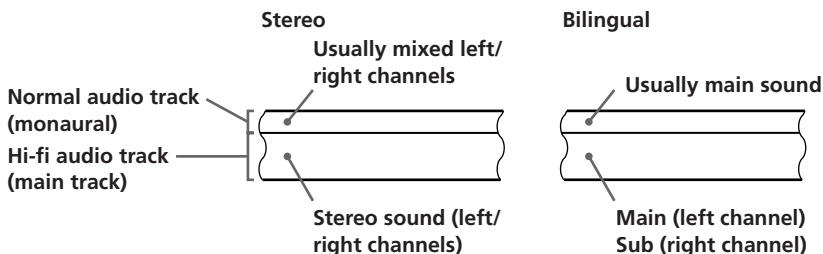

### To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on a tape again, cover the tab hole with adhesive tape.





### Tip

- The display appears on the TV screen indicating information about the tape, but the information won't be recorded on the tape.

### Notes

- Do not turn off the TV nor change the TV channel during recording.
- Make sure the audio/video output of your TV is connected to the LINE-1 IN jacks of the unit.
- Make sure CONNECT L1 in the SET UP MENU is set to TV.
- To record stereo or bilingual programs, the connected source must have audio left/right output jacks.
- The display does not appear during still (pause) mode or slow-motion playback.
- The remaining tape length may not be indicated accurately for short tapes such as T-20 or T-30, or tapes recorded in the LP mode.
- It may take up to one minute for the unit to calculate and display the remaining time after you press DISPLAY.
- When the KARAOKE ON/OFF switch is set to ON, the unit displays the karaoke information (page 25).

# Playing/searching at various speeds

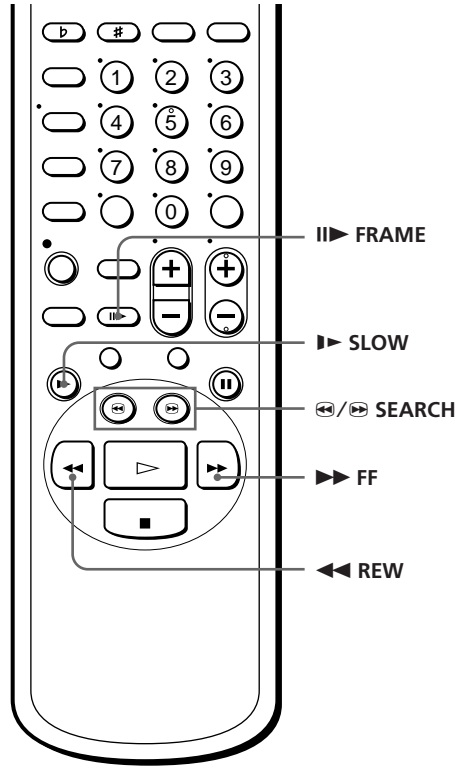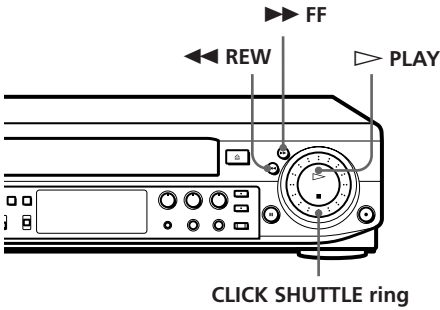

Playback options	Operation
Fast-forward/rewind	During stop, press ▶▶ FF or ◀◀ REW.
View the picture during fast-forward or rewind	During fast-forward, hold ▶▶ FF down. During rewind, hold ◀◀ REW down.
Play at high speed	During playback or pause, press ◀◀/▶▶ SEARCH or ▶▶/◀◀ SEARCH. To change the direction, press the other one.
Play in slow motion for two minutes	During playback or pause, press ▶▶ SLOW.
Play frame by frame	During pause, press ◻▶▶ FRAME. Hold the button down to play one frame each second.
Rewind to the beginning of a tape and start play	During stop, hold ◀◀ REW down <u>on the unit</u> , and press ▷ PLAY <u>on the unit</u> .

### To resume normal playback

Press ▷ PLAY.


**continued**

## Playing/searching at various speeds (continued)

### Using the CLICK SHUTTLE ring

With the CLICK SHUTTLE ring on the unit, you can operate a variety of playback options.

During playback or pause, turn the CLICK SHUTTLE ring clockwise or counterclockwise. Each change in the CLICK SHUTTLE ring position changes the playback mode, and the corresponding mark appears on the TV screen for a few seconds in the following way if the on-screen display function is on.

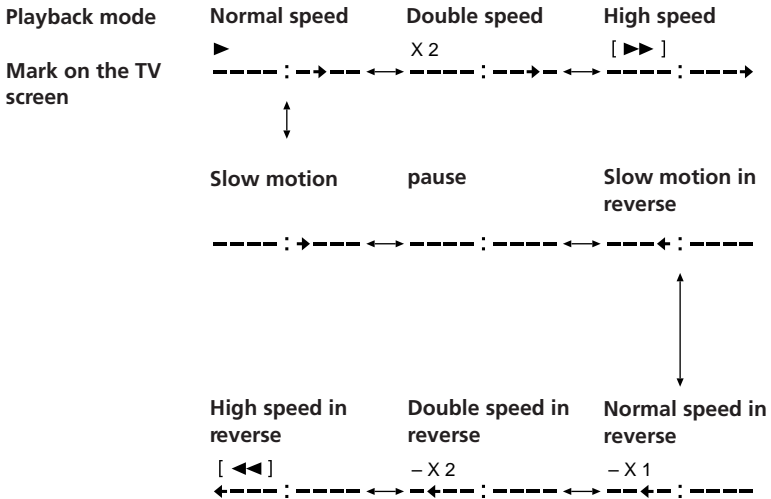


#### Tip

- Adjust the picture using the TRACKING NORM/SLOW ◀/▶ buttons if:
  - streaks appear while playing in slow motion.
  - bands appear at the top or bottom while pausing.
  - the picture shakes while pausing.

#### Notes

- The sound is muted during these operations.
- Tapes recorded in the LP mode on other VCRs can be played back on this unit but the picture quality cannot be guaranteed.
- The picture may have snow:
  - when playing at high speed in reverse
  - when playing in reverse slow motion
  - when playing in reverse.
- If the playback mode mark doesn't appear on the TV screen, press DISPLAY.
- The playback mode mark may shake while playing or searching at various speeds.
 
# Recording TV programs using the easy timer




EASY TIMER

You can start recording at once and have the unit stop recording automatically after a specified duration.


## Before you start...

- Connect the LINE-1 IN jacks of the unit to the audio/video output jacks of your TV (see “Audio/video (A/V) hookup for recording TV programs” on page 9).
- Set CONNECT L1 to TV in the SET UP MENU.
- Insert a tape with its safety tab in place.
- Press TAPE SPEED to select the tape speed, SP or EP.

- 1 Turn on your TV and select the TV channel you want to record on your TV.
- 2 Press EASY TIMER repeatedly to set the duration.

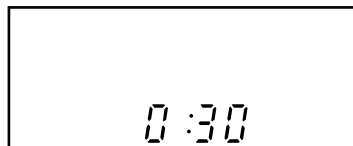

 Each press advances the time in increments of 30 minutes.



Once you press EASY TIMER, the unit starts recording the TV program shown on the TV. The TIMER indicator appears in the display window. The duration decreases minute by minute to 0:00, then the unit stops recording and turns off automatically.

## To change the duration

Press EASY TIMER repeatedly to set to the new duration. The previous duration is cleared when you set the new duration.

## To stop the unit while recording

Press ■ STOP.

## Tips

- You can use the easy timer to record other sources. In this case, connect the audio/video output jacks of the source you want to record to the LINE-1 IN jacks of the unit. Then set CONNECT L1 to OTHER in the SET UP MENU.
- If you select “End” for the recording duration, the unit stops recording at the end of the tape and turns off automatically.


# Karaoke sing-along

You can sing along with a karaoke videotape, a TV broadcast, or music played back on equipment connected to the LINE IN jacks on the unit. You can sing duets if you use an extra microphone (not supplied).

## Singing along with karaoke video tapes

### Before you start...

- Turn on the unit and the TV.
- Set the TV to the video channel.
- Connect the supplied microphone to the MIC IN 1 jack and its control plug to the CONTROL jack. To sing duets, connect an optional microphone to the MIC IN 2 jack.
- When CONNECT L1 in the SET UP MENU is set to TV (see page 34), the sound through the microphone is output only during playback. If you want to use a microphone in all modes, set CONNECT L1 in the SET UP MENU to OTHER.

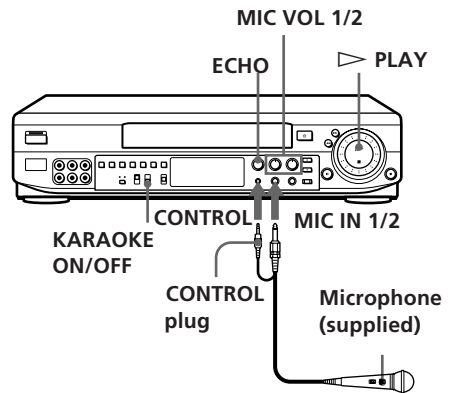

### 1 Set KARAOKE ON/OFF to ON.

“KARAOKE MODE WELCOME TO THE Sony KARAOKE WORLD” appears on the TV screen.

### 2 Insert a karaoke video tape.

The unit starts playing automatically if you insert a tape with its safety tab removed.

### 3 Press ▷ PLAY.

If you want to play back a specific song, see “Searching with the AMS or index function” on page 30.

### 4 Switch the microphone on.

Now you can enjoy singing karaoke.

### To adjust the microphone volume

Turn the MIC VOL 1 control for the microphone connected to MIC IN 1.

Turn the MIC VOL 2 control for the microphone connected to MIC IN 2.

Setting the MIC VOL 1 and/or 2 control(s) to the center position provides the best microphone volume.

## To control the echo effect

Turn the ECHO control. This adjusts both microphones' echo effect to the same level.

To get the best effect, adjust the microphone volume to a slightly higher level than the music volume.

### Tip

- When you sing along with TV broadcasts or music played back on equipment connected to the LINE IN jacks on the unit, play the music source and follow steps 1 and 4.

### Notes

- If the sound is reproduced through a stereo amplifier, turn down the volume of amplifier before operation.
- If feedback occurs, turn down the microphone or TV volume, or move the microphone away from the speakers.

## Using the supplied microphone

You can control some of the unit's karaoke functions with the microphone.

### 1 CHOI button

Press and hold to rewind the tape while viewing the picture.

 
### 2 $\flat/\sharp$ buttons

Change the pitch in Key Control mode (page 25).

Set the harmony interval in Self Duet mode (page 26).

### 3 KEY/S.D./OFF selector

Select KEY or S.D. to switch the microphone on in the Key Control mode or the Self Duet mode. Select OFF to switch the microphone off.



### Note

- The  $\flat/\sharp$  buttons on the microphone may not operate with other VCRs.

**continued**


## Karaoke sing-along (continued)

### Playing a tape in a programmed order (Karaoke Program)


You can sing songs in the order you want.

#### Before you start...


- Turn on your TV and set it to the video channel.
- Select the search mode, AMS or INDEX in the SET UP KARAOKE menu. For details, "Selecting the AMS or index function" on page 30.

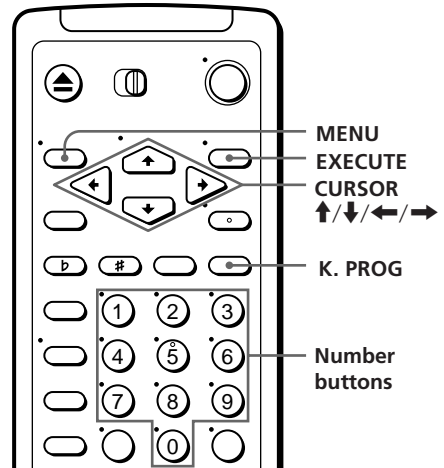

- 1 Insert a tape and set KARAOKE ON/OFF on the unit to ON.
- 2 Press K. PROG.

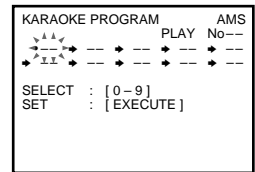

- 3 Press the number buttons to select up to ten songs in the order you want.  
For single-digit numbers, first press "0" then the song number. To correct a song number, press CURSOR ← to return to that number and reset it.
- 4 Press EXECUTE.

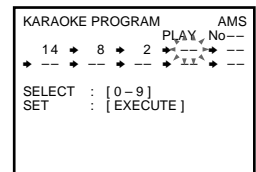

The tape automatically rewinds to the beginning, and playback starts in the order you selected.

#### To stop playing

Press ■ STOP.

#### To change the program order

Press ■ STOP and repeat steps 2 through 4 above.



### Tip

- You can also select the KARAOKE PROGRAM menu by pressing MENU and CURSOR  $\uparrow/\downarrow$ .


### Notes

- If you set KARAOKE ON/OFF to OFF, the list settings are cleared.
- When you turn off the unit, the unit exits the KARAOKE PROGRAM mode.
- When you press  $\lll / \ggg$  SEARCH AMS/INDEX while in Karaoke Program mode, the unit does not search beyond the current song, but rewinds the tape to the beginning of the song being played back, or fast-forwards to the next song. When the unit exits KARAOKE PROGRAM mode,  $\lll / \ggg$  SEARCH AMS/INDEX returns to its normal function. (See "Searching with the AMS or index function" on page 30.)
- If you press CHOI on the microphone and rewind past the beginning of the current song, the selected song order may not be played correctly.

## Displaying the karaoke information

Press DISPLAY when the KARAOKE ON/OFF switch is set to ON. The karaoke information appears on the TV screen. If you press DISPLAY once more, the remaining tape length and time counter will also appear.



To turn off the display, press DISPLAY again.

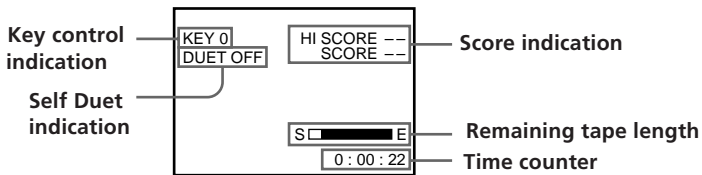

## Changing the pitch (Key Control)

While you are singing, you can change the pitch of the song to match your vocal range.

 Press KEY CONTROL  $b$  or  $\#$  repeatedly to set the pitch you want.

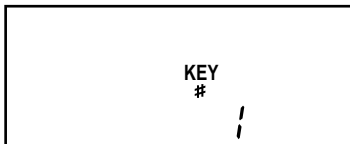

continued

## Karaoke sing-along (continued)

You can change the pitch of the song in half tone intervals.

To	Press	Range	Display window
Raise the pitch	# (sharp)	8 half tones	"#1" to "#8"
Lower the pitch	b (flat)	8 half tones	"b1" to "b8"

### To return to the original pitch

Press KEY CONTROL **b** or **#** repeatedly until "0" appears in the display window.

 
#### Tip

- You can also change the pitch with the supplied microphone.


## Adding harmony (Self Duet)

You can sing duets by yourself. The unit creates a harmony voice at the interval you want.

Press SELF DUET **b**/**#** to select a high or low harmony voice.



SELF DUET **b**/**#**

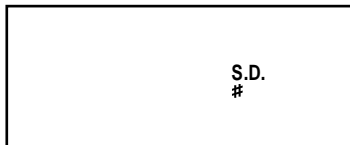

To	Press	Display window
Add a high harmony	# (sharp)	"S.D.#"
Add a low harmony	b (flat)	"S.D.b"

### To cancel the Self Duet

Press SELF DUET **b**/**#** again.

#### Tip

 
- You can also change the pitch with the supplied microphone and the remote commander.

## Reducing the playback vocals (Karaoke Pon)

This function reduces the vocals on played back music sources. You can use hi-fi stereo music sources for karaoke.

Set KARAOKE MODE to KARAOKE PON.

The singer's voice is reduced.



KARAOKE MODE

### To cancel Karaoke Pon

 
Set KARAOKE MODE to OFF.

#### Note

- Karaoke Pon does not work with the following tapes:
  - Tapes on which different vocal sounds are recorded on the left and right channels, such as a duet
  - Monaural recorded tapes
  - Tapes on which sound sources are recorded with strong echo effects and/or chorus-effects

## Backing up your singing (Vocal Assist)

This unit can assist your singing in case you forget the lyrics while you are singing. The unit fills in the vocal for you automatically if you stop singing into the microphone. Use karaoke stereo hi-fi tapes which have the accompaniment music on the left channel and the accompaniment plus vocal on the right channel.



KARAOKE MODE

Set KARAOKE MODE to VOCAL ASSIST.

### To cancel Vocal Assist

Set KARAOKE MODE to OFF.

#### Note

- Vocal Assist does not work with the following tapes:
  - Hi-fi tapes on which the same sound is recorded on the left and right channels
  - Monaural recorded tapes

 
**continued**

## Karaoke sing along (continued)


### Grading your singing

As an extra challenge, the unit can grade your singing.

- 1 Start singing and press SCORE.  
"SCORE" appears on the TV screen, and the unit starts analyzing your singing.
- 2 Press SCORE again after singing for more than one minute.  
Your score appears on the TV screen for five seconds. The highest score (HI SCORE) is saved, and is indicated above your present score.




SCORE

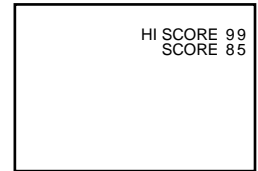

### To score automatically (Auto Score)


The unit automatically scores each song in order during Karaoke Program. Press MENU and select SET UP KARAOKE, then set AUTO SCORE to ON.

Each time a song ends, the score appears for five seconds.

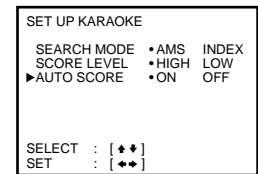

### To set the score level

This unit has two different score levels. To set the score level, press MENU and select SET UP KARAOKE. Then set SCORE LEVEL to HIGH for easy grading or LOW for strict grading.

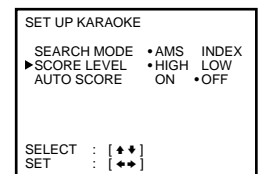

### Tips

 
- The highest possible score is 99 points.
- To display your score on the TV screen again, press DISPLAY.
- The highest score is cleared each time you set the KARAOKE ON/OFF switch to OFF.

### Note

- The grading is not absolute. Please use this function for your own amusement.

## Competing for the loudest voice

The unit measures and displays the loudness of your voice numerically when you shout into the microphone.



SHOUT


### 1 Press SHOUT.

“SHOUT” appears in the display window and the unit starts a countdown on the TV screen.

### 2 Shout into the microphone when the unit counts down to 0.

While you are shouting, the highest score (MAX LEVEL) and your current shout level are displayed on the TV screen with a level meter. Below the level meter, a bar appears every second to show the changes in your shout level.

After five seconds, the measurement is complete, and the highest score (MAX LEVEL) and your score (YOUR LEVEL) appear.

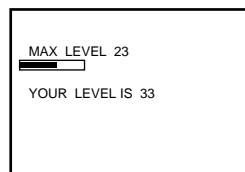

### Tips


- To exit SHOUT mode, press SHOUT again.
- The highest score (MAX LEVEL) is cleared each time you set the KARAOKE ON/OFF switch to OFF.

### Note

- Adjust the MIC VOL control to the center position and turn down the TV volume.

# Searching with the AMS or index function

You can search for the start of a specific passage or scene. There are two ways for automatic searching depending on the way the tape was recorded.

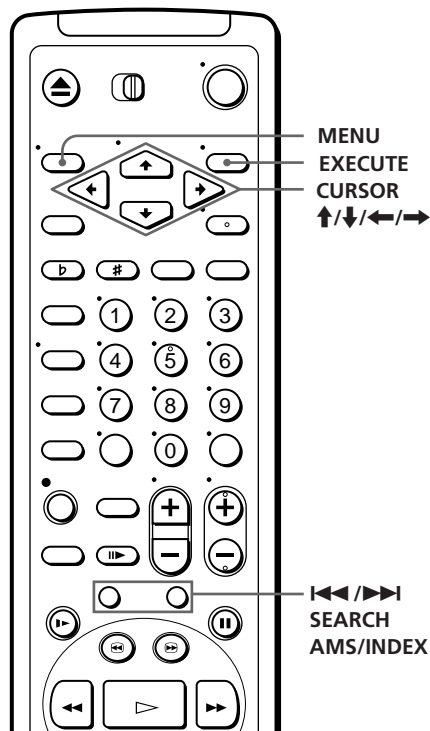


## Selecting the AMS or index function

The AMS (Automatic Music Sensor) function is mainly for karaoke tapes. It searches for blank spaces (of at least four seconds) between recorded signals on the sound track of a tape. Use this function to search an index-incompatible tape. If you are not sure of the way the tape was recorded, try AMS first.

The index function is for indexed tapes like the tapes recorded with this unit. The unit marks the tape with an index signal at the point where each recording begins. When you use commercially prerecorded tape, check the packaging to see if the tape is index-compatible.


- 1 Press MENU and select SET UP KARAOKE, then press EXECUTE.
- 2 Press CURSOR  $\uparrow/\downarrow/\leftarrow/\rightarrow$  to select SEARCH MODE, then select either AMS or INDEX.
- 3 Press EXECUTE.

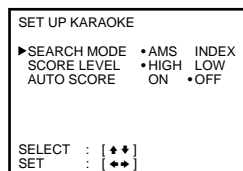

## Searching with the AMS function

The unit can search up to 99 blank spaces ahead of or behind the current position.

- 1 Set KARAOKE ON/OFF on the unit to ON.
- 2 Insert a tape into the unit.
- 3 Press ◀◀/▶▶ SEARCH AMS/INDEX repeatedly to specify how many blank spaces ahead or behind you want to search:
  - To search ahead, press ▶▶ SEARCH AMS/INDEX.
  - To search backwards, press ◀◀ SEARCH AMS/INDEX.

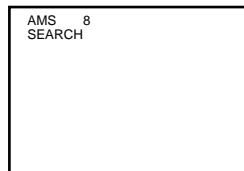

The unit starts searching and the number of blank spaces on the TV screen counts down to zero. Playback starts automatically from that point.


### To stop searching

Press ■ STOP.

## Searching with the index function

The unit can search up to 99 index signals ahead of or behind the current position.

- 1 Insert an indexed tape into the unit.
- 2 Press ◀◀/▶▶ SEARCH AMS/INDEX repeatedly to specify how many index signals ahead or behind you want to search:
  - To search ahead, press ▶▶ SEARCH AMS/INDEX.
  - To search backwards, press ◀◀ SEARCH AMS/INDEX.

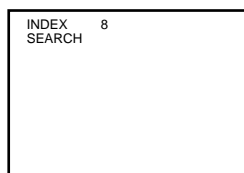

The unit starts searching and the index number on the TV screen counts down to zero. Playback starts automatically from that point.

### To stop searching

 
Press ■ STOP.

### Notes

- No index signal will be added when recording starts from recording pause.
- The AMS function only works when the KARAOKE ON/OFF switch is set to ON.
- You cannot use the AMS function on tapes that have many blank spaces in a short time span such as dramas and dialogues.

# Enjoying the surround sound (Virtual Sound)

You can use the Virtual Sound function to give stereo sources the surround sound effect and monaural sources a simulated stereo effect.



VIRTUAL SOUND switch

EFFECT button  
WIDE/WARP indicators

- 1 Select the type of sound source with the VIRTUAL SOUND switch. Select SURROUND when listening to a stereo source; select SIMULATED STEREO for a monaural source.
- 2 Press EFFECT so the WIDE or WARP indicator lights up.

## Virtual sound

Type	Effect	For
SURROUND (stereo)	WIDE	A sound effect that spreads out over a large area
	WARP	A sound effect that totally envelopes you in sound
SIMULATED STEREO (monaural)	WIDE	A simulated stereo effect
	WARP	A wide ranging simulated stereo effect

## To cancel the Virtual Sound

Press EFFECT repeatedly until both WIDE/WARP indicators turn off.


### Notes




- This function is available only when the tape sound is reproduced on a stereo TV (or other stereo audio equipment). If the connected TV or other audio equipment is monaural or simulated stereo, you cannot get a clear effect.
- We recommend that you do not use the surround effect function of this unit and that of the connected TV (or other audio equipment) at the same time. If you do so, the function may not work properly because the effects overlap each other.




# Adjusting the picture

## Adjusting the tracking

Although the unit automatically adjusts the tracking when playing a tape (the  indicator flashes in the display window, then goes off), distortion may occur if the tape was recorded in poor condition. In this case, manually adjust the tracking.

Press TRACKING NORM/SLOW  /  to display the tracking meter. The distortion should disappear as you press one of the two buttons (The  indicator lights up).


If you cannot get a clear picture with manual adjustment, press TRACKING AUTO/MANU to return to automatic adjustment.

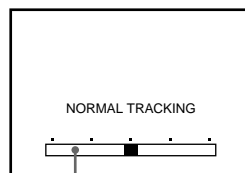

Tracking meter

## About Adaptive Picture Control (APC)

Adaptive Picture Control (APC) automatically improves recording and playback quality by adjusting the unit to the condition of the video heads and tape. To maintain better picture quality, we recommend that you set APC to ON in the SET UP MENU (with the APC indicator in the display window lit).

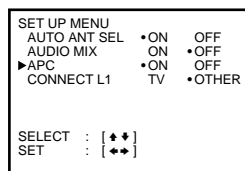

### APC playback

The APC function automatically works on all types of tapes, including rental tapes and tapes that were not recorded with APC.




### APC recording

Whenever you insert a tape and start recording for the first time, the unit adjusts to the tape using the APC function (the APC indicator flashes rapidly). This adjustment is retained until the tape is ejected.

### To deactivate the APC


Press MENU and select SET UP MENU, then set APC to OFF. The APC indicator in the display window goes off.

### Notes

- The auto tracking adjustment cannot be guaranteed to work with tapes recorded in LP mode on other VCRs.
- There is a delay of a few seconds before the unit actually starts recording while the unit analyzes the tape. To avoid the delay, first set the unit to recording pause (the APC indicator flashes slowly) and press  REC to have the unit analyze the tape (the APC indicator flashes rapidly). After the APC indicator stops flashing, press  PAUSE to start recording immediately. If you want to start recording quickly without using the APC function, first set the unit to recording pause (the APC indicator flashes slowly) and press  PAUSE to start recording.

# Changing menu options

- 1 Press MENU, then select SET UP MENU.

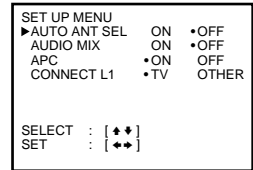

- 2 Press CURSOR **↑/↓** to select the option to change, then press CURSOR **←/→** to change the setting.
- 3 Press EXECUTE to return to the original screen.


## Menu choices

Initial settings are indicated in bold print.

Menu option	Set this option to
AUTO ANT SEL	<ul style="list-style-type: none"> <li>• <b>ON</b> if your TV is connected only to VHF/UHF OUT on the unit. To play a tape, set the TV to the channel (3 or 4) for the unit.</li> <li>• <b>OFF</b> if your TV is connected to LINE OUT on the unit. To play a tape, set the TV to the video input.</li> </ul>
AUDIO MIX	<ul style="list-style-type: none"> <li>• <b>ON</b> to listen to the hi-fi and normal audio tracks at the same time. The AUDIO MONITOR button will not function.</li> <li>• <b>OFF</b> to listen to hi-fi and normal audio tracks separately. Select the sound using the AUDIO MONITOR button.</li> </ul> <p>For details, see page 14.</p>
APC	<ul style="list-style-type: none"> <li>• <b>ON</b> to switch on the APC (Adaptive Picture Control) function and improve picture quality.</li> <li>• <b>OFF</b> to switch off APC.</li> </ul> <p>For details, see page 33.</p>
CONNECT L1	<ul style="list-style-type: none"> <li>• <b>TV</b> to record TV programs using the LINE-1 IN jacks.</li> <li>• <b>OTHER</b> to record other audio/video sources using the LINE-1 IN jacks.</li> </ul> <p>For details, see page 9.</p>

# Hooking up to a VCR or stereo system

## How to hook up to record on this unit

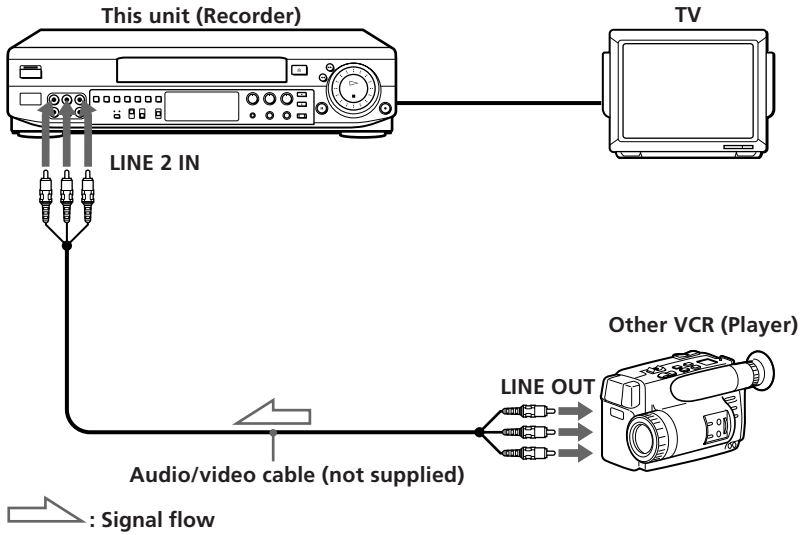

## How to hook up to a stereo system

Connect LINE 2 IN AUDIO on this unit to the audio output jacks on the stereo system, using an audio cable (not supplied).

### Notes


- You can also use the LINE-1 IN jacks instead. If you do, set CONNECT L1 to OTHER in the SET UP MENU.
- Make sure you connect the plugs to jacks of the same color.
- If the other VCR is a monaural type, connect the audio plug to the AUDIO L (white) jack. The sound is recorded on both right and left channels. When connecting to the AUDIO R (red) jack, the sound is recorded only on the right channel.
- If you connected this unit to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.

# Basic editing

## (when recording on this unit)

### Before you start editing

- Turn on your TV and set it to the video channel.
- Press INPUT SELECT on the unit to display “L2”(or “L1”) in the display window.
- Press TAPE SPEED to select the tape speed, SP or EP.

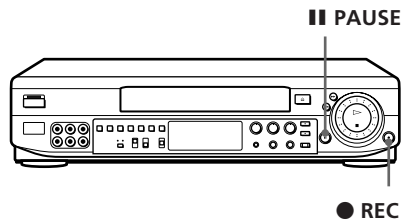

- 1** Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2** Insert a tape with its safety tab in place into this (recording) unit. Search for the point to start recording and press **|| PAUSE**.
- 3** Press **● REC** on this unit and set it to recording pause.
- 4** To start editing, press the **|| PAUSE** buttons on both units at the same time.

### To stop editing

Press the **■ STOP** buttons on both units.

### Tips

- To edit more precisely, press the **|| PAUSE** buttons on the units to release pause.
- To cut out unwanted scenes while editing, press **|| PAUSE** on this unit when an unwanted scene begins. When it ends, press **|| PAUSE** again to resume recording (Assemble editing).
- You can dub sound onto the normal audio track through a microphone while editing. Set KARAOKE ON/OFF to ON before you start dubbing. When you edit using other equipment connected to the LINE-1 IN jacks of the unit, set CONNECT L1 in the SET UP MENU to OTHER. If CONNECT L1 is set to TV, sound from the microphone is not recorded.

### Note

- If you start recording following the procedure above, the unit won't start recording with the APC function. To record a tape with the APC function, press **● REC** again during recording pause in step 3 so that the unit analyses the tape. Then when you start recording in step 4, press **|| PAUSE** after the APC indicator stops flashing. If you press **|| PAUSE** before the APC indicator stops flashing, the APC function is cancelled.


# Audio dubbing

This feature lets you record over the normal audio track. The monaural sound previously recorded is replaced while the original hi-fi sound remains unchanged. Use this feature to add commentary to a tape that you have recorded with a camcorder. You can also record your karaoke performances.

## Audio dubbing from a stereo system or other external source

### Before you start dubbing

- Turn on your TV and set it to the video channel.
- Press INPUT SELECT on the unit to display "L2" (or "L1") in the display window.

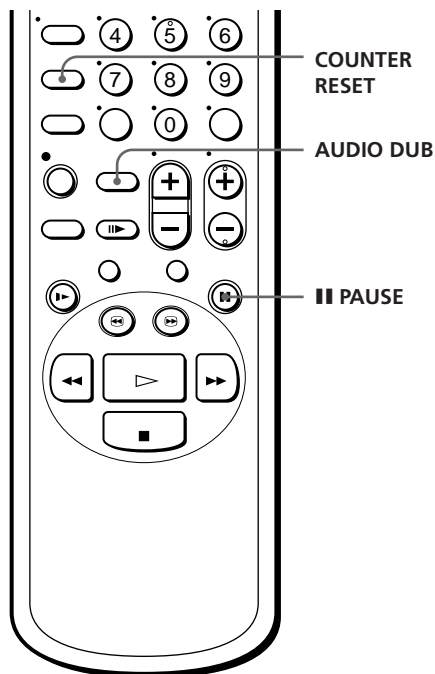

- 1** Insert a source tape into the stereo system (or the playback VCR). Search for the point to start playback and set it to playback pause.
- 2** Insert a prerecorded tape into this (recording) unit. Search for the end of the section to be replaced and press **|| PAUSE**.  
Make sure that the tape has its safety tab in place.
- 3** Press COUNTER RESET to reset the counter to "0H00M00S."
- 4** Rewind the prerecorded tape to the beginning of the section to be replaced.  
The unit pauses.
- 5** Press AUDIO DUB.  
The audio dubbing indicator  $\ominus$  appears in the display window.
- 6** To start editing, press the **|| PAUSE** buttons on this unit and the stereo system (or other VCR) at the same time.  
When the counter reaches "0H00M00S," audio dubbing stops automatically.

### To stop while editing

Press the **■ STOP** buttons on this unit and the stereo system (or other VCR).

**continued**

## Audio dubbing (continued)

### To listen to both the hi-fi and normal audio

Set AUDIO MIX to ON in the SET UP MENU (page 34). Use this feature to listen to dubbed audio over the original hi-fi audio. When AUDIO MIX is set to ON, the AUDIO MONITOR button does not function. Remember to reset AUDIO MIX to OFF after playing the tape.

### To listen to the dubbed sound (normal audio)


Press AUDIO MONITOR until the “L,” “R,” and “STEREO” indicators go off in the display window.

## Audio dubbing from the microphone

Using the microphone, you can add songs or narration on a recorded tape. Sound from the microphone is mixed with the original hi-fi sound and recorded on the normal audio track.

### Before you start dubbing

- Connect the microphone(s) to the MIC IN 1 and/or 2 jack(s), and turn on the microphone(s).

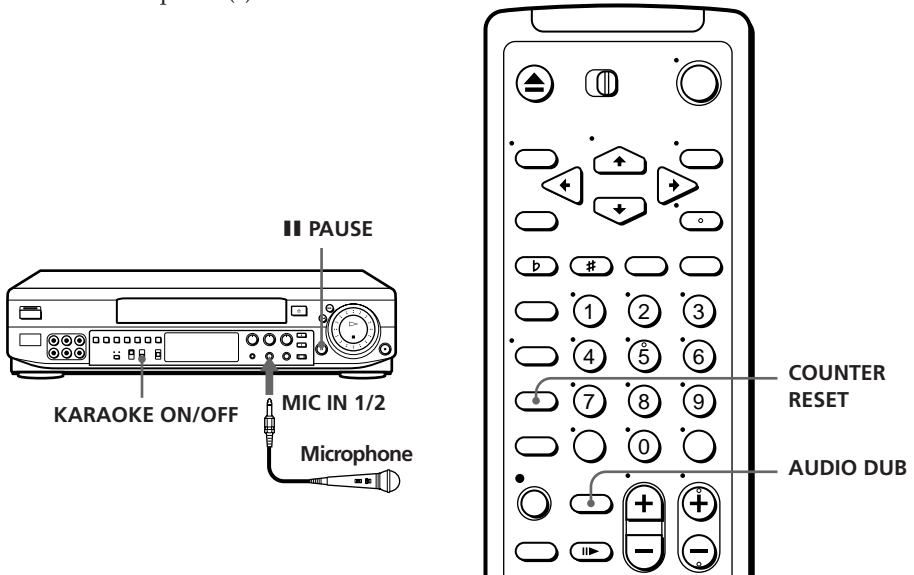

- 1 Set KARAOKE ON/OFF to ON.
- 2 Insert the prerecorded tape into the unit. Search for the end of the section to be replaced and press **|| PAUSE**.  
Make sure that the tape has its safety tab in place.

- 3** Press COUNTER RESET to reset the counter to "0H00M00S."
- 4** Rewind the prerecorded tape to the beginning of the section to be replaced.  
The unit pauses.
- 5** Press AUDIO DUB.  
The audio dubbing indicator ⊖ appears in the display window.
- 6** To start editing, press ■ PAUSE to start dubbing and sing or speak into the microphone.  
When the counter reaches "0H00M00S," audio dubbing stops automatically.

#### **To stop while recording**

Press ■ STOP.

#### **To listen to the dubbed sound**

Press AUDIO MONITOR until the "L," "R," and "STEREO" indicators go off in the display window.

#### **To record sound from the microphone mixed with an external source**

If you connect equipment such as a laser disc player to this unit's LINE 2 IN jacks, you can record while singing along to a karaoke LD. Be sure to press INPUT SELECT on the unit to display "L2" before starting recording. The mixed sound is recorded on the normal audio track, and the sound input from the LINE 2 IN jacks is recorded on the hi-fi audio track.

#### **Tip**

- When dubbing from the microphone, you can use the functions of echo effect, Key Control, and Self Duet.


#### **Note**

- Recording stops if you press COUNTER RESET while audio dubbing.

# General setup information

## Attaching the external antenna connector


When using a 300-ohm twin lead cable for a VHF/UHF antenna, use an antenna connector (not supplied) to connect the antenna to the unit.

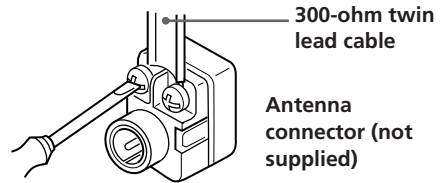

- 1 Loosen the screws on the antenna connector.
- 2 Wind the twin leads around the screws on the antenna connector.
- 3 Retighten the screws.

## Attaching a UHF/VHF band mixer

When using both a 75-ohm coaxial cable and a 300-ohm twin lead cable for a VHF/UHF antenna, use a UHF/VHF band separator/mixer (not supplied) to connect the antenna to the unit.

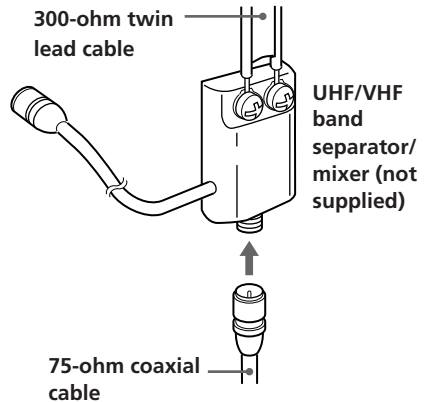

- 1 Loosen the screws on the mixer.
- 2 Wind the twin leads around the screws on the mixer.
- 3 Retighten the screws.
- 4 Connect the 75-ohm coaxial cable to the mixer.


 

 


# Troubleshooting

If you have any questions or problems not covered below, please consult your nearest Sony service facility.

	Symptom	Remedy
Power	The POWER switch does not function.	<ul style="list-style-type: none"> <li>Connect the AC power cord securely.</li> </ul>
	The power is turned on but the unit does not operate.	<ul style="list-style-type: none"> <li>Moisture condensation occurs. Turn the power off, unplug the AC power cord and leave the unit to dry for over one hour.</li> </ul>
Playback	The playback picture does not appear on the TV screen.	<ul style="list-style-type: none"> <li>Make sure the TV is set to the video channel. If you are using a monitor, set it to video input.</li> </ul>
	The picture is not clear.	<ul style="list-style-type: none"> <li>Adjust the tracking with the TRACKING NORM/ SLOW ◀/▶ buttons.</li> <li>The video heads are dirty (see below). Clean the video heads using the Sony V-25CL video head cleaning cassette. If this cleaning cassette is not available in your area, have the heads cleaned at your nearest Sony service facility (a standard service charge will be required). Do not use a commercially available wet-type cleaning cassette, as it may damage the video heads.</li> <li>The video heads may have to be replaced. Consult your local Sony dealer for more information.</li> </ul>
	The picture rolls vertically during picture search.	<ul style="list-style-type: none"> <li>Adjust the vertical hold control on the TV or monitor.</li> </ul>
	The picture has no sound.	<ul style="list-style-type: none"> <li>The tape is defective. Use a new tape.</li> </ul>
	The sound is unstable or has an echo.	<ul style="list-style-type: none"> <li>When you play a tape with the same sound recorded on both the hi-fi and normal sound tracks, make sure the AUDIO MIX option in the SET UP MENU is set to OFF.</li> </ul>

## Symptoms caused by contaminated video heads

• Normal picture	• Rough picture	• Unclear picture	• No picture (or black & white screen appears)
			
	initial contamination	→	terminal

continued

## Troubleshooting (continued)

	Symptom	Remedy
Recording	The tape starts playing as soon as it is inserted.	<ul style="list-style-type: none"> <li>The safety tab has been removed. To record on this tape, cover the tab hole.</li> </ul>
	The tape is ejected when you press ● REC.	<ul style="list-style-type: none"> <li>Check that the safety tab has not been removed.</li> </ul>
	Nothing happens when you press ● REC.	<ul style="list-style-type: none"> <li>Make sure the tape is not at its end.</li> <li>Select the correct source with the INPUT SELECT button.</li> </ul>
Others	A tape cannot be inserted.	<ul style="list-style-type: none"> <li>Check that a tape isn't already in the tape compartment.</li> </ul>
	The remote commander does not function.	<ul style="list-style-type: none"> <li>Make sure you are pointing the remote commander at the remote sensor on the unit.</li> <li>Replace all the batteries in the remote commander with new ones if they are weak.</li> <li>Make sure the <b>TV</b>/<b>VIDEO</b> remote control switch is set correctly.</li> </ul>
	The tracking meter does not appear on the screen.	<ul style="list-style-type: none"> <li>The recording condition of the tape is very poor and tracking cannot be adjusted.</li> </ul>
	The unit needs to be cleaned.	<ul style="list-style-type: none"> <li>Clean the cabinet, panel, and controls with a dry, soft cloth, or a soft cloth slightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzine.</li> </ul>
	The AMS function does not work properly.	<ul style="list-style-type: none"> <li>The tape has too many blank spaces in a short time span. Change SEARCH MODE in the SET UP KARAOKE menu from AMS to INDEX.</li> </ul>

# Specifications

## System

- Format
  - VHS NTSC standard
- Video recording system
  - Rotary head helical scanning FM system
- Video heads
  - Double azimuth four heads
- Video signal
  - NTSC color, EIA standards
- Tape speed
  - SP: 33.35 mm/s (1 <sup>3</sup>/<sub>8</sub> inches/s)
  - EP: 11.11 mm/s (7/<sub>16</sub> inches/s)
  - LP: 16.67 mm/s (11/<sub>16</sub> inches/s), playback only
- Maximum recording/playback time
  - 8 hrs. in EP mode (with T-160 tape)
- Fast-forward and rewind time
  - Approx. 3 min. (with T-120 tape)
- RF output channel
  - VHF channel 3 or 4
- Antenna
  - 75-ohm antenna terminal for VHF/UHF

## Inputs and outputs

- LINE-1 IN and LINE 2 IN
  - VIDEO IN, phono jacks (1 each)
    - Input signal: 1 V<sub>p-p</sub>, 75 ohms, unbalanced, sync negative
  - AUDIO IN, phono jacks (2 each)
    - Input level: 327 mVrms
    - Input impedance: more than 47 kilohms
- LINE-1 OUT and LINE 2 OUT
  - VIDEO OUT, phono jacks (1 each)
    - Output signal: 1 V<sub>p-p</sub>, 75 ohms, unbalanced, sync negative
  - AUDIO OUT, phono jacks (2 each)
    - Standard output: 327 mVrms
    - Load impedance: 47 kilohms
    - Output impedance: less than 10 kilohms

## General

- Power requirements
  - 110 – 240 V AC, 50/60 Hz
- Power consumption
  - 25 W
- Operating temperature
  - 5°C to 40°C
- Storage temperature
  - 20°C to 60°C
- Dimensions
  - Approx. 430 × 100 × 282 mm (w/h/d) including projecting parts and controls
- Mass
  - Approx. 4.5 kg

## Supplied accessories


- Remote commander (1)
- Size AA (R6) batteries (2)
- 75-ohm coaxial cable with F-type connectors (1)
- Audio/video cable (3-phono to 3-phono) (1)
- Microphone (1)
- Plug adaptor (1)

Design and specifications are subject to change without notice.


# Index to parts and controls

Refer to the pages indicated in parentheses ( ) for details.

## Front panel

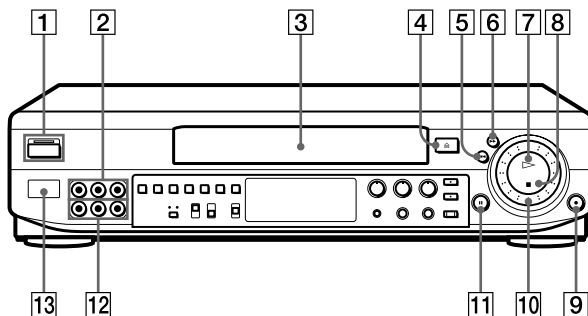

- |   |  |
|---|--|
| <b>1</b> POWER switch/indicator (11)          | <b>8</b> ■ STOP button (13)                |
| <b>2</b> LINE 2 IN VIDEO/AUDIO L/R jacks (35) | <b>9</b> ● REC (record) button (16)        |
| <b>3</b> Tape compartment                     | <b>10</b> CLICK SHUTTLE ring (20)          |
| <b>4</b> ▲ EJECT button (13)                  | <b>11</b>    PAUSE button (13)             |
| <b>5</b> ◀◀ REW (rewind) button (13, 19)      | <b>12</b> LINE 2 OUT VIDEO/AUDIO L/R jacks |
| <b>6</b> ▶▶ FF (fast-forward) button (13, 19) | <b>13</b> Remote sensor (5)                |
| <b>7</b> ▷ PLAY button (12)                   |  |

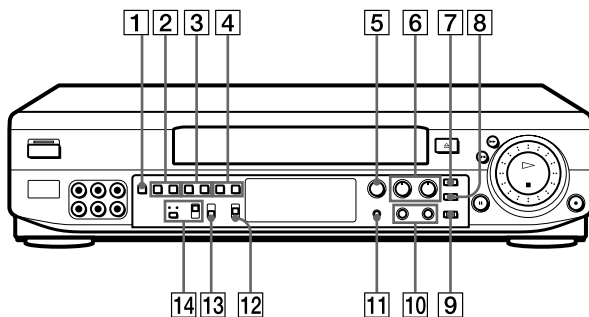


- |   |   |
|---|---|
| <b>1</b> TV/VIDEO button (11)                   | <b>9</b> EASY TIMER button (21)                           |
| <b>2</b> SELF DUET <b>b/#</b> buttons (26)      | <b>10</b> MIC IN 1/2 jacks (22)                           |
| <b>3</b> KEY CONTROL <b>b/#</b> buttons (25)    | <b>11</b> CONTROL jack (22)                               |
| <b>4</b> SHOUT button (29)<br>SCORE button (28) | <b>12</b> KARAOKE MODE switch (27)                        |
| <b>5</b> ECHO control (23)                      | <b>13</b> KARAOKE ON/OFF switch (22)                      |
| <b>6</b> MIC VOL 1/2 controls (22)              | <b>14</b> VIRTUAL SOUND switch (32)<br>EFFECT button (32) |
| <b>7</b> INPUT SELECT button (16)               | WIDE/WARP indicators (32)                                 |
| <b>8</b> TAPE SPEED button (16)                 |   |

**continued**


## Index to parts and controls (continued)

### Display window

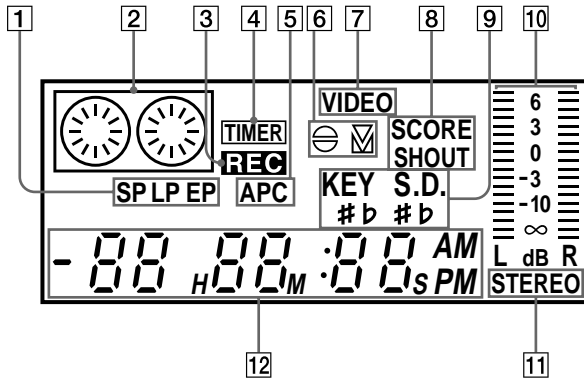

- |  |   |
|--|---|
| <b>1</b> Tape speed indicator (17)                     | <b>8</b> SCORE/SHOUT indicators (28, 29)                            |
| <b>2</b> Tape indicator (17)                           | <b>9</b> KEY/S.D.(Self Duet)/#/b indicators (25, 26)                |
| <b>3</b> REC (record) indicator (17)                   | <b>10</b> Audio channel/sound level indicator (14)                  |
| <b>4</b> TIMER indicator (21)                          | <b>11</b> STEREO indicator (14)                                     |
| <b>5</b> APC (Adaptive Picture Control) indicator (33) | <b>12</b> Time counter/line/pitch adjustment indicator (13, 16, 25) |
| <b>6</b> ⊖ (Audio dub) indicator (37)                  |   |
| ⊞ (Tracking) indicator (33)                            |   |
| <b>7</b> VIDEO indicator (11)                          |   |

## Rear panel

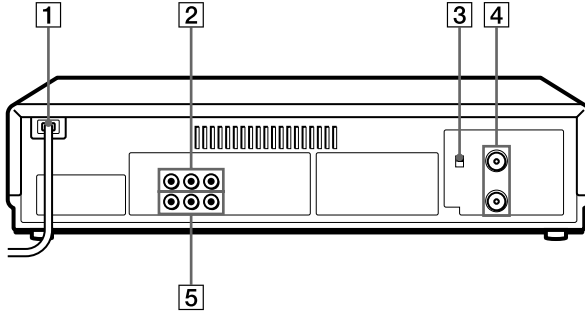


- 1** AC power cord (6)
- 2** LINE-1 IN AUDIO R/L/VIDEO jacks (9)
- 3** RF (Radio Frequency) UNIT switch (11)
- 4** VHF/UHF IN/OUT connectors (10)
- 5** LINE-1 OUT AUDIO R/L/VIDEO jacks (7)

continued


## Index to parts and controls (continued)

### Remote commander

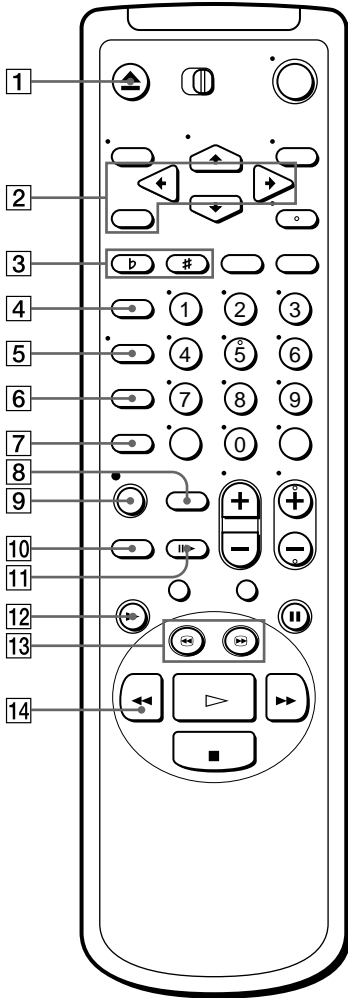

- 1 ▲ EJECT button (13)
- 2 Tracking buttons  
TRACKING NORM(normal)/  
SLOW ◀/▶ buttons (33)  
TRACKING AUTO/MANU  
(manual) button (33)
- 3 SELF DUET b/# buttons (26)
- 4 EFFECT button (32)
- 5 DISPLAY button (17)
- 6 COUNTER RESET button (13)
- 7 REPLAY button (13)
- 8 AUDIO DUB button (37)
- 9 ● REC (record) button (16)
- 10 TRINITRON TV SYNCHRO PLAY  
button (15)
- 11 ||▶ FRAME button (19)
- 12 ▶▶ SLOW button (19)
- 13 ◀▶/▶▶ SEARCH buttons (19)
- 14 ◀◀ REW (rewind) button (13, 19)



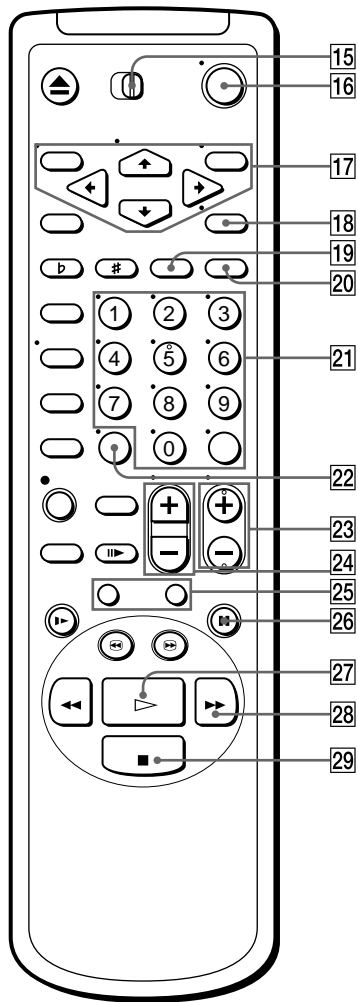

15 TV / VIDEO remote control switch (5)

16 POWER switch (11)

17 Menu buttons (34)

MENU button  
 CURSOR ↑/↓/←/→ buttons  
 EXECUTE button

18 AUDIO MONITOR button (14)

19 SCORE button (28)

20 K. PROG (Karaoke Program) button (24)

21 Number / ENTER buttons (24)

22 TV / VIDEO button (11)

23 CH (channel) +/- buttons (for TV)

24 VOL (volume) +/- buttons (for TV)

25 ◀◀ / ▶▶ SEARCH AMS / INDEX buttons (31)

26 ■ PAUSE button (13)

27 ▷ PLAY button (12)

28 ▶▶ FF (fast-forward) button (13, 19)

29 ■ STOP button (13)





---

# Index

## A, B

AMS (Automatic Music Sensor) searching 30  
Antenna hookup 10  
APC (Adaptive Picture Control) 33  
Audio track 18  
Audio/video (A/V) hookup 7, 9

## C

Cleaning the video heads 41  
Connecting

- external antenna connector 40
- the unit and your TV 7
- to a stereo system 7
- to a TV with audio/video output jacks 9
- UHF/VHF band mixer 40

Counter 13

## D

Dubbing. *See* Editing

## E, F, G

Easy timer 21  
Editing 35  
EP mode 16

## H

Hi-fi audio track 18

## I, J

Index searching 30

## K

Karaoke sing-along 22

- Competing for the loudest voice 29
- Grading your singing 28
- Karaoke Pon 27
- Karaoke Program 24
- Key Control 25
- Self Duet 26
- Vocal Assist 27

## L

LP mode 14

## M

Monitoring during playback 14

## N, O

Normal audio track 18

## P, Q

Picture adjustment 20, 33  
Playback 12

- at various speeds 19
- frame-by-frame 19
- slow motion 19

## R

Recording

- bilingual programs 17
- from a TV 16
- saving 18
- stereo programs 17

Remote commander 5

## S

Safety tab 18  
Searching

- at various speeds 19
- using the index/AMS function 30

SP mode 16

## T, U

Tracking adjustment 33  
Trinitron TV Synchro Play 15

## V, W, X, Y, Z

Virtual Sound 32