

**SONY** 3-864-879-41(1)

# Radio Cassette Player

Operating Instructions

Használati útmutató

Инструкции за експлоатация

Инструкция по експлуатации

© 1998 by Sony Corporation Printed in Malaysia



## WM-FX275/FX271

©1998 by Sony Corporation

Printed in Malaysia



#### SAFETY NOTES ON THE UNIT

##### WARNING

- To prevent fire or shock hazard, do not expose the unit to rain or moisture.
- Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/ earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.
- To prevent shock hazards, never open the unit while it is connected to the power source.

##### CAUTION

- Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.
- Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

#### SAFETY NOTES ON POWER SOURCES

To avoid battery leakage, fire, damage, explosion, etc., follow the descriptions below.

##### DANGER

- Do not carry the dry batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.

##### WARNING

- Use only the recommended AC power adaptor (not supplied). Check also the local voltage to avoid a short circuit to the AC power adaptor.
- To disconnect the AC power adaptor, only use the plug and not the cable.
- Do not charge a dry battery.
- Check the ⓘ and Ⓜ on the batteries, and be sure to insert them like the illustration in this manual.

##### CAUTION

- When you are not going to use your Walkman for a long time, remove the batteries to prevent damage from battery leakage and corrosion.

#### Precautions

- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- Do not wind the headphones/earphones cord around the unit. The buttons may be kept pressed, causing unnecessary battery usage.
- Do not use cassettes longer than 90 minutes except for long continuous playback.
- If the unit has not been used for a long time, set it in the playback mode to warm it up for a few minutes before inserting a cassette.
- For cleaning the case, use a soft cloth slightly moistened with mild detergent solution. Do not use alcohol, benzine or thinner.

If you have any questions or problem concerning your Walkman, please consult your nearest Sony dealer.

## Specifications

- Frequency range

FM: 65 ~ 74/87.5 ~ 108 MHz (Eastern Europe)
87.5 ~ 108 MHz (Other countries)
AM: 530 ~ 1,710 kHz (North, Central, and South America)
531 ~ 1,602 kHz (Other countries)
- Power requirements

3V DC batteries R6 (AA) × 2/External DC 3V power sources
- Dimensions

91.4 × 115.5 × 35.9 mm (3 7/8 × 4 1/2 × 1 7/16 inches) (w/h/d) incl. projecting parts and controls
- Mass

Approx. 150g (5.3 oz.)
- Approx. 230g (8.2 oz) incl. batteries and a tape
- Supplied accessories

Stereo headphones or Stereo earphones (1)/Carrying case (1)
Design and specifications are subject to change without notice.

# WALKMAN

## WM-FX275/FX271

©1998 by Sony Corporation

Printed in Malaysia



#### SAFETY NOTES ON THE UNIT

##### WARNING

- To prevent fire or shock hazard, do not expose the unit to rain or moisture.
- Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/ earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.
- To prevent shock hazards, never open the unit while it is connected to the power source.

##### CAUTION

- Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.
- Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

#### SAFETY NOTES ON POWER SOURCES

To avoid battery leakage, fire, damage, explosion, etc., follow the descriptions below.

##### DANGER

- Do not carry the dry batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.

##### WARNING

- Use only the recommended AC power adaptor (not supplied). Check also the local voltage to avoid a short circuit to the AC power adaptor.
- To disconnect the AC power adaptor, only use the plug and not the cable.
- Do not charge a dry battery.
- Check the ⓘ and Ⓜ on the batteries, and be sure to insert them like the illustration in this manual.

##### CAUTION

- When you are not going to use your Walkman for a long time, remove the batteries to prevent damage from battery leakage and corrosion.

#### Precautions

- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- Do not wind the headphones/earphones cord around the unit. The buttons may be kept pressed, causing unnecessary battery usage.
- Do not use cassettes longer than 90 minutes except for long continuous playback.
- If the unit has not been used for a long time, set it in the playback mode to warm it up for a few minutes before inserting a cassette.
- For cleaning the case, use a soft cloth slightly moistened with mild detergent solution. Do not use alcohol, benzine or thinner.

If you have any questions or problem concerning your Walkman, please consult your nearest Sony dealer.

## Specifications

- Frequency range

FM: 65 ~ 74/87.5 ~ 108 MHz (Eastern Europe)
87.5 ~ 108 MHz (Other countries)
AM: 530 ~ 1,710 kHz (North, Central, and South America)
531 ~ 1,602 kHz (Other countries)
- Power requirements

3V DC batteries R6 (AA) × 2/External DC 3V power sources
- Dimensions

91.4 × 115.5 × 35.9 mm (3 3/8 × 4 1/2 × 1 7/16 inches) (w/h/d) incl. projecting parts and controls
- Mass

Approx. 150g (5.3 oz.)
- Approx. 230g (8.2 oz) incl. batteries and a tape
- Supplid accessories

Stereo headphones or Stereo earphones (1)/Carrying case (1)
Design and specifications are subject to change without notice.

WALKMAN is a registered trademark of Sony Corporation. A WALKMAN a Sony Corporation bejegyzett védjegye. WALKMAN е регистрирана търговска марка на Sony Corporation.

WALKMAN является зарегистрированным товарным знаком корпорации Sogy.

Sony online http://www.world.sony.com/

© 1998 by Sony Corporation Printed in Malaysia

©1998 by Sony Corporation

Printed in Malaysia



© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

 
© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia


© 1998 by Sony Corporation Printed in Malaysia

© 1998 by Sony Corporation Printed in Malaysia

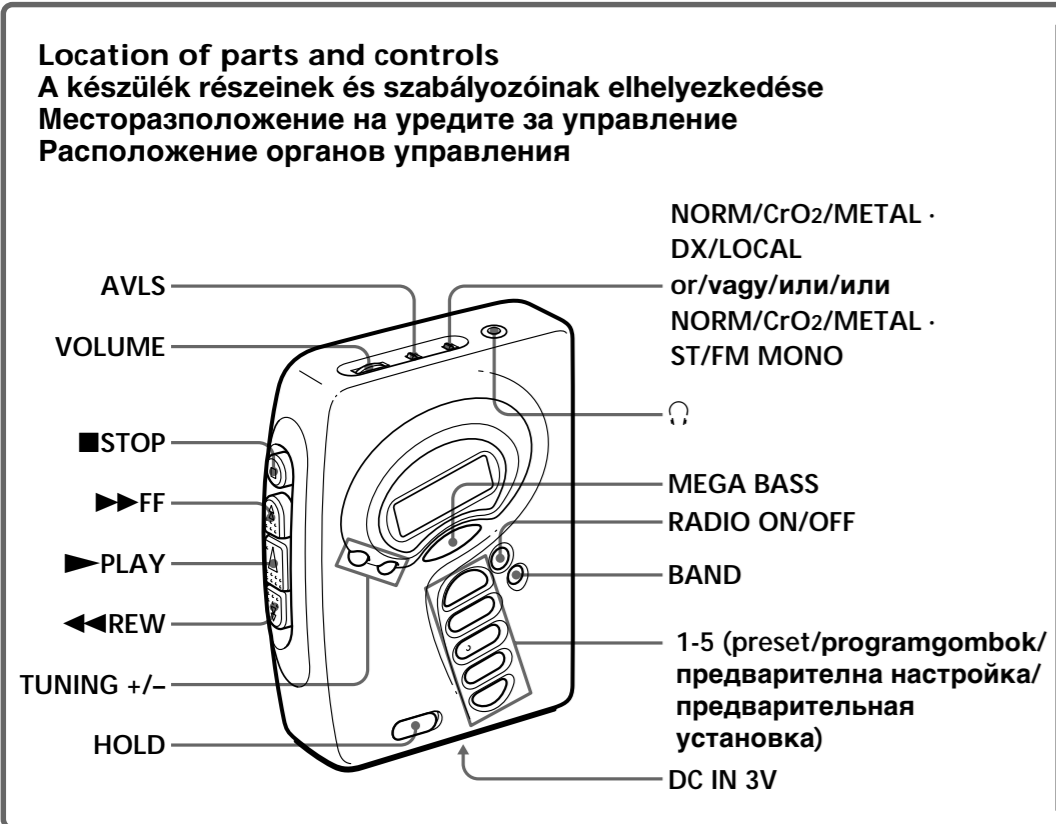


## Playing a tape

 - Set NORM•CrO<sub>2</sub>/METAL to match the tape type.

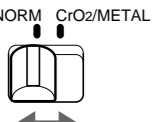

- Insert a cassette and press ► PLAY.

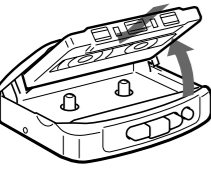 

To	Press
Stop playback	■ STOP
Fast-forward or rewind the tape*	►► FF or ◄◄ REW

#### \*Note on fast-forward and rewind

- If you leave the unit after the tape has been wound or rewound, the batteries will be consumed rapidly. Be sure to press ■ STOP.

#### Note

Do not open the cassette holder while the tape is running.

## Listening to the radio

- Press RADIO ON/OFF.
- Make sure the HOLD function is turned off. If it is on, slide the HOLD switch to turn it off.
- Press BAND to select the band (FM1, FM2, FM3, FM4, FM5 or AM). Each time you press the button, the display changes as shown in fig. **D**.
- Press TUNING +/- to tune to the station you want.

**To turn off the radio**  
Press RADIO ON/OFF.

#### To tune the station quickly

Hold down TUNING +/- for a few seconds in step 4. The Walkman starts scanning for stations and stops for a second each time a station is tuned. When the desired frequency digits appear, press TUNING +/- to stop scanning.

 
#### To improve broadcast reception

For FM, extend the headphones/earphones cord or adjust DX/LOCAL or ST/FM MONO.

For AM, reorient the unit itself.


#### Note

If the broadcast becomes noisy when a cassette with a metallic shell or label is inserted, remove the cassette.

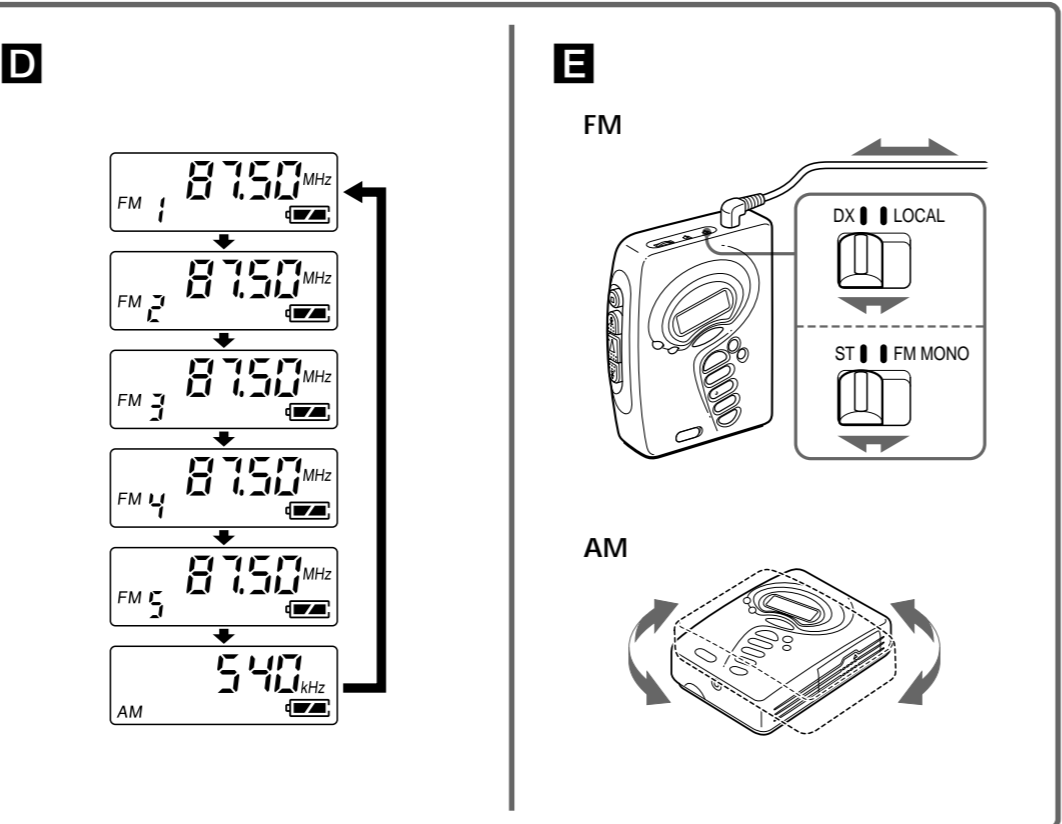


## Kazettalejátszás

 - A szalag típusának megfelelően állítsa be a kapcsolót NORM•CrO<sub>2</sub>/METAL állásba.

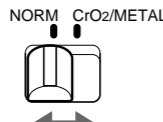

 - Helyezzen be egy kazettát és nyomja meg a ► PLAY gombot.

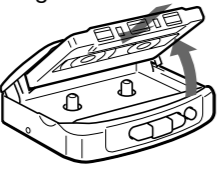

Művelet	Nyomja meg
Lejátszás megállítása	■ STOP
A szalag gyors előre, vagy visszatekerése*	►► FF vagy ◄◄ REW

#### \*Megjegyzés a gyors előre és visszatekeréssel kapcsolatban

 
- Ha a szalag teljes előre vagy visszatekerése után nem kapcsolja ki a készüléket, gyorsan le fognak merülni az elemek. Feltétlenül nyomja meg a ■ STOP gombot.

#### Megjegyzés


A szalag futása közben ne nyissa ki a kazettatartót.

## Възпроивеждане от лента

- Изберете NORM•CrO<sub>2</sub>/METAL, в съответствие с типа на лентата.

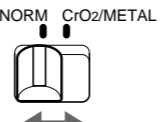

 - Поставете касета и натиснете бутона ► PLAY.

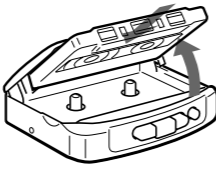

За	Натиснете
Спиране на възпроизвеждане	■ STOP
Бързо пренавиване напред или назад на лентата*	►► FF или ◄◄ REW

#### \*Забележка относно бързо пренавиване напред и назад

- В случай, че след края на бързо пренавиване напред или назад оставите апарата в този режим, батериите ще се изтощат много бързо. Уверете се, че сте натиснали бутона ■ STOP.

#### Забележка

Не отваряйте отделението за касетата по време на работа.

## Слушане на радиоапарат

- Натиснете RADIO ON/OFF.
- Уверете се, че функцията HOLD е изключена. На be van kapcsolva a funkció, a HOLD kapcsoló elcsúsztatásával kapcsolja ki azt.
- Натиснете бутона BAND, за да изберете честотния обхват (FM1, FM2, FM3, FM4, FM5 или AM). При всяко натискане на бутона, информацията на екрана се изменя, както е показано на фигура **D**.
- Натиснете бутона TUNING +/-, за да настроите на желаната радиостанция.

#### A rádió kikapcsolása

Nyomja meg a RADIO ON/OFF gombot.

#### Az állomás gyors behangolása

A 4. lépésben néhány másodpercig tartsa lenyomva a TUNING +/- gombot. A Walkman az állomások pásztázásába kezd és egy másodpercig megáll minden egyes állomás behangolása után. Amikor feltűnik a kívánt állomás frekvenciájának száma, a TUNING +/- gomb ismételt megnyomásával állítsa meg a pásztázási műveletet.

#### A rádióvétel javítása

 
FM vétel esetén egyenestse ki a fejhallgató/fülhallgató zsinórját, vagy állítsa be az DX/LOCAL vagy ST/FM MONO kapcsolót.

AM vétel esetén állítsa be a készülék helyzetét.

#### Megjegyzés

Ha a vétel zajossá válik és a készülékben fém burkolattal vagy címkével ellátott kazetta van, távolítsa el a kazettát a berendezésből.

В случай, че се появи шум при приемане на излъчвания сигнал, когато сте поставили касета с метална кутия или етикет, извадете касетата.

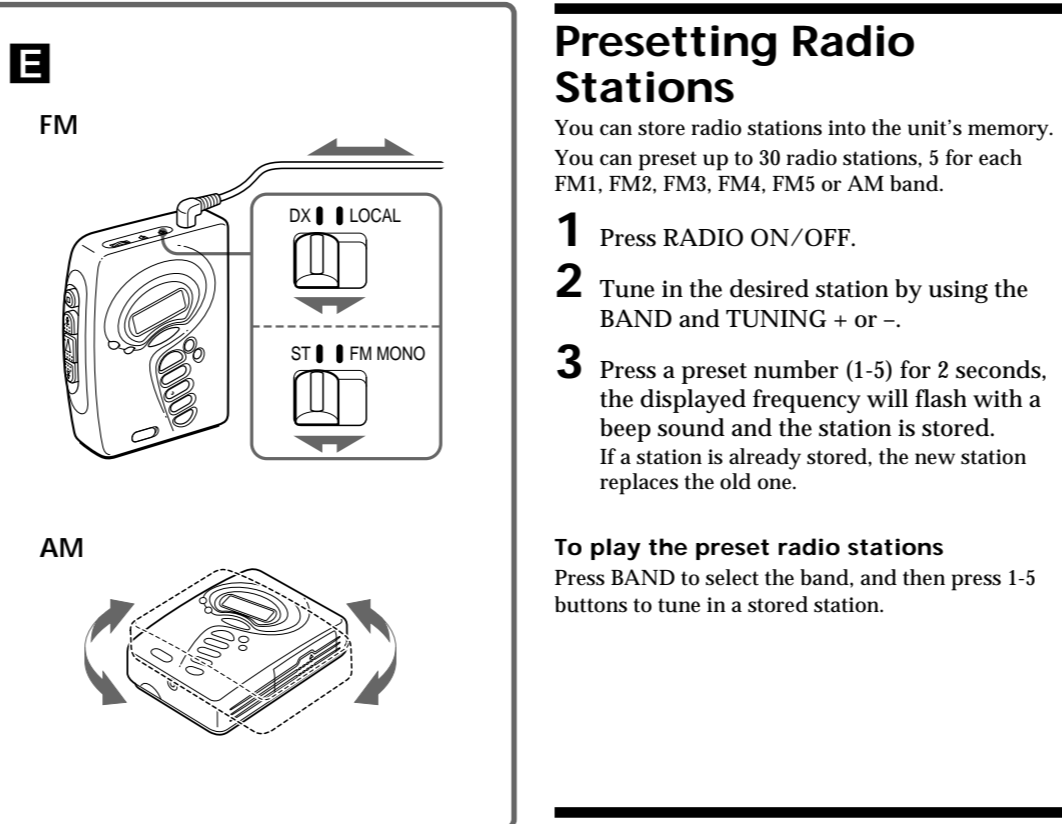

## Presetting Radio Stations

You can store radio stations into the unit's memory. You can preset up to 30 radio stations, 5 for each FM1, FM2, FM3, FM4, FM5 or AM band.

- Press RADIO ON/OFF.
- Tune in the desired station by using the BAND and TUNING + or –.
- Press a preset number (1-5) for 2 seconds, the displayed frequency will flash with a beep sound and the station is stored. If a station is already stored, the new station replaces the old one.

#### To play the preset radio stations

Press BAND to select the band, and then press 1-5 buttons to tune in a stored station.

## Receiving Stations Outside Your Country (Excluding models for Europe, Saudi Arabia, and China)

The frequency range differs depending on the area (see the chart "Area indication and frequency range"). If you listen to the radio in an area of different frequency range, change the area indication in the display.

- Turn on the radio and press BAND for more than 10 seconds until the area indication flashes in the display.
- While the display is flashing, press TUNING +/- to select either "U" or "E" indication.
- Press BAND to set the area indication.

#### Note

If you change the frequency range, all the preset stations will be canceled.

Остановки воспроизведения  
Ускоренной перемотки ленты вперед или назад\*  
►► FF или ◄◄ REW

#### Area indication and frequency range

Area*	Frequency range	FM (MHz)	AM(kHz)
E	87.5–108	531–1,602	
U	87.5–108	530–1,710	

\* E: European and other countries

U: USA, Canada, and Central and South America

## Using Other Functions

#### To lock the controls

Set the HOLD to the direction of the arrow to lock the controls.



The hold function only locks the radio operation buttons and MEGA BASS.

#### To limit the maximum volume automatically

Set AVLS (Automatic Volume Limiter System) to LIMIT. The maximum volume is kept down to protect your ears, even if you turn the volume up. To cancel the AVLS function, set AVLS to NORM.

#### To emphasize sound

Press MEGA BASS.

\*MEGA BASS\* appears in the display.

#### Notes

- When you set AVLS to LIMIT:
  - the MEGA BASS effect is reduced,
  - turn down the volume, if the bass-booster sound becomes distorted or unstable.
- When HOLD is activated, the MEGA BASS button does not work.

## Rádióállomások beprogramozása

A rádióállomások beállítása tölölható a készülék memóriájában. Hüllámsávonként — FM1, FM2, FM3, FM4, FM5 vagy AM — 5, tehát maximálisan 30 rádióállomás programozható be.

- Nyomja meg a RADIO ON/OFF gombot.
- A BAND és a TUNING + vagy – gombok segítségével hangolja be a kívánt állomást.
- 2 másodpercig tartsa lenyomva a számgombok valamelyikét (1-5); a frekvencia száma hangjelzés kíséretében villogni kezd, az állomás pedig rögzül a készülék memóriájában. Ha az adott memóriahelyre már volt állomás programozva, az új állomás adata kerül a régi helyére.

#### A beprogramozott rádióállomás hallgatása

A BAND gomb megnyomásával válassza ki a kívánt hullámsávot, majd az 1-5 számgombok valamelyikének megnyomásával állítsa be az előre beprogramozott állomást.

## Rádióadások vétele külföldön

(Az európai, a szaúd-arábiai és a kínai modellek kivételével)

A frekvenciatartomány régiói szerint változik (lásd "Régiókijelzés és frekvenciatartomány" diagram). Ha olyan régióban hallgatta a rádiót, amely eltérő frekvenciatartománnyal rendelkezik, módosítsa a régió jelölő indikátort a kijelzőn.

- Kapcsolja be a rádiót és 10 másodpercnél hosszabb ideig tartsa lenyomva a BAND gombot, hogy a régió indikátora villogjon a kijelzőn.
- A kijelző villogása alatt a TUNING +/- gomb megnyomásával válassza ki az "U" vagy az "E" opcióit.
- A BAND gomb megnyomásával állítsa be a régió kijelzését.

#### Megjegyzés

A frekvenciatartomány megváltoztatásával az összes előre beprogramozott állomás törölődik a készülék memóriájából.

#### Régiókijelzés és frekvenciatartomány

Régió*	Frekvenciatartomány	FM (MHz)	AM(kHz)
E	87.5–108	531–1,602	
U	87.5–108	530–1,710	

\* E: Európai és más országok

U: USA, Kanada, Közép és Dél-Amerika

## További funkciók használata

#### A szabályozók blokkolása

A HOLD kapcsoló nyíl irányába történő elcsúsztatásával a szabályozók blokkolódnak.



A kapcsolóval csak a rádió és a MEGA BASS funkciógombjai blokkolhatók.

#### A maximális hangerő automatikus korlátozása

Állítsa az AVLS (Automatikus hangerőkorlátozó rendszer) kapcsolót LIMIT helyzetbe. A maximális hangerő az Ön füleinek védelme érdekében még abban az esetben is korlátozott szinten marad, ha azt magasabbra próbálja állítani. Az AVLS működésének kiiktatása az AVLS kapcsoló NORM helyzetbe történő állításával történik.

#### Hangszinkiemelés

Nyomja meg a MEGA BASS gombot.

A kijelzőn "MEGA BASS" felirat válik láthatóvá.

#### Megjegyzések

- Ha az AVLS kapcsoló LIMIT helyzetben van – a MEGA BASS hatása mérséklődik.
- csökkentse a hangerőt, ha a kiemelt basszusú hang torz vagy nem egyenletes.
- Ha a HOLD funkció be van kapcsolva, a MEGA BASS gomb nem működik.

## Предварителна настройка на радиостанции

Вие можете да запаметите радиостанциите в паметта на апарата. Можете да настроите предварително до 30 радиостанции, по 5 за всеки от обхватите FM1, FM2, FM3, FM4, FM5 или за AM.

- Натиснете бутона RADIO ON/OFF.
- Настройте на желаната радиостанция с помощта на бутоните BAND и TUNING + или –.
- Натиснете бутон за предварителна настройка (1-5), в продължение на 2 секунди, при което показваната на екрана честота ще започне да примигва, придружено със звуков сигнал и станцията ще бъде запаметена. В случай, че вече е имало запаметена радиостанция, на мястото на старата се запаметява новата.

#### За приемане на предварително запаметена радиостанция

Натиснете бутона BAND, за да изберете честотния обхват и натиснете един от бутоните от 1 до 5, за да настроите на запаметена радиостанция.

## Приемане на радиостанции извън Вашата страна

(С изключение на моделите за Европа, Саудитска Аравия и Китай)

Честотният обхват е различен за различните области (Виж таблица "Индикация за областта и честотния обхват"). В случай, че слушате радиоапарата в област с различен честотен обхват, сменете индикацията за областта на екрана.

- Включете радиоапарата и задръжте натиснат бутона BAND за повече от 10 секунди, докато екранът започне да свети с мигаща светлина.
- Натискайте бутона TUNING +/-, докато екранът свети с мигаща светлина, за да изберете една от индикациите за област "U" или "E".
- Натиснете бутона BAND, за да настроите индикацията за област.

#### Забележка

В случай, че смените честотния обхват всички предварително запаметени радиостанции ще бъдат изтрити от паметта.

#### Индикации за област и честотен обхват

Област*	Честотен обхват	FM (MHz)	AM(kHz)
E	87.5–108	531–1,602	
U	87.5–108	530–1,710	

 
\* E: Европейски и други страни

U: САЩ, Канада и Централна и Южна Америка

## Използване на други функции

#### За блокиране на уредите за управление

Поставете превключателя HOLD срещу стрелката, за да блокирате уредите за управление.



Функцията "за спиране" блокира действието само на бутоните за работа с радиото и на функцията MEGA BASS.

#### За автоматично ограничаване на максималния звук

Настройте функцията AVLS (Автоматична система за ограничаване на силата на звука) на LIMIT. Максималната сила на звука се задръжва до определено ниво дори, ако се опитате да увеличите звука. За анулиране на функцията AVLS, настройте AVLS на NORM.

#### Натиснете бутона MEGA BASS

Индикацията "MEGA BASS" се появява на екрана.

#### Забележки

- При поставен AVLS в положение LIMIT:
  - ефект от функции MEGA BASS будет снижен,
  - уменьшите громкость, если усиленное звучание низких частот будет искажено или нестабильно.
- В случае перевода в действие функции HOLD кнопка MEGA BASS не будет работать.

## Предварителна установка радиостанций

Вы можете занести радиостанции в память аппарата. Вы можете предварительно установить всего до 30 станций, по 5 для каждой полосы частот ЧМ1, ЧМ2, ЧМ3, ЧМ4, ЧМ5 или AM.

- Нажмите кнопку RADIO ON/OFF.
- Выполните настройку на желаемую станцию, используя кнопку BAND и кнопки TUNING + или –.
- Нажмите номер предварительной установки (1-5) на 2 секунды, отображаемая частота будет мигать в сопровождении зуммерного звукового сигнала, и станция будет сохранена в памяти. Если там уже была запомнена станция, то новая станция заменит старую.

#### Для воспроизведения предварительно установленных радиостанций

Нажмите BAND для выбора полосы частот, а затем кнопки 1-5 для настройки на запомненную станцию.

## Прием станций аппаратом за пределами Вашей страны

(За исключением моделей для Европы, Саудовской Аравии и Китая)

Диапазон частот отличается в зависимости от области (см. таблицу "Указание области и диапазона частот"). Если Вы слушаете радио в области с другим диапазоном частот, измените индикатор области на дисплее.

- Включите радиоаппарат и нажмите кнопку BAND более 10 секунд пока на экране не начнет мигать индикация области.
- Пока на экране мигает индикация, нажмите кнопку TUNING +/- для выбора одного из значений "U" или "E" индикации.
- Нажмите кнопку BAND для установки индикации области.

#### Примечание

Если Вы изменяете диапазон частот, все предварительно установленные станции будут отменены.

#### Указание области и диапазон частот

Область*	Диапазон частот	ЧМ (МГц)	АМ (кГц)
E	87.5–108	531–1,602	
U	87.5–108	530–1,710	

\* E: Европейские и другие страны

U: США, Канада и Центральная и Южная Африка

## Использование других функций

#### Для блокировки управления

Установите переключатель HOLD в направлении стрелки для блокировки управления.



Функция блокировки блокирует только кнопки управления радиоприемником и функцией MEGA BASS.

#### Для автоматического ограничения максимальной громкости

Установите AVLS (Система автоматического ограничения громкости) в положение LIMIT. Максимальная громкость будет поддерживаться на низком уровне для защиты Вашего слуха, даже если Вы попытаетесь повысить громкость. Для отмены функции AVLS установите AVLS в положение NORM.

#### Для выделения звука

Нажмите кнопку MEGA BASS.

На дисплее появится индикация "MEGA BASS".

#### Примечания

- Когда Вы установите AVLS в положение LIMIT:
  - эффект от функции MEGA BASS будет снижен,
  - уменьшите громкость, если усиленное звучание низких частот будет искажено или нестабильно.
- В случае перевода в действие функции HOLD кнопка MEGA BASS не будет работать.