

# ***Micro HiFi Component System***

---

Operating Instructions

## **Owner's Record**

The model and serial numbers are located on the rear of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_



 
***CMT-CP2W/CP2WA***

## WARNING

**To prevent fire or shock hazard, do not expose the unit to rain or moisture.**


To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.



This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

## NOTICE FOR THE CUSTOMERS IN THE U.S.A.

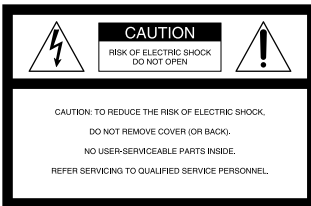

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### CAUTION

The use of optical instruments with this product will increase eye hazard.

## INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### CAUTION


You are cautioned that any changes or modification not expressly approved in this manual could void your authority to operate this equipment.

## NOTICE FOR THE CUSTOMERS IN CANADA

### CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

This system is equipped with the Dolby® B-type noise reduction system.

\* Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation. “DOLBY” and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.



A946

The instructions in this manual are for the two models CMT-CP2W and CMT-CP2WA. CMT-CP2W is the model used for illustration purposes. Although the shapes of the buttons and jacks on the CMT-CP2WA are different from those of the CMT-CP2W, the locations of the buttons and jacks are the same. Any differences in operation are clearly indicated in the text.

---

# Table of Contents

---

## Getting Started

|   |   |
|---|---|
| Step 1: Hooking up the system .....           | 4 |
| Step 2: Setting the time .....                | 6 |
| Step 3: Presetting radio stations — Preset .. | 7 |
| Connecting optional components .....          | 8 |

## Basic Operations

|   |    |
|---|----|
| Playing a CD — Normal Play .....                              | 10 |
| Recording from a CD to a tape<br>— CD Synchro Recording ..... | 11 |
| Listening to the radio — Preset Tuning ..                     | 12 |
| Recording from the radio .....                                | 13 |
| Playing a tape .....  | 15 |
| Dubbing a tape — High-speed Dubbing ...                       | 16 |

---

## The CD Player

|   |    |
|---|----|
| Checking the remaining playing time on the<br>CD .....        | 18 |
| Playing CD tracks repeatedly<br>— Repeat Play .....           | 18 |
| Playing CD tracks in random order<br>— Shuffle Play .....     | 19 |
| Playing CD tracks in a favorite order<br>— Program Play ..... | 19 |

---

## The Tape Deck

|   |    |
|---|----|
| Recording to a tape manually .....                                  | 20 |
| Recording your favorite CD tracks to a tape<br>— Program Edit ..... | 21 |

---

## Other Features

|  |    |
|--|----|
| Adjusting the sound .....  | 23 |
| Using the Radio Data System (RDS)* ....                          | 23 |
| Falling asleep to music — Sleep Timer ..                         | 24 |
| Waking up to music — Daily Timer .....                           | 24 |
| Timer-activated recording of radio<br>programs — REC Timer ..... | 26 |

---


## Additional Information

|   |    |
|---|----|
| Precautions .....                         | 28 |
| Troubleshooting .....                     | 29 |
| Specifications .....                      | 31 |
| Parts identification for the remote ..... | 33 |
| Index .....                               | 34 |

\* European model only


## Step 1: Hooking up the system

Follow steps **1** through **4** of the procedure below to hook up your system using the supplied cords and accessories.

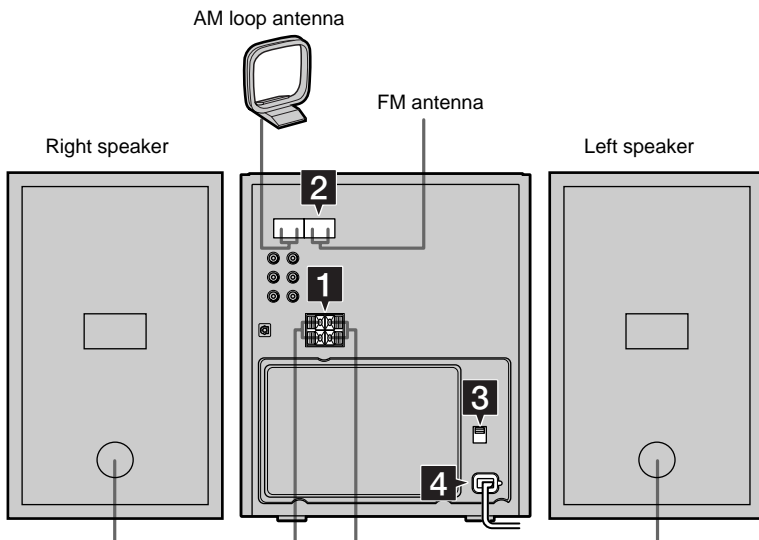

### 1 Connect the speakers.

Connect the right and left speaker cords to the SPEAKER terminals as shown below.

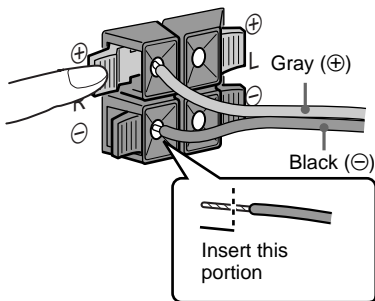


#### Note


Keep the speaker cords away from the antennas to prevent noise.

### 2 Connect the FM and AM antennas.


Set the AM loop antenna up before connecting it.

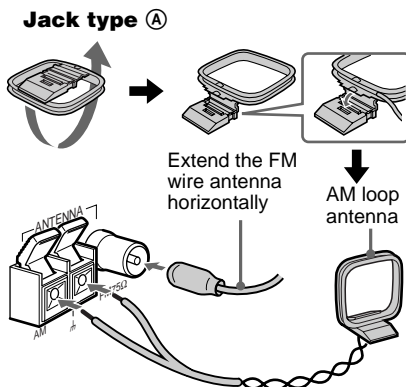

**Jack type ⑧**

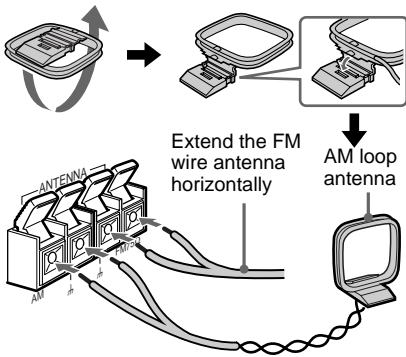

**Inserting two size-AA (R6) batteries into the remote**

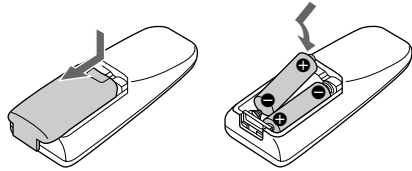

**Tip**

With normal use, the batteries should last for about six months. When the remote no longer operates the system, replace both batteries with new ones.

**Notes on batteries**

- Make sure the battery poles (plus/minus) are properly oriented.
- Do not use a new battery with an old one.
- Do not use different types of batteries together.
- If you do not use the remote for a long period of time, remove the batteries to prevent possible damage from battery leakage and corrosion.
- Do not use a battery that is leaking.
- If a battery has leaked, clean the battery compartment and replace all the batteries.
- Do not place the remote in an extremely hot or humid place.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.

**3** For models with a voltage selector, set **VOLTAGE SELECTOR** to the local power line voltage.




**4** Connect the power cord to a wall outlet. If the plug does not fit the wall socket, detach the supplied plug adaptor (only for models equipped with an adaptor).

## Step 2: Setting the time

Before you can use the system's timer functions, set the internal clock.

The clock uses a 24-hour system on the European model, and a 12-hour system on other models.

The 24-hour system is used here for illustration purposes.

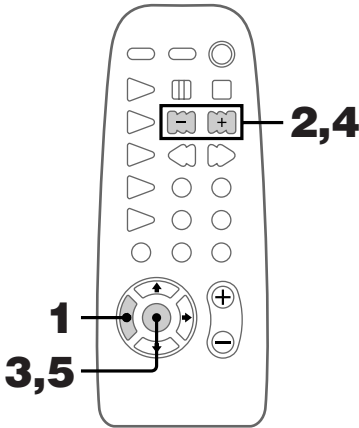

- 1** Press **TIMER SET**.

The hour indication flashes.



- 2** Press **◀◀/▶▶** repeatedly to set the hour.



- 3** Press **ENTER**.

The minute indication flashes.



- 4** Press **◀◀/▶▶** repeatedly to set the minute.



- 5** Press **ENTER**.

The clock starts working.

### To reset the system clock

You can reset the system clock when the system is on.


- 1** Press **TIMER SET**.
- 2** Press **◀◀/▶▶** repeatedly until "SET CLOCK" appears, then press **ENTER**.
- 3** Repeat step 2 to 5 in "Step 2: Setting the time".

#### Tip

If you make a mistake, start over from step 1.

## Step 3: Presetting radio stations — Preset

The system can store a total of 30 preset stations (20 for FM and 10 for AM). This section explains how to tune in stations and preset them.

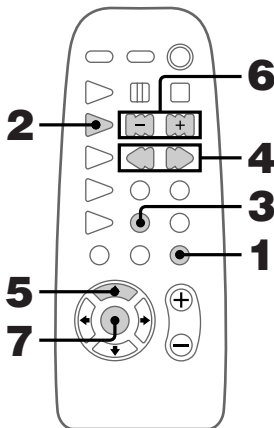

- 1 Press **FUNCTION** repeatedly until “**TUNER**” appears.
- 2 Press **TUNER/BAND** to select FM or AM.
- 3 Press **TUNING MODE** repeatedly until “**AUTO**” appears.
- 4 Press **<</>>**.

The frequency changes as the system scans for a station. Scanning stops automatically when a station is tuned in. At that time, “**TUNED**” and “**STEREO**” (for stereo programs only) appear.



- 5 Press **MEMORY**.  
A preset number flashes.



- 6 Press **<</>>** repeatedly to select the preset number that you want.



- 7 Press **ENTER**.  
The station is stored to the selected preset number.
- 8 Repeat steps 2 through 7 to preset other stations.

### To tune in a weak station

In step 3, press **TUNING MODE** repeatedly until “**AUTO**” and “**PRESET**” disappear, then press **<</>>** repeatedly to tune in the station.

### To change the preset number

Start over from step 2.

### Tip

The preset stations are saved in the system’s memory for about a day even if you disconnect the power cord or a power failure occurs.

### To change the AM tuning interval (not applicable on the European and Middle Eastern models)

The AM tuning interval is factory-preset to 9 kHz (or 10 kHz on North American model). To switch the AM tuning interval, tune in any AM station first, then turn off the system. Pressing **TUNER +** on the unit down, turn the system back on. When you change the interval, all the AM preset stations are erased. To change back to the original interval, repeat the same procedure for CMT-CP2W. For CMT-CP2WA, tune in any AM station first, then turn off the system. Pressing **TUNER –** down, turn the system back on.

# Connecting optional components


This section explains how to connect a variety of components to your system in order to enhance it. Refer to the instructions included with each component for details.

## Connecting audio components

### Connecting an MD deck for analog recording

You can connect an MD deck to the system with commercially available audio cords. Be sure to match the color-coded pins to the appropriate jacks. To listen to the MD deck after connecting it, press MD.

To the audio input jacks on the MD deck

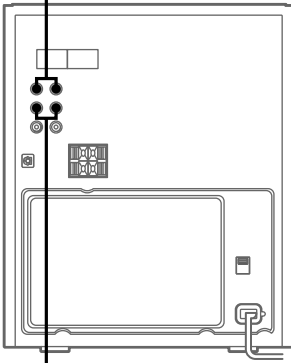


To the audio output jacks on the MD deck

### Connecting an MD deck for digital recording


By connecting an MD deck to the system with a commercially available optical cable, you can make a digital recording from a CD.

To the digital input connector on the MD deck

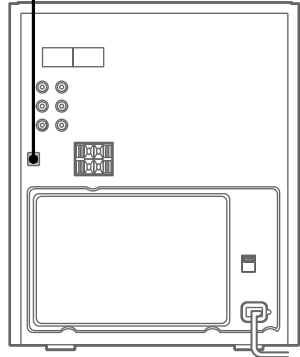

### Connecting a VCR

You can connect a VCR to the system with a commercially available audio cord. Be sure to match the color-coded pins to the appropriate jacks. To listen to the VCR after connecting it, press VIDEO.

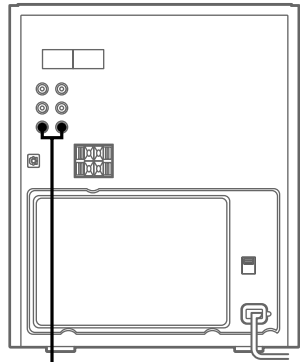


To the audio output jacks on the VCR



## Connecting headphones

Connect headphones to the PHONES jack.

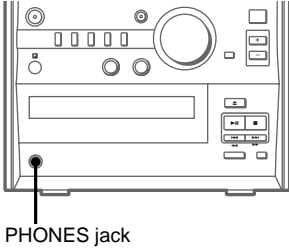


## Connecting external antennas

You can connect an external antenna to your system to get better reception.


### FM antenna

Connect a commercially available external FM antenna to the FM ANTENNA terminal(s) as shown below. You may also connect a TV antenna for the same purpose.

#### Jack type (A)

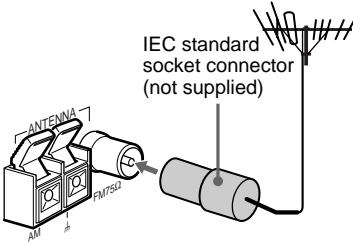


#### Jack type (B)

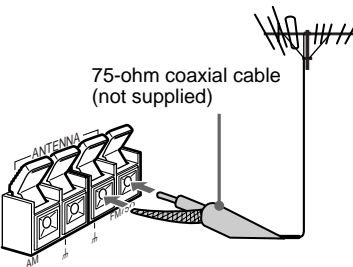


### AM antenna

For the AM antenna, use a 6- to 15-meter, horizontally extended insulated wire, with one end connected to the AM ANTENNA terminals as shown below. Leave the supplied AM loop antenna connected.

#### Jack type (A)

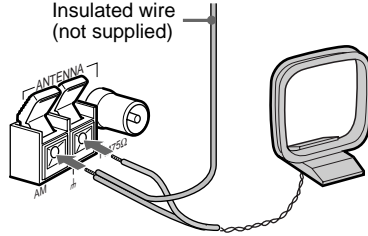


#### Jack type (B)

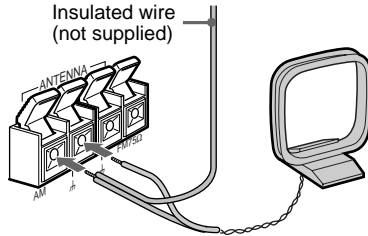

## Basic Operations


### Playing a CD — Normal Play

Do the procedure below to play a CD starting from the first track.

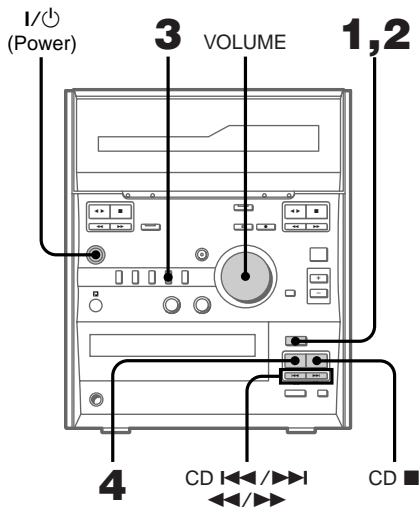

- 1** Press CD EJECT ▲ and place a CD on the disc tray.  
The disc tray opens.


Place with the label side up. When you play a CD single (8 cm CD), place it on the inner circle of the tray.

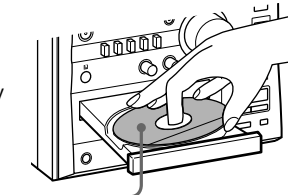

- 2** Press CD EJECT ▲ again to close the disc tray.

- 3** Press CD.  
“CD” appears.

- 4** Press CD ►||.  
Playback starts.

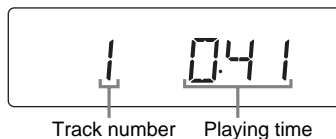

| To                                | Do this   |
|-----------------------------------|---|
| Stop playback                     | Press CD ■.   |
| Pause                             | Press CD ►  . Press again to resume playback.   |
| Select a track                    | During playback or pause, press CD ◀◀ or CD ▶▶ repeatedly until you find the desired track. |
| Locate a desired point in a track | During playback, press down CD ◀◀ or CD ▶▶ until you find the desired point.                |
| Remove or replace the CD          | Press CD EJECT ▲.   |
| Adjust the volume                 | Turn VOLUME.  |



#### Tips


- If you press CD ►|| when the power is off, the system automatically turns on and the CD starts playing if there is a CD on the disc tray (One Touch Play).
- To switch to the CD while listening to another source, press CD ►||. The CD will automatically start playing (Automatic Source Selection).
- “NO DISC” appears in the display if there is no CD on the disc tray.

# Recording from a CD to a tape


## — CD Synchro Recording


The CD Synchro Recording function makes it easy to record from a CD to a tape. Both Type I (normal) and Type II (CrO<sub>2</sub>) tapes can be used. To record only the tracks that you want, it is convenient to use the Program Edit function (see page 21).

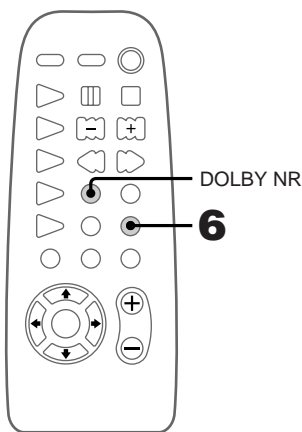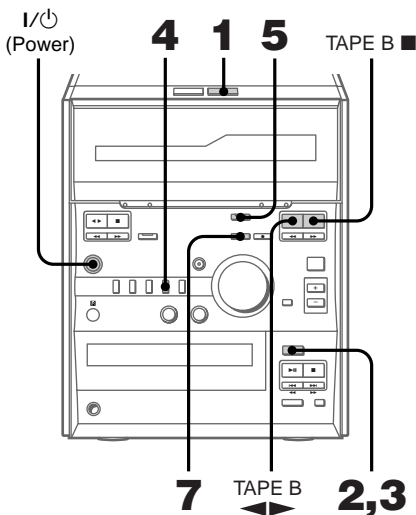


- 1 Press DECK B EJECT  and insert a recordable tape into cassette holder B.

With the side you want to record on facing towards you

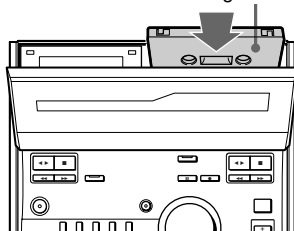

- 2 Press CD EJECT  and place a CD on the disc tray.

Place with the label side up. When you play a CD single (8 cm CD), place it on the inner circle of the tray.

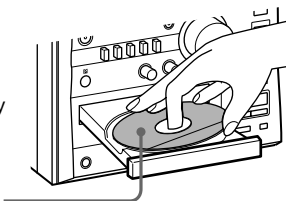

- 3 Press CD EJECT  again to close the disc tray.

- 4 Press CD. "CD" appears.

- 5 Press CD SYNC.

Tape B stands by for recording and the CD stands by for playback.

"REC" and "▶" appear, and the CD SYNC indicator lights up.

***continued***

## Recording from a CD to a tape (continued)

**6** Press DIR MODE on the remote to select “←→” to record on one side of the tape or “↔” to record on both sides.

**7** Press **II**.  
Recording starts.

### To stop recording

Press TAPE B ■.

### Tips

- To record with the Dolby NR system on, press DOLBY NR on the remote before step 7. “NR” appears.
- To record from the side facing away from you, press TAPE B ◀▶ after step 5.



### Note

You cannot listen to another source during CD Synchro Recording.

## Listening to the radio


### — Preset Tuning

Presetting radio stations in the system’s memory in advance makes it easy to tune in those stations later (see “Step 3: Presetting radio stations” on page 7).

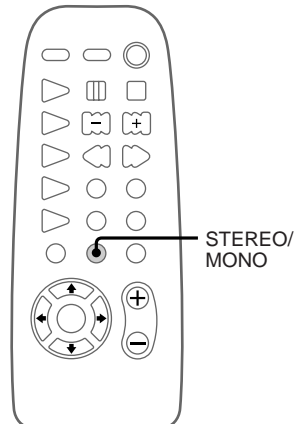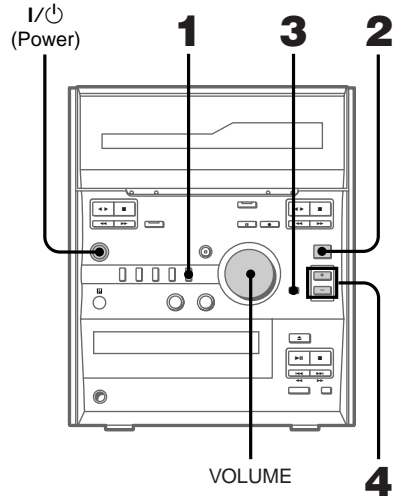

**1** Press TUNER.  
“TUNER” appears.

- 2** Press TUNER BAND to select FM or AM.
- 3** Press TUNING MODE repeatedly until “PRESET” appears.
- 4** Press TUNER +/- repeatedly to display the preset number of the desired station.

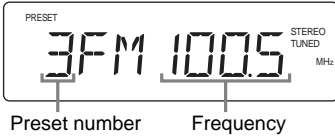

| To                 | Do this      |
|--------------------|--------------|
| Turn off the radio | Press I/⏻.   |
| Adjust the volume  | Turn VOLUME. |

### To tune in a non-preset radio station



In step 3, press TUNING MODE repeatedly until “AUTO” and “PRESET” disappear, then press TUNER +/- repeatedly to tune in the desired station (Manual Tuning).

#### Tips

- If you press TUNER BAND when the power is off, the system automatically turns on and tunes in the station last received (One Touch Play).
- To switch to the radio while listening to another source, press TUNER BAND (Automatic Source Selection).
- If there is static during an FM broadcast, press STEREO/MONO on the remote until “MONO” appears. After “MONO” scrolls across the display, the frequency will appear. The broadcast will no longer be in stereo, but the reception will improve. Press this button again to restore the broadcast to stereo.
- To improve the reception, adjust the supplied antennas or connect an external antenna (see “Connecting external antennas” on page 9).

## Recording from the radio


Do the procedure below to tune in a preset station (see page 12) and record from the radio to a tape. Both Type I (normal) and Type II (CrO<sub>2</sub>) tapes can be used.

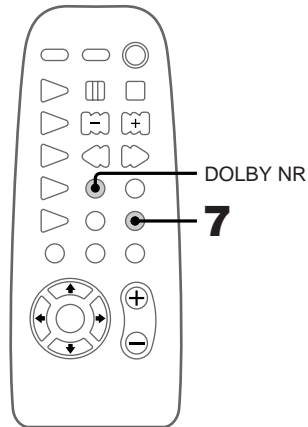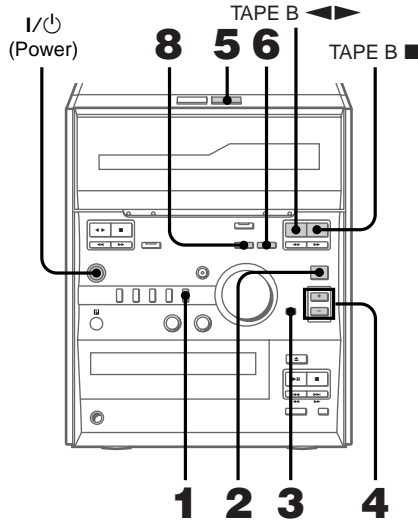


***continued***


## Recording from the radio (continued)



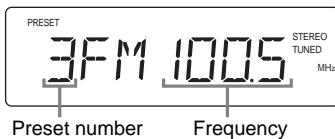

- 1** Press TUNER.  
“TUNER” appears.
- 2** Press TUNER BAND to select FM or AM.
- 3** Press TUNING MODE repeatedly until “PRESET” appears.
- 4** Press TUNER +/- repeatedly to display the preset number of the desired station.

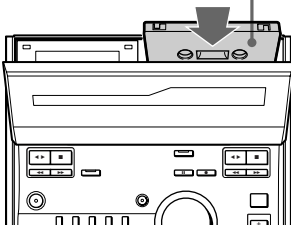

- 5** Press DECK B EJECT  and insert a recordable tape into cassette holder B.

With the side you want to record on facing towards you





- 6** Press .
- 7** Press DIR MODE on the remote to select  to record on one side of the tape or  to record on both sides.
- 8** Press .

## To stop recording



Press TAPE B .

 
### Tips

- To record from a non-preset station, press TUNING MODE repeatedly in step 3 until “AUTO” and “PRESET” disappear, then press TUNER +/- repeatedly to tune in the desired station.
- To record with the Dolby NR system on, press DOLBY NR on the remote before step 8. “” appears.
- To record from the side facing away from you, press TAPE B  after step 6.
- If you hear static while you are recording an AM radio program, adjust the AM antenna to improve the reception.


# Playing a tape

The system can play three types of tapes: Type I (normal), Type II (CrO<sub>2</sub>) and Type IV (metal). The system automatically detects the tape type so there is no need to specify it.

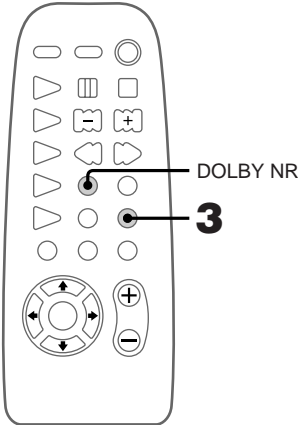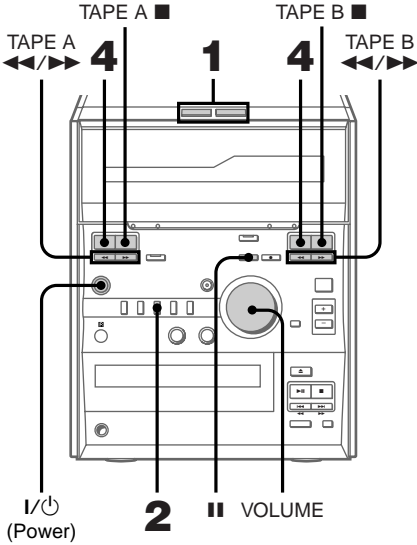

- 1** Press DECK A EJECT (or DECK B EJECT)  and insert a recorded tape into cassette holder A (or B).

With the side you want to play facing towards you

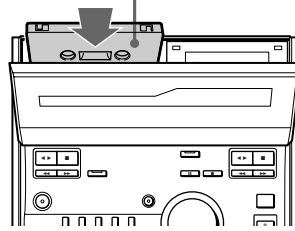




 
 


- 2** Press TAPE repeatedly until the desired tape deck ("TAPE A" or "TAPE B") appears.

- 3** Press DIR MODE on the remote repeatedly to select "↔" to play one side of the tape or "↻"\* (or "R"\* ) to play both sides repeatedly.

If you select "R" (Relay), both tapes will play back in consecutive order.

\* The tape automatically stops after playing back five times.

- 4** Press TAPE A (or TAPE B)  . The selected tape starts playing. To change the playback direction, press TAPE A (or TAPE B)  again. The reverse side will begin playing.

| To                         | Do this   |
|----------------------------|---|
| Stop playback              | Press TAPE A (or TAPE B)  .  |
| Pause                      | Press  . Press again to resume playback.   |
| Fast-forward or rewind     | With the tape stopped, press TAPE A (or TAPE B)  or TAPE A (or TAPE B)  . |
| Remove or replace the tape | Press DECK A EJECT (or DECK B EJECT)  .  |
| Adjust the volume          | Turn VOLUME.  |

**continued**

## Playing a tape (continued)



### Tips

- If you press TAPE A (or TAPE B) ◀▶ when the power is off, the system automatically turns on and starts playing the tape if there is a tape in the holder (One Touch Play).
- To switch to tape while listening to another source, press TAPE A (or TAPE B) ◀▶ while the tape is stopped. The tape will automatically start playing (Automatic Source Selection).
- To play a tape recorded with the Dolby NR system, press DOLBY NR on the remote before step 4. “DOLBY NR” appears.

## Dubbing a tape

### — High-speed Dubbing


Both Type I (normal) and Type II (CrO<sub>2</sub>) tapes can be used. The recording level is automatically adjusted.

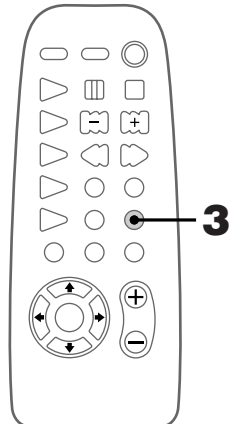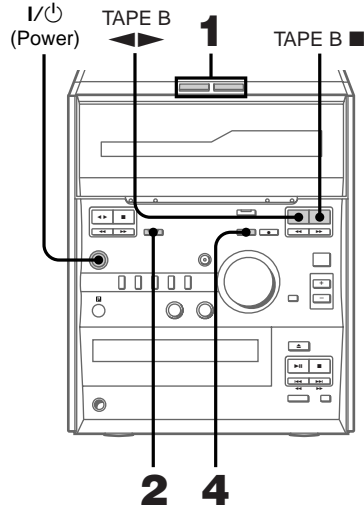



- 1 Insert a recorded tape into cassette holder A and insert a recordable tape into cassette holder B.

With the side you want to play facing towards you

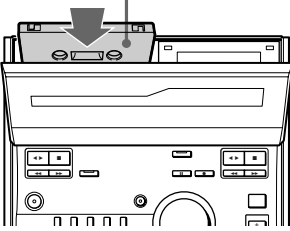

- 2 Press HI-SPEED DUBBING.  
Tape B stands by for recording.

- 3 Press DIR MODE on the remote to select “←” to record on one side of the tape or “↔” to record on both sides.

- 4 Press II.  
Dubbing starts.

### To stop dubbing


Press TAPE B ■.

### Tips

- You don't need to set Dolby NR, since tape B is automatically recorded with the same Dolby NR setting as tape A.
- To record from the side facing away from you, press TAPE B ◀▶ after step 2.

## Checking the remaining playing time on the CD


Do the procedure below to check the remaining playing time of the current track or the entire CD.

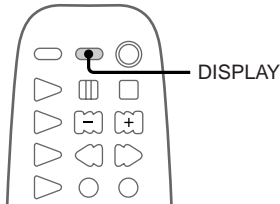

➔ Press DISPLAY.


Each time you press this button, the display changes as follows:

### During normal playback

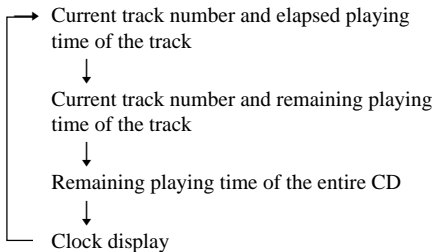

### Tip

Each time you press DISPLAY while the CD and tape units are stopped, the display changes as follows:

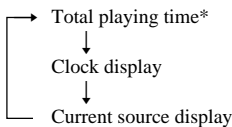


\* It appears only when "CD" is selected.

### Note

If the CD contains 25 tracks or more, the remaining playing time of the current track will appear as "- . - ." for each track starting with the 25th.

## Playing CD tracks repeatedly — Repeat Play

The Repeat Play function lets you playback a single track or all the tracks on a CD repeatedly in Normal Play. You can also use Repeat Play function while in Shuffle Play or Program Play.

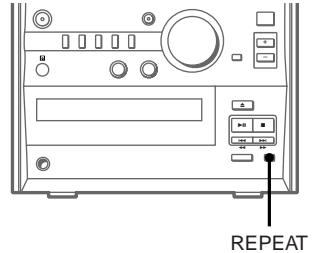

➔ Press REPEAT repeatedly during playback until "REPEAT" appears. Repeat Play starts. The following table describes the two repeat modes.


| To repeat                        | Press                                       |
|----------------------------------|---|
| All the tracks on the CD         | REPEAT repeatedly until "REPEAT" appears.   |
| Only the currently playing track | REPEAT repeatedly until "REPEAT 1" appears. |


### To cancel Repeat Play

 Press REPEAT repeatedly until "REPEAT" and "REPEAT 1" disappear.

## Playing CD tracks in random order — *Shuffle Play*

You can use this function to playback all the tracks on a CD in random order.

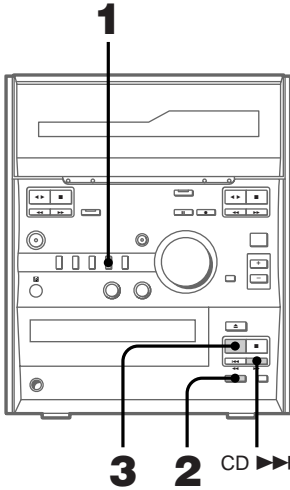

- 1** Press CD.  
“CD” appears.
- 2** Press PLAY MODE repeatedly until “SHUFFLE” appears.
- 3** Press CD **>>>**.  
Shuffle Play starts. “” appears while the next track is being selected, and all the tracks play in random order.

### To cancel Shuffle Play

Press PLAY MODE repeatedly until “SHUFFLE” disappears.

#### Tips

- You can also start Shuffle Play during Normal Play by selecting “SHUFFLE”.
- To skip a track, press CD **>>>**.


#### Note

You cannot go back to the preceding track by pressing CD **<<<**.


## Playing CD tracks in a favorite order — *Program Play*

### — *Program Play*

You can make a program of up to 24 tracks on a CD in any order that you want. After setting the order, you can also make a synchronized tape recording of the tracks (see page 21).

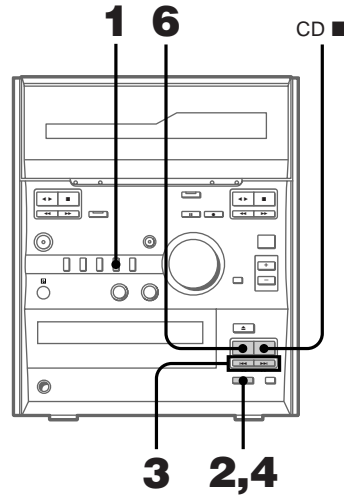

- 1** Press CD.  
“CD” appears.
- 2** Press PLAY MODE repeatedly until “PGM” appears.
- 3** Press CD **<<<** or CD **>>>** repeatedly until the desired track number appears.

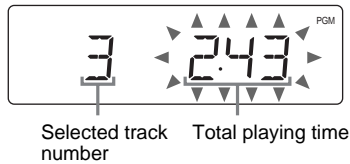

***continued***

## Playing CD tracks in a favorite order (continued)

### 4 Press PLAY MODE.

The selected track is programmed. The number of the selection just programmed appears.

### 5 To program additional tracks, repeat steps 3 and 4.

### 6 Press CD ►||.

Program Play starts. The tracks play in the order that they were programmed.

## To cancel Program Play

Press PLAY MODE repeatedly until “PGM” disappears.


| To                                    | Do this                                     |
|---------------------------------------|---|
| Add a track to the end of the program | Do steps 3 and 4 with Program Play stopped. |
| Erase the entire program              | Press CD ■ with Program Play stopped.       |




## Tips



- The program you made remains in the system’s memory until you turn off the system or remove the CD. After the program finishes, press CD ►|| to play the program again.
- When the total playing time of the programmed tracks exceeds 100 minutes, “- . - . -” appears in the display.
- If you try to program more than 24 tracks, “PGM FULL” appears in the display.
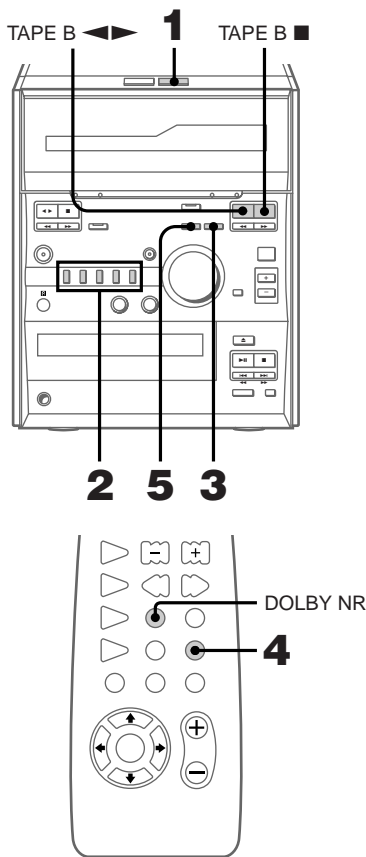
## Recording to a tape manually

 
Do the procedure below to manually record from any source to a tape. For example, tracks from a CD, the radio, or from any of the connected components. This lets you record just the songs that you want from a CD.



- 1** Press DECK B EJECT  and insert a recordable tape into cassette holder B.
- 2** Press the button of the source you want to record from.
  - CD: To record from the CD
  - TUNER: To record from the radio
  - TAPE: To record from tape A
  - MD: To record from an optional MD deck
  - VIDEO: To record from an optional VCR
- 3** Press . Tape B stands by for recording. "REC" and "▶" appear.
- 4** Press DIR MODE on the remote to select "←→" to record on one side of the tape or "↔" to record on both sides.
- 5** Press . Recording starts.
- 6** Start playing the source you want to record from.

| To              | Press  |
|-----------------|--|
| Stop recording  | TAPE B  |
| Pause recording |         |


**Tips**

 - To record with the Dolby NR system on, press DOLBY NR on the remote before step 5. "DOLBY NR" appears.
- To record from the side facing away from you, press TAPE B  after step 3.


# Recording your favorite CD tracks to a tape

## — Program Edit

With Program Edit function, you can select only the CD tracks that you want using the Program Play function, then record the programmed tracks to a tape using the CD Synchro Recording function.

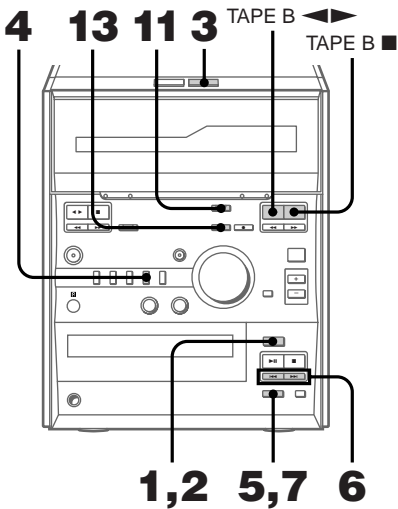



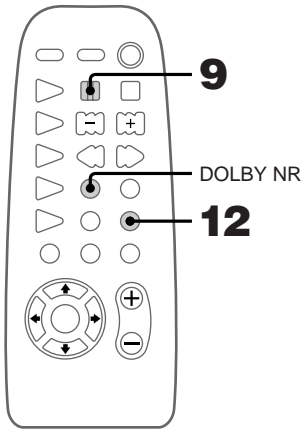


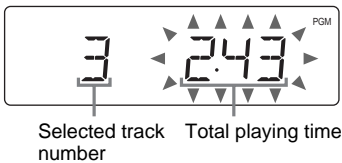
The CD Player/The Tape Deck




*continued*



## Recording your favorite CD tracks to a tape (continued)

- 1 Press CD EJECT  and place a CD.
- 2 Press CD EJECT  again to close the disc tray.
- 3 Press DECK B EJECT  and insert a recordable tape into cassette holder B.
- 4 Press CD.  
“CD” appears.
- 5 Press PLAY MODE repeatedly until “PGM” appears.
- 6 Press CD  or CD  repeatedly until the desired track number appears.



- 7 Press PLAY MODE.  
The selected track is programmed.
- 8 Repeat steps 6 and 7 to add more tracks to be recorded on side A.
- 9 Press  on the remote where you want the system to begin recording on side B.
- 10 Repeat steps 6 and 7 to select tracks to be recorded on side B.

- 11 Press CD SYNC.  
Tape B stands by for recording and the CD stands by for playback.  
“REC” and “▶” appear, and the CD SYNC indicator lights up.

- 12 Press DIR MODE on the remote to select “” to record on one side of the tape or “” to record on both sides.

- 13 Press .  
Recording starts.

 

### To stop recording

Press TAPE B .

### To cancel Program Edit


Press PLAY MODE repeatedly until “PGM” disappears.

### Tips

- To record with the Dolby NR system on, press DOLBY NR on the remote before step 13. “” appears.
- To record from the side facing away from you, press TAPE B  after step 11.

### Adjusting the sound

Not only can you adjust the bass and treble, you can use the DSG (Dynamic Sound Generator) function to enjoy a more powerful sound.

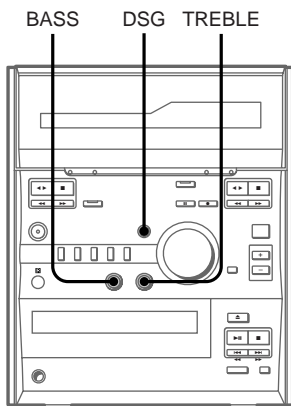

### Generating a more dynamic sound

➔ Press DSG.

### To cancel the DSG

Press DSG again.

### Adjusting the bass

➔ Turn BASS repeatedly (CMT-CP2W)/  
turn BASS (CMT-CP2WA).  
You can adjust the bass in 7 steps  
(+3 ~ 0 ~ -3).

### Adjusting the treble

➔ Turn TREBLE repeatedly (CMT-CP2W)/  
turn TREBLE (CMT-CP2WA).  
You can adjust the treble in 7 steps  
(+3 ~ 0 ~ -3).

## Using the Radio Data System (RDS)

(European model only)

### What is the Radio Data System?

Radio Data System (RDS)\* is a broadcasting service that allows radio stations to send additional information along with the regular program signal.

#### Note

RDS may not work properly if the station you have tuned in is not transmitting the RDS signal properly or if the signal is weak.

\* Not all FM stations provide RDS service, nor do they all provide the same types of services. If you are not familiar with the RDS system, check with your local radio stations for details on RDS services in your area.

### Receiving RDS broadcasts

➔ Simply select a station from the FM band.

When you tune in a station that provides RDS services, the station name appears in the display.

### To check the RDS information

Each time you press DISPLAY on the remote, the display changes as follows:


Station name\*  
↑  
↓  
Frequency

\* If the RDS broadcast is not properly received, the station name may not appear in the display.

## Falling asleep to music

### — Sleep Timer

The Sleep Timer function lets you set a time, after which the system stops playing and turns off automatically. You can thus fall asleep to music.

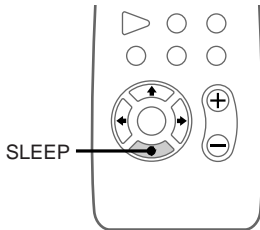

→ Press SLEEP.

Each time you press this button, the sleep time changes as follows:

AUTO → 90min → 80min → 70min  
↑  
OFF ← 10min .... ← 60min

### When you choose “AUTO”

The system turns off after the current CD or tape finishes playing (up to 100 minutes). The system also turns off when you manually stop the CD or tape.

### To check the remaining sleep time

Press SLEEP once.

### To change the sleep time

Press SLEEP repeatedly until the time you want appears.


### To cancel the Sleep Timer function

Press SLEEP repeatedly until “OFF” appears.

## Waking up to music

### — Daily Timer

By setting the Daily Timer, you can make the system automatically turn on and off at specified times. To use this function, make sure that you have set the system clock correctly (see “Step 2: Setting the time” on page 6).

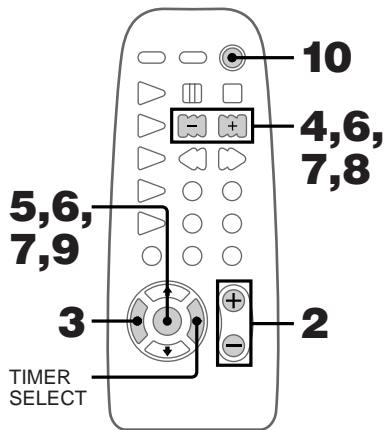

**1** Prepare the music source you want to listen to when the system turns on.

- CD: Place a CD. To start playing from a specific track, make a program (see “Playing CD tracks in a favorite order” on page 19).
- Tape: Insert a tape with the side you want to play facing towards you.
- Radio: Tune in the preset radio station that you want (see “Listening to the radio” on page 12).

**2** Press VOL +/- to adjust the volume.

**3** Press TIMER SET.



**4** Press  $\lll$  or  $\ggg$  repeatedly until “SET DAILY” appears.  
After “SET DAILY” scrolls across the display, “☺ DAILY” appears.

**5** Press ENTER.  
“ON TIME” appears, then the hour indication flashes.



 
**6** Set the starting time.  
Press  $\lll$  or  $\ggg$  repeatedly to set the hour, then press ENTER.  
The minute indication begins flashing next.



Press  $\lll$  or  $\ggg$  repeatedly to set the minute, then press ENTER.  
“OFF TIME” appears, then the hour indication flashes again.

**7** Set the stopping time by repeating step 6.

**8** Press  $\lll$  or  $\ggg$  repeatedly until the music source you want appears.  
Each time you press the button, the display changes as follows:



**9** Press ENTER.  
The starting time, the stopping time, and the music source appear in turn, then the original display returns.

**10** Press I/⏻ to turn off the system.

**To check the settings**

Press TIMER SELECT repeatedly until “☺ DAILY” appears in the display.  
The preset items appear in turn.

**To turn off the Daily Timer**

Press TIMER SELECT repeatedly until “☺ DAILY” disappears. To turn the timer on again, press TIMER SELECT repeatedly until “☺ DAILY” appears, then press I/⏻ to turn off the system.

**Tip**


Once you set the Daily Timer, the time settings will remain in the system’s memory until you change them, even when you turn the system or the Daily Timer off. The settings that were last used will be in effect when you turn the timer on again.

**Notes**

- The system will turn on 15 seconds before the specified starting time.
- The timer will not operate if the starting time and the stopping time are the same.
- When you have set the Sleep Timer, the Daily Timer will not operate until the Sleep Timer function is turned off.
- You cannot operate the Daily Timer and the REC Timer (see page 26) at the same time.

# Timer-activated recording of radio programs — REC Timer

Set the REC Timer to make the system start recording from a preset radio station at a specified time (see “Step 3: Presetting radio stations” on page 7). To use this function, make sure that you have set the system clock correctly (see “Step 2: Setting the time” on page 6).

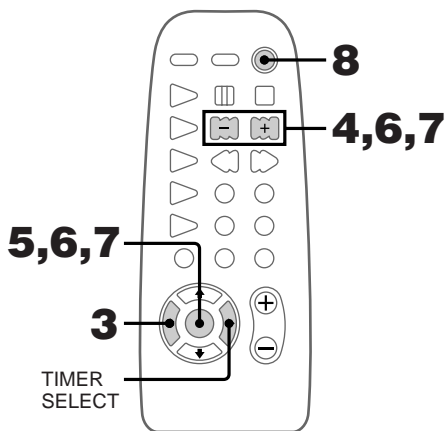

- 1** Tune in the preset radio station that you want to record from (see “Listening to the radio” on page 12).
- 2** Insert a recordable tape into cassette holder B with the side you want to record on facing towards you.
- 3** Press **TIMER SET**.
- 4** Press **◀◀** or **▶▶** repeatedly until “SET REC” appears.  
After “SET REC” scrolls across the display, “⊖ REC” appears.

- 5** Press **ENTER**.  
“ON TIME” appears, then the hour indication flashes.



- 6** Set the starting time.  
Press **◀◀** or **▶▶** repeatedly to set the hour, then press **ENTER**.  
The minute indication begins flashing next.



Press **◀◀** or **▶▶** repeatedly to set the minute, then press **ENTER**.  
“OFF TIME” appears, then the hour indication flashes again.

- 7** Set the stopping time by repeating step 6.  
The starting time, the stopping time, “TUNER”, and the preset station appear in turn, then the original display returns.

- 8** Press **I/⏻** to turn off the system.  
When recording starts, the volume level is automatically set to the minimum.

## To check the settings

Press TIMER SELECT repeatedly until “⏸ REC” appears in the display.

The preset items appear in turn.

## To turn off the REC Timer

Press TIMER SELECT repeatedly until “⏸ REC” disappears. To turn the timer on again, press TIMER SELECT repeatedly until “⏸ REC” appears, then press I/⏸ to turn off the system.

### Tip

Once you set the REC Timer, the time settings will remain in the system’s memory until you change them, even when you turn the system or the REC Timer off. The settings that were last used will be in effect when you turn the timer on again.

### Notes

- The system will turn on 15 seconds before the specified starting time.
- If the power is on at the specified starting time, recording will not occur.
- The timer will not operate if the starting time and the stopping time are the same.
- When you have set the Sleep Timer, the REC Timer will not operate until the Sleep Timer function is turned off.
- You cannot operate the Daily Timer and the REC Timer at the same time.

## Precautions

### On operating voltage

Before operating the system, check that the operating voltage of your system is identical with the voltage of your local power supply.

### On safety

- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- Unplug the system from the wall outlet (mains) if it will not be used for an extended period of time. To disconnect the power cord (mains lead), pull it out by the plug. Never pull the cord itself.
- Should any solid object or liquid fall into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- AC power cord must be changed only at the qualified service shop.

### On placement

- Place the system in a location with adequate ventilation to prevent heat build-up in the system.
- Do not place the unit in an inclined position.
- Do not place the unit in locations where it is:
  - Extremely hot or cold
  - Dusty or dirty
  - Very humid
  - Subject to vibrations
  - Subject to direct sunlight

### On operation

- If the system is brought directly from a cold place to a warm place, or is placed in a very damp room, moisture may condense on the lens inside the CD player. Should this occur, the system will not operate properly. Remove the CD and leave the system turned on for about an hour until the moisture evaporates.
- When moving the unit, remove any disc that may be on the disc tray.



If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

## Notes on CDs


- Before playing a CD, clean the CD surface with a cleaning cloth. Wipe the CD from the center out.
- Do not play a CD with tape, stickers, or adhesives on any of its surfaces as this may damage the system.
- Do not clean CDs with solvents such as benzene, thinner, commercially available cleaners or antistatic sprays intended for vinyl LPs.
- Do not expose CDs to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight.

## To save a tape permanently

To prevent a tape from being accidentally recorded over, break off the cassette tabs from side A or side B as illustrated.

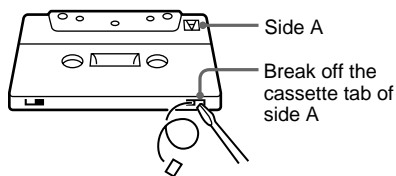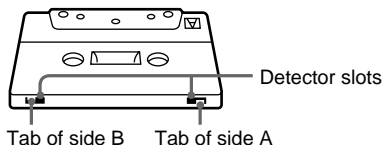

If you later want to reuse the tape for recording, cover the broken tab with adhesive tape. However, be careful not to cover the detector slots which allow the tape player to automatically detect the type of tape.

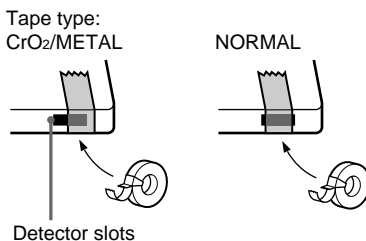

## Before placing a cassette in the tape deck

Take up any slack in the tape. Otherwise the tape may get entangled in the tape deck's playing mechanism and become damaged.

## When using a tape longer than 90 minutes

The tape is very elastic. Do not change the tape operations such as play, stop, and fast-winding etc. too frequently. The tape may get entangled in the tape deck's playing mechanism.

## Cleaning the tape heads

Clean the tape heads after every 10 hours of use.

When the tape heads become dirty

- the sound becomes distorted
- the sound level decreases
- the sound drops out
- the tape does not erase completely
- the tape does not record

Make sure to clean the tape heads before making an important recording or after playing an old tape. Use a commercially available dry-type or wet-type cleaning cassette. For details, refer to the instructions of the cleaning cassette.

## Demagnetizing the tape heads

Demagnetize the tape heads and the metal parts that have contact with the tape after every 20 to 30 hours of use with a commercially available demagnetizing cassette. For details, refer to the instructions of the demagnetizing cassette.

## Cleaning the cabinet

Clean the cabinet, panel and controls with a soft cloth slightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as thinner, benzene or alcohol.

# Troubleshooting

Should you encounter a problem with your system, do the following:

- 1 Make sure the power cord and speaker cords are correctly and firmly connected.
- 2 Find your problem in the troubleshooting checklist below and take the indicated corrective action.

If the problem persists after doing all of the above, consult your nearest Sony dealer.

## General

### There is no sound from the speakers.

- Adjust VOLUME.
- The headphones are connected.
- Check the speaker connections.

### There is severe hum or noise.

- A TV or VCR is placed too close to the unit. Move the unit away from the TV or VCR.

### "0:00" (or "AM 12:00") flashes in the display.

- A power interruption has occurred. Set the clock (see page 6) and timer settings (see pages 24 and 26) again.

### The timer does not function.

- Make sure the clock is correctly set (see page 6).

### "☹ DAILY" and "☹ REC" do not appear when you press TIMER SELECT on the remote.

- Make sure each timer is correctly set (see pages 24 and 26).
- Make sure the clock is correctly set (see page 6).

### The color on the TV screen is irregular.

- Move the speakers farther away from the TV set.

***continued***

## **Troubleshooting (continued)**

---

### **The remote does not work.**

- There is an obstacle between the remote and the unit.
  - You are not pointing the remote in the direction of the system's sensor.
  - The batteries in the remote have run down. Replace the batteries.
  - Make sure that the batteries are inserted correctly.
- 

## **Speakers**

---

### **Sound comes from only one channel, or the left and right volumes are unbalanced.**

- Check the speaker connections and placement.
- 

## **CD Player**

---

### **The CD will not play.**

- The CD is dirty.
  - The surface of the CD is scratched. Replace the CD.
  - The CD is inserted with the label side down.
  - Condensation has built up in the system. Remove the CD and leave the system turned on for about an hour until the moisture evaporates.
- 

### **Play does not start from the first track.**

- The player is in Program or Shuffle Play. Press PLAY MODE repeatedly until "PGM" and "SHUFFLE" disappear.
- 

## **Tape Deck**

---

### **Recording cannot be done.**

- There is no tape in cassette holder B.
  - The record protect tab has been removed from the cassette (see page 28).
  - The tape has come to the end.
- 

### **The tape does not record or play, or there is a decrease in sound level.**

- The heads are dirty. Clean them (see page 29).
  - The record/playback heads are magnetized. Demagnetize them (see page 29).
- 

### **The tape does not erase completely.**

- The record/playback heads are magnetized. Demagnetize them (see page 29).
- 

### **There is excessive wow or flutter, or the sound drops out.**

- The capstans or pinch rollers are dirty. Clean them (see page 29).
- 

### **Noise increases or the high frequencies are missing.**

- The record/playback heads are magnetized. Demagnetize them (see page 29).
- 

## **Tuner**

---

### **There is a severe hum or noise ("TUNED" or "STEREO" flashes).**

- Adjust the antenna.
  - The signal strength is too weak. Connect an external antenna (see page 9).
  - Make sure that the antenna is connected properly.
  - Do not bend or roll up the antenna.
  - The two wires comprising the FM antenna have been pulled further apart since the system was first purchased. Repair or replace with a new one.
  - The AM antenna wire is detached from the stand.
- 

### **A stereo FM program cannot be received in stereo.**

- Press STEREO/MONO on the remote until "STEREO" appears in the display.
-

## Resetting the system

- 1 Disconnect the power cord from the wall outlet.
- 2 Press I/⏪ down and connect the power cord to the wall outlet again (CMT-CP2W)/press TAPE A ■ and I/⏪ down, and connect the power cord to the wall outlet again (CMT-CP2WA).

The system is reset to the factory settings. All previous settings such as the preset stations, clock, and timers are cleared and must be set again.

# Specifications

## Amplifier section

### For the U.S. model

## AUDIO POWER SPECIFICATIONS

### POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 6-ohm loads both channels driven, from 70 - 20,000 Hz; rated 29 watts per channel minimum RMS power, with no more than 0.9% total harmonic distortion from 250 milliwatts to rated output.

#### North American model:

Continuous RMS power output (reference):  
35 + 35 W  
(6 ohms at 1 kHz, 10% THD)

Total harmonic distortion less than 0.07% (6 ohms at 1 kHz, 28 W)

#### European model:

DIN power output (rated): 30 + 30 W  
(6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):  
35 + 35 W  
(6 ohms at 1 kHz, 10% THD)

Music power output (reference):  
130 W

#### Other models:

The following measured at 230 V AC, 60 Hz

DIN power output (rated): 30 + 30 W  
(6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):  
35 + 35 W  
(6 ohms at 1 kHz, 10% THD)

The following measured at 220 V AC, 60 Hz

DIN power output (rated): 28 + 28 W  
(6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):  
33 + 33 W  
(6 ohms at 1 kHz, 10% THD)

#### Inputs

MD IN (phono jacks): Sensitivity 500 mV, impedance  
47 kilohms

VIDEO IN (phono jacks): Sensitivity 250 mV, impedance  
47 kilohms

#### Outputs

LINE OUT (phono jacks): Sensitivity 250 mV, impedance  
1 kilohm

OPTICAL DIGITAL OUT CD:  
Optical

PHONES (stereo phone jack):  
Accepts headphones with an  
impedance of 8 ohms or more

SPEAKER:  
Active speaker system, 6 ohms

## Specifications (continued)

### CD player section

|                    |   |
|--------------------|---|
| System             | Compact disc and digital audio system   |
| Laser              | Semiconductor laser<br>( $\lambda = 780$ nm)<br>Emission duration: continuous   |
| Laser output       | MAX 44.6 $\mu$ W*<br>* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture. |
| Wavelength         | 780 - 790 nm  |
| Frequency response | 20 Hz - 20 kHz ( $\pm 0.5$ dB)  |

### Tape player section

|                                   |   |
|-----------------------------------|---|
| Recording system                  | 4-track 2-channel stereo  |
| Frequency response (DOLBY NR OFF) | 50 - 13,000 Hz ( $\pm 3$ dB), using a Sony TYPE I cassette<br>50 - 14,000 Hz ( $\pm 3$ dB), using a Sony TYPE II cassette |
| Wow and flutter                   | $\pm 0.15\%$ W. Peak (IEC)<br>$0.1\%$ W. RMS (NAB)<br>$\pm 0.2\%$ W. Peak (DIN)   |

### Tuner section

FM stereo, FM/AM superheterodyne tuner

#### FM tuner section

|                        |                                    |
|------------------------|------------------------------------|
| Tuning range           |                                    |
| North American model:  | 87.5 - 108.0 MHz<br>(100-kHz step) |
| Other models:          | 87.5 - 108.0 MHz<br>(50-kHz step)  |
| Antenna                | FM wire antenna                    |
| Antenna terminals      | 75 ohm unbalanced                  |
| Intermediate frequency | 10.7 MHz                           |

#### AM tuner section

|                        |   |
|------------------------|---|
| Tuning range           |   |
| North American model:  | 530 - 1,710 kHz<br>(with the tuning interval set at 10 kHz)<br>531 - 1,710 kHz<br>(with the tuning interval set at 9 kHz) |
| European model:        | 531 - 1,602 kHz<br>(with the tuning interval set at 9 kHz)  |
| Middle Eastern model:  | 531 - 1,602 kHz<br>(with the tuning interval set at 9 kHz)  |
| Other models:          | 530 - 1,710 kHz<br>(with the tuning interval set at 10 kHz)<br>531 - 1,602 kHz<br>(with the tuning interval set at 9 kHz) |
| Antenna                | AM loop antenna, external antenna terminal  |
| Intermediate frequency | 450 kHz   |

## Speakers

|                    |   |
|--------------------|---|
| Speaker system     | Two-way, bass reflex system   |
| Speaker units      | 13 cm dia., cone type woofer<br>2.5 cm dia., semi-dome-type tweeter |
| Rated impedance    | 6 ohms  |
| Dimensions (w/h/d) | Approx. 170 $\times$ 275 $\times$ 265 mm                            |
| Mass               | Approx. 3.0 kg net per speaker                                      |

## General

|                       |   |
|-----------------------|---|
| Power requirements    |   |
| North American model: | 120 V AC, 60 Hz   |
| European model:       | 230 V AC, 50/60 Hz  |
| Australian model:     | 220 - 240 V AC, 50/60 Hz  |
| Other models:         | 110 - 120 V or 220 - 240 V AC ,<br>50/60 Hz<br>Adjustable with voltage selector |

Power consumption 70 W

Dimensions (w/h/d) Approx. 225  $\times$  273  $\times$  350 mm  
incl. projecting parts and controls

Mass Approx. 6.7 kg

Supplied accessories Remote commander (1)  
AM loop antenna (1)  
FM wire antenna (1)  
Batteries (2)

Design and specifications are subject to change without notice.



# Parts identification for the remote

You can also operate the system with the supplied remote.

Buttons marked with “\*” are provided only on the remote.

## TUNER

| Remote Button(s) | Function   |
|------------------|--|
| TUNER/BAND       | Selects FM or AM.                                |
| TUNING MODE      | Selects “AUTO”, “PRESET” or “MANUAL”.            |
| MEMORY*          | Presets a station.                               |
| STEREO/MONO*     | Selects “STEREO” or “MONO”.                      |
| ⏪/⏩              | Selects a preset number.                         |
| ⏮/⏭              | Scans for a station or selects a preset station. |

## CD

| Remote Button(s) | Function                                       |
|------------------|--|
| CD ▷             | Starts playback.                               |
| □                | Stops playback.                                |
| ⏪                | Pauses playback.                               |
| ⏪/⏩              | Selects a track (AMS: Automatic Music Sensor). |
| ⏮/⏭              | Locates a desired point in a track.            |
| CD REPEAT        | Repeats playback.                              |
| PLAY MODE        | Selects Shuffle, Program or Normal Play.       |
| DISPLAY*         | Changes the front panel display.               |

## TAPE

| Remote Button(s) | For operating the | Function   |
|------------------|-------------------|--|
| TAPE A (or B) ⏮  | Deck A or B       | Starts playback. Each time you press this button, the tape reverses direction. |
| □                | Deck A or B       | Stops playback.  |
| ⏪                | Deck A or B       | Pauses playback.   |
| ⏮/⏭              | Deck A or B       | Fast-forwards or rewinds.  |
| ● REC            | Deck B            | Records to tapes.  |
| DIR MODE*        | Deck A or B       | Selects “←”, “↔” or “R”.   |
| DOLBY NR*        | Deck A or B       | Turns on or off the Dolby NR system.   |

## TIMER

| Remote Button | Function   |
|---------------|--|
| SLEEP*        | Selects a sleep time.                              |
| TIMER SET*    | Sets the time, Daily Timer or REC Timer.           |
| TIMER SELECT* | Checks the settings and turns on or off the timer. |

## OTHERS

| Remote Button(s) | Function                        |
|------------------|---------------------------------|
| I/⏻              | Turns on or off the system.     |
| VOL +/-          | Adjusts the volume.             |
| FUNCTION         | Selects the source.             |
| DSG              | Generates a more dynamic sound. |

# Index

## A

- Adjusting
  - the bass 23
  - the treble 23
  - the volume 10, 13, 15
- Antennas 4, 9
- Automatic Source Selection 10, 13, 16

## B

- Batteries 5

## C

- CD player 10, 11, 18, 21
- Clock setting 6
- Connecting. *See* Hooking up

## D, E, F

- Daily Timer 24

## G

- Generating a more dynamic sound 23

## H, I, J, K, L, M

- High-speed Dubbing 16
- Hooking up
  - optional components 8
  - the antenna 4, 9
  - the power 5
  - the system 4

## N

- Normal Play 10

## O

- One Touch Play 10, 13, 16

## P, Q

- Playing
  - a CD 10
  - a tape 15
  - tracks in random order (Shuffle Play) 19
  - tracks in the desired order (Program Play) 19
  - tracks repeatedly (Repeat Play) 18
- Presetting radio stations 7
- Preset Tuning 12
- Program Edit 21
- Program Play 19
- Protecting recordings 28

## R

- Radio stations
  - presetting 7
  - tuning in 12
- Recording
  - a CD 11
  - a radio program 13
  - a tape manually 20
  - CDs by specifying the track order 21
  - timer-activated recording 26
- Relay Play 15
- Repeat Play 18
- Resetting the system 31

## S

- Saving recordings 28
- Setting the time 6
- Shuffle Play 19
- Sleep Timer 24
- Speakers 4

## T

- Tape deck 11, 13, 15, 16, 20, 26
- Timer
  - falling asleep to music 24
  - timer-activated recording 26
  - waking up to music 24
- Troubleshooting 29
- Tuner 7, 12, 13, 23, 26

## U, V, W, X, Y, Z

- Using the display 18
- Using the RDS 23



---

Sony  line

<http://www.world.sony.com/>

Sony Corporation Printed in Korea

---