

SONY®

KP-61PS1
KP-53PS1
KP-48PS1

Checking the Accessories Supplied

1

Connecting the Aerial and VCR

3

Quick Start Guide

Thank you for purchasing this Sony product.

After following this step by step guide you will be able to:

Insert Batteries into the Remote Control.


Connect the Aerial to your projection TV.

Select the language of the menu screens.


Tune your projection TV.

Change the Programme order of the TV channels.

View TV Programmes.

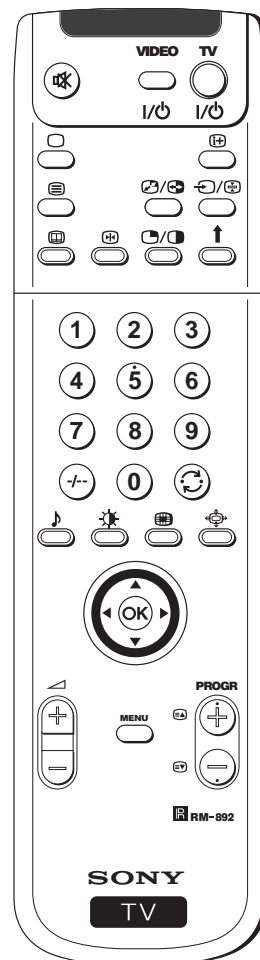


Remote Control

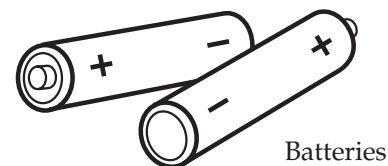

Batteries

Inserting Batteries into the Remote Control

2

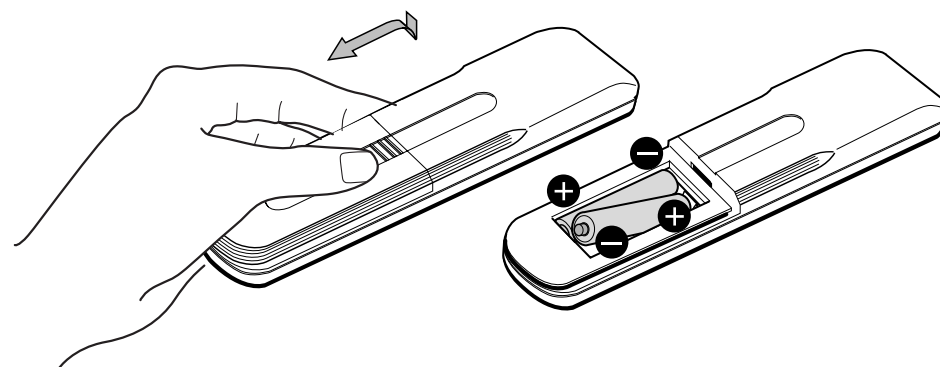


100 Hz Projection TV


4-076-366-01 (1)

Ecological Paper - Totally Chlorine Free

i Connecting cables are not supplied.

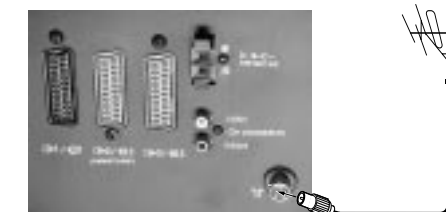

OR

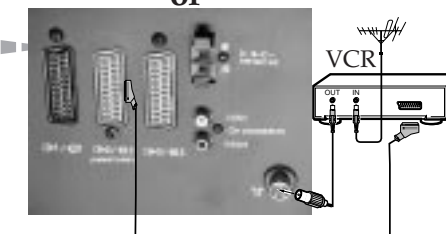


i The Scart lead is optional. If you use this optional connection it can improve picture and sound quality when using VCR.

A If you do not use a Scart lead, after automatically tune the projection TV use the "Manually Tuning the TV" section of the instruction manual to tune in the channel of the VCR signal. Also refer to your VCR instruction manual to get the channel of the VCR signal.

Switching on the projection TV

4

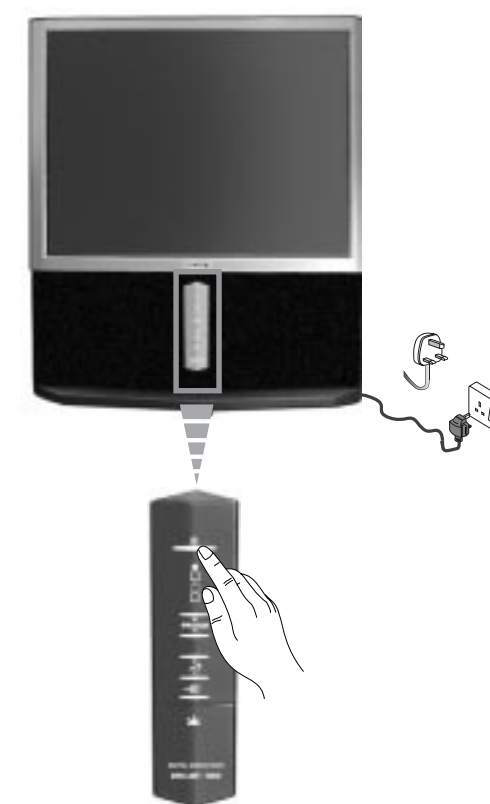

Connect the TV plug to the mains socket (220-240V AC, 50Hz).

Push in the On/Off switch on the front of the TV.


Selecting the language of the menu screens

This projection TV set works with menu screens. By following the instructions below, you can select the desired language of the menu screens as well as the country in which you wish to operate the set.


5



The first time that you switch on your projection TV, the Language/Country menu appears automatically.

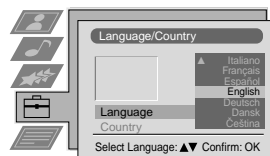


Push the joystick on the remote control to ▼ or ▲ to select the language, then press the OK button on the remote control to confirm your selection.

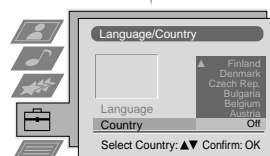

Push the joystick to ▼ or ▲ to select the country in which you will operate the projection TV set, then press OK to confirm your selection.

i Select "Off" instead of a country if you do not want your channels (TV Broadcasts) stored in a given channel sequence starting from programme position 1.

 
The Automatic Tuning menu appears on the TV screen in the selected language.




Automatically Tuning the TV

You need to tune the TV to receive channels (TV Broadcast). By following the instructions below, this projection TV automatically searches and stores all available channels for you.

 
6



 Press the OK button on the remote control to select YES.




Confirm that the aerial is connected and then press the OK button on the remote control.

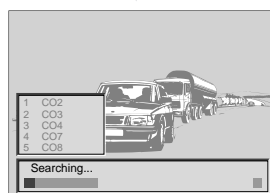

The TV starts to automatically search and store all available channels (TV Broadcast) for you.

⚠ This procedure could take some minutes. Please be patient and do not press any button while the automatic tuning is in progress. Otherwise the automatically tuning will be not completed.

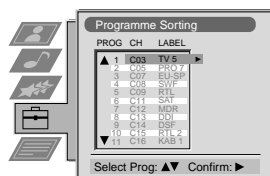

When the automatic tuning is finished, the Programme Sorting menu appears on the screen.


Changing the Programme Order of the TV channels

By following the instructions below, you can rearrange the order in which the channels appear on the screen.

7




a) If you do not wish to change the channel order:

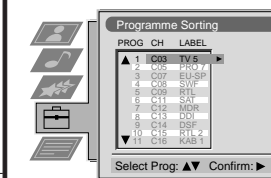


- Press the MENU button on the remote control to exit and return to the normal TV screen.

👉 Your projection TV is now ready for use.

b) If you wish to change the channel order:

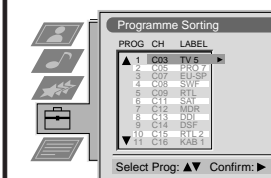

- Push the joystick on the remote control to ▼ or ▲ to select the programme number with the channel (TV Broadcast) you wish to rearrange, then push to ►.

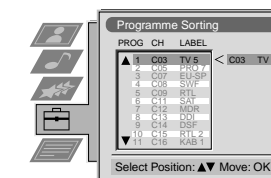

- Push the joystick to ▼ or ▲ to select the new programme number position for your selected channel (TV Broadcast), then press the OK button.

i The selected channel now moves to its new programme position and the other channels move accordingly.

- Repeat all the above steps if you wish to change the order of the other channels on your TV.

- Press the MENU button on the remote control to exit and return to the normal TV screen.

👉 Your projection TV is now ready for use.

Your television stations are now stored in your television's memory.