

Thank you for purchasing this Sony product.

After following this step by step guide, you will be able to:

Insert Batteries into the Remote Control.

Connect the Aerial to your TV.

Select the language of the menu screens.

Tune your TV.


Change the Programme order of the Broadcast channels.

**Adjust the picture slant.
(only for KV-21CT1U)**


View TV Programmes.



1 Remote Control
RM-W100

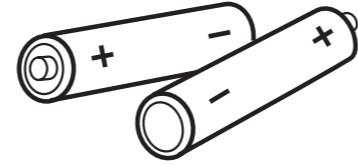


2 Batteries (AA size)

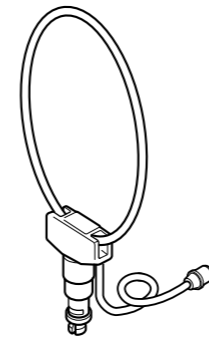

1 Loop aerial
(only for KV-14CT1U)

**Inserting Batteries into
the Remote Control**

- ⚠ • Make sure you insert the supplied batteries using the correct polarities.
- Always remember to dispose of used batteries in an environmental friendly way.

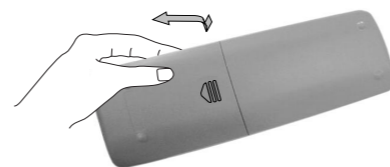

**FD Trinitron
Colour Television**

4-095-126-02 (1)



1


i For a better reception we recommend you connect an external aerial. However, where an external aerial is not available and your local UHF signal is strong, you can connect the supplied loop aerial as follows:

- 1 Insert the loop aerial into the opening on top of the set until it clicks.
- 2 Connect the aerial connector to the aerial socket on the rear of the set.
- 3 After switching on the TV, adjust the aerial for optimum reception.



**Connecting an Outdoor
Aerial and VCR**

i Connecting cables are not supplied.

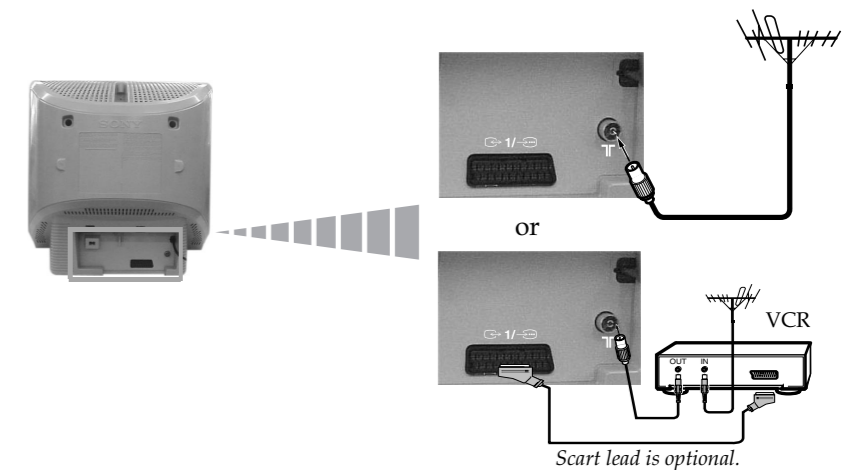

- i** The Scart lead is optional. If you use a Scart lead, it can improve the picture and sound quality when using a VCR.
- ⚠** If you do not have a Scart lead, tune in the VCR test signal to the TV programme number "0" by using the "Manual Programme Preset" option (for details on how to manually programme these presets, see page 14, step a) of the instruction manual). Refer to your VCR instruction manual to find out how to find the output channel of your VCR.

4

Switching on the TV

5

Automatically Tune the TV


You need to tune the TV to receive channels (TV Broadcast). By following the instructions below, this TV automatically searches and stores all available broadcast channels for you.

7

Changing the Programme Order of the Broadcast channels


By following the instructions below, you can rearrange the order in which the channels appear on the screen.

8

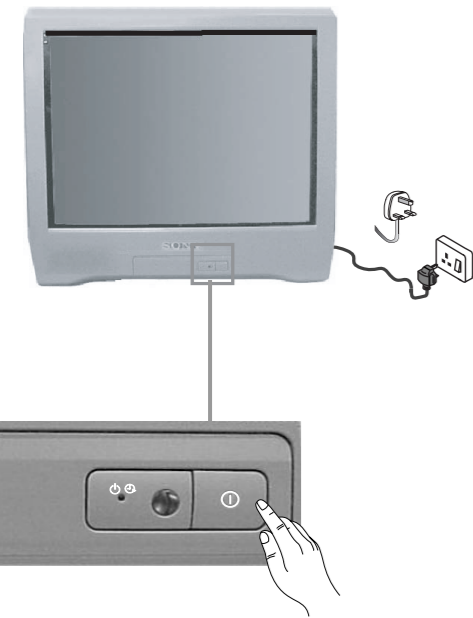


Connect the TV plug to the mains socket (220-240 VAC, 50Hz).

Press **⏻** On/Off button on the TV set to switch on the TV.

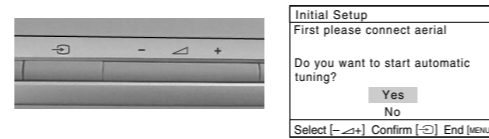

Ensure the aerial is connected as instructed, then press **⏻** to confirm.

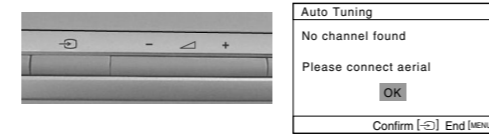


The TV automatically starts searching and storing all available broadcast channels for you.

⚠ This procedure could take some minutes. Please be patient and do not press any buttons, otherwise automatic tuning will not be completed.

⚠ If no channels were found during the auto tuning process, a new menu appears automatically on the screen asking you to connect the aerial. Please connect the aerial (refer step 3 or 4) and press **⏻**. The auto tuning process will start again.


When auto tuning process is finished, the **Program Sorting** menu appears on the screen.

a) If you wish to keep the broadcast channels in the tuned order:

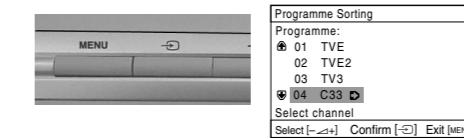

Press the **MENU** button to exit.


b) If you wish to store the broadcast channels in a different order:

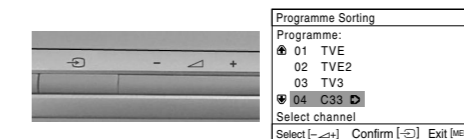

1 Press **⏪ +/-** to select the programme number with the channel (TV Broadcast) you wish to rearrange, then press **⏻**.

2 Press **⏪ +/-** to select the new programme number position for your selected channel (TV Broadcast), then press **⏻**.


3 Repeat steps 1 and 2 if you wish to change the order of the other channels.

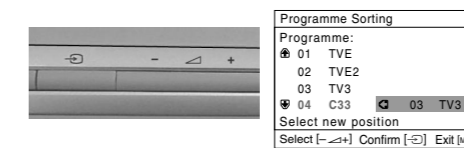

Selecting the language of the menu screens

6

This TV set works with menu screens. By following the instructions below, you can select the desired language of the menu screens.

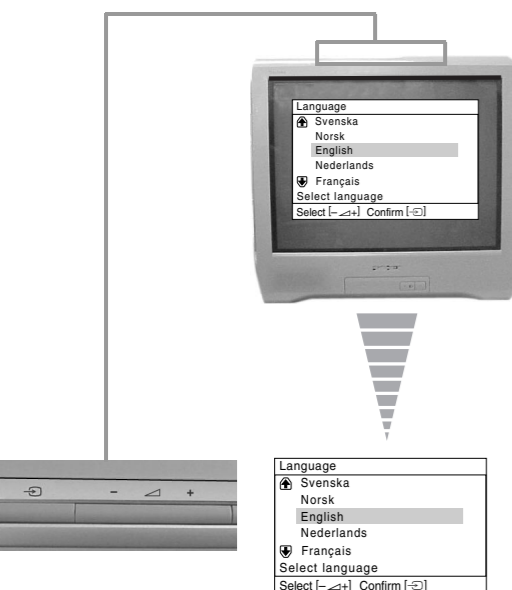

The first time that you switch on your TV, the Language menu displays automatically on the TV screen.

Press **⏪ +/-** button on the top control panel to select the language, then press **⏻** to confirm your selection. From now on all menus will appear in the selected language.

Correcting the Picture Slant (only for KV-21CT1U)

9

Because of the earth's magnetism, the picture might slant. By following the instructions below, you can correct the picture slant if it is necessary.



a) If it is not necessary, press **⏻**.
b) If it is necessary, press **⏪ +/-** to correct any slant of the picture. Finally press **⏻** to store.

- i** To allow this menu to appear again, press and hold **MENU** button at top control panel for about 5 seconds.
- The **MENU**, **⏪** and **⏩** buttons on the remote control can also be used for the operations above.

👍 Your TV is now ready for use.

Your television stations are now stored in your television's memory.