

The illustrations in the guide designate speakers as [A] through [D].

- [A] Front speaker (left)
- [B] Front speaker (right)
- [C] Subwoofer
- [D] Subwoofer


HT-DDW2500

Quick Setup Guide



Sony Corporation © 2009 Printed in Malaysia

1: Installing the speakers

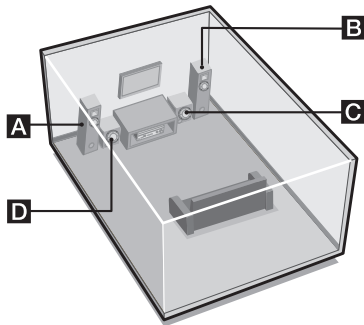

1: Installing the speakers

The illustration at left shows an example of two speakers and two subwoofers configuration. Refer to the operating instructions supplied with the receiver.

About speaker placement

The front speakers, subwoofers are magnetically shielded to allow it to be installed near a TV set.

2: Connecting the speakers

The illustrations below show how to connect the speakers. Before you connect the speakers, check the speaker label on the rear panel of the speakers for the speaker type. For details, refer to step 2 of "Getting started" of the operating instructions supplied with this receiver.

About speaker cords


- Black striped wire is minus (-) in polarity and should be connected to the minus (-) speaker terminal.

About speaker jacks


- Connect the ⊕ jack to the ⊕ jack of the receiver and connect the ⊖ jack to the ⊖ jack of the receiver.
- Refer to the illustration below for details of connecting speaker cords.

2: Connecting the speakers


[A] [B]

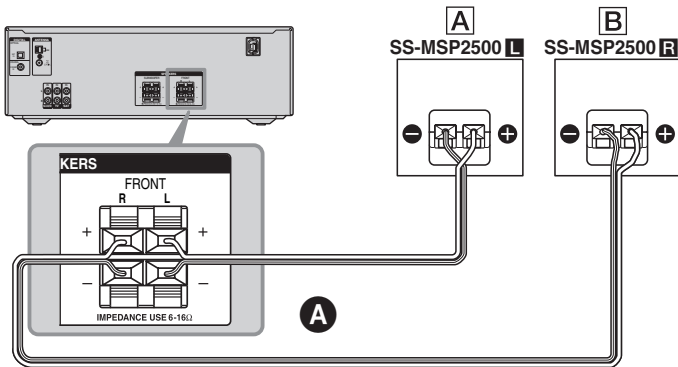

[C] [D]

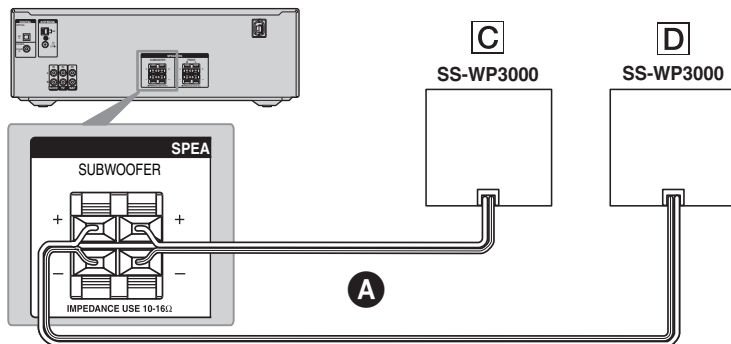

[A] Speaker cord (supplied)

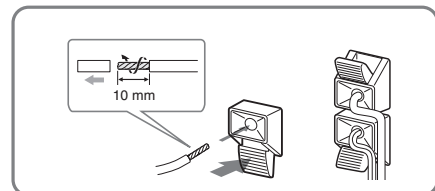


3: Connecting other components

Video components

Notes

- Be sure to connect the video output of the DVD player/Blu-ray disc player and Satellite tuner/Set-top box to the TV, so that the image is displayed on the TV. Refer to the operating instructions of each connected component for details.
- To fully enjoy surround sound while watching TV programmes, connect the audio output of your TV jacks as shown and turn off the TV's volume or activate the TV's muting function.
- To enjoy surround sound from the DVD player or Blu-ray disc player, be sure to connect the coaxial digital cord.

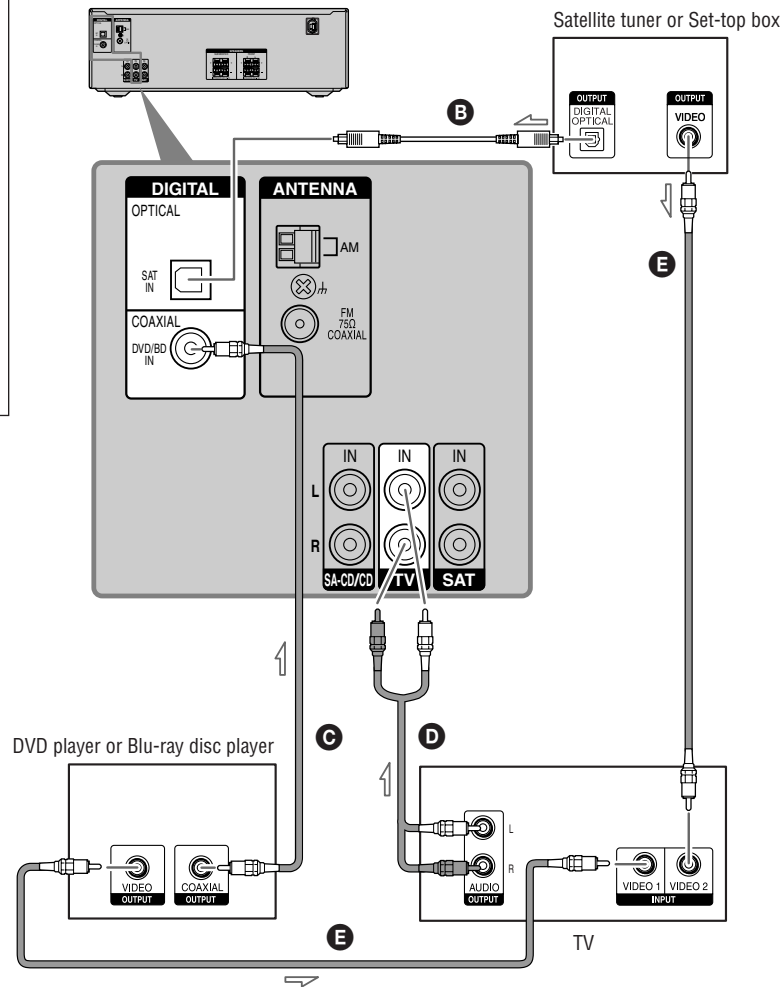

- B** Optical digital cord (not supplied)
- C** Coaxial digital cord (supplied)
- D** Audio cord (not supplied)
- E** Video cord (not supplied)

3: Connecting other components

This is an example of how to connect this receiver and your components. Refer to step 3 of "Getting started" of the operating instructions supplied with this receiver for details on other connections and other components.

4: Connect all power cords last

Connect the AC power cord to a wall outlet. Refer to "Connecting the AC power cord" in the operating instructions supplied with the receiver.

5: Setting up other components

You should set up each component so that the sound is output from the speakers correctly when you playback a connected component. Refer to the operating instructions supplied with each component.

Note

If no digital signal is input through the COAXIAL or OPTICAL jack on the receiver, "NO INPUT" appears on the display. This is not a malfunction.

After the setting

The receiver is now ready to use. Press the input button on the remote to select the component you want to playback. Refer to the operating instructions supplied with the receiver for details.

6: Setting up the system

You can make various settings to suit your preference. For details, refer to "6: Adjusting the speaker levels and balance" in the operating instructions supplied with the receiver.