 



Network Settings

Internet Settings

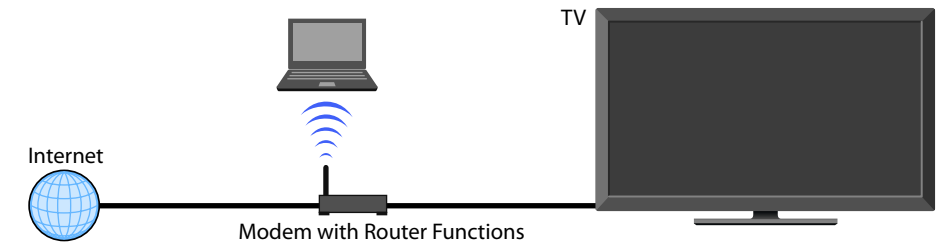

Wireless LAN Ready

 
Wireless LAN Ready lets you easily access the Internet and your home network with the USB Wireless LAN Adapter UWA-BR100 (as of January 2010). By inserting the USB Wireless LAN Adapter into your TV's USB port, you can easily create a cable-free network.

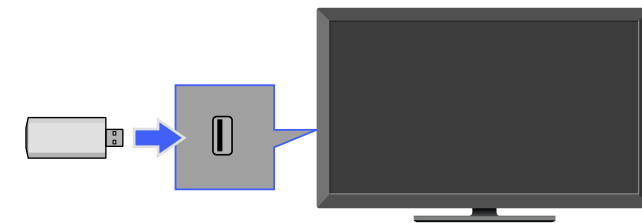

- Before setting up the wireless LAN function of the TV, be sure to set up a wireless LAN router.
- The USB Wireless LAN Adapter is supplied or available as an optional accessory, depending on your TV model. In some regions/countries, the USB Wireless LAN Adapter may not be available.
- Available bit-rate for smooth video playback is up to 12 Mbps. (The value may drop depending on your network environment.)

Built-in Wireless LAN (Built-in Wireless LAN model only)

 The built-in Wireless LAN device allows you to access the Internet and your home network. With this feature, you can easily connect to a wireless LAN and enjoy the benefits of networking in a cable-free environment.

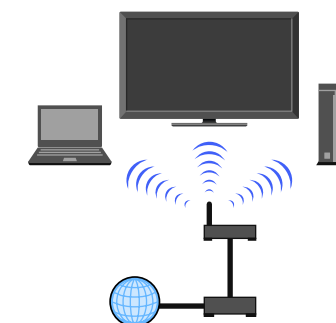

- Before setting up the wireless LAN function of the TV, be sure to set up a wireless LAN router.

 


Connecting to the Internet

Using the network feature you can connect the TV to the Internet. The set-up procedure differs depending on the type of network and LAN router.

Before setting up the Internet connection:

- Be sure to set up a LAN router.
- Check your wireless LAN environment using the following chart. If you have a wired network environment, directly refer to (4).

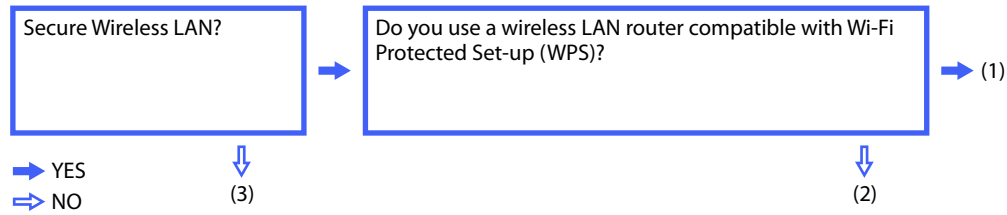

- (1) ➔ Follow the configuration for “Network Set-up” and “Secured Network with Wi-Fi Protected Set-up (WPS)”.
- (2) ➔ Follow the configuration for “Network Set-up” and “Secured Network without Wi-Fi Protected Set-up (WPS)”.
- (3) ➔ Follow the configuration for “Network Set-up” and “Unsecured Network with Any Type of Wireless LAN Router”.
- (4) ➔ Refer to “Network Set-up” and follow the instructions that appear on the screen.

Network Set-up

“Network Set-up” helps you configure network settings with the settings wizard. Follow the instructions on the screen.

Press HOME, then select > Network > Network Set-up.

The start-up screen allows you to select a setting procedure according to your network environment.

“View Network Status”: Select to confirm your network status.

“Wired Set-up”: Use to connect to a wired network.

“Wireless Set-up”: Use to connect to a wireless network.

Secured Network with Wi-Fi Protected Set-up (WPS)

The WPS standard makes set-up of a secure wireless home network as straightforward as pressing the WPS button on the wireless LAN router. Before setting up a wireless LAN, check the position of the WPS button on the router and verify how to use it.

- 1 Select “Wireless Set-up” from the “Network Set-up” start-up screen.
- 2 Select “WPS (Push Button)” for Push Button method or “WPS (PIN)” for PIN method.
- 3 Follow the instructions that appear on the set-up screen.



- To connect to a wireless LAN with WPS, your wireless LAN router needs to support the WPS standard.

Secured Network without Wi-Fi Protected Set-up (WPS)

For setting up a wireless LAN, SSID (wireless network name) and security key (WEP or WPA key) will be required. If you do not know them, consult the instruction manual of your router.

- 1 Select “Wireless Set-up” from the “Network Set-up” start-up screen.
- 2 Select “Scan”, then select a network from the list of scanned wireless networks.
- 3 Follow the instructions that appear on the set-up screen.

Unsecured Network with Any Type of Wireless LAN Router

For setting up a wireless LAN, SSID (wireless network name) will be required. Security key (WEP or WPA key) will not be required because you need to select no security method in this procedure.

- 1 Select “Wireless Set-up” from the “Network Set-up” start-up screen.
- 2 Select “Scan”, then select a network from the list of scanned wireless networks.
- 3 Follow the instructions that appear on the set-up screen.

Checking the Network Connection

Enter the respective alphanumeric values for your router if necessary. The items that need to be set (e.g. IP Address, Subnet Mask, DHCP) may differ depending on the Internet service provider or router. For details, refer to the instruction manuals provided by your Internet service provider, or those supplied with the router.

- 1 Select “Auto” to set the IP Address and proxy server automatically, or “Custom” to set them manually.
- 2 Follow the instructions that appear on the set-up screen.



- If you use WPS for network set-up, the security settings of the wireless LAN router activate, and any equipment previously connected to the wireless LAN in a non-secure status will be disconnected from the network.
In this case, activate the security settings of the disconnected equipment and then reconnect. Or, you can deactivate the security settings of the wireless LAN router, and then connect the equipment to a TV in a non-secure status.