



快速设定指南/Quick Setup Guide



BDV-IZ1000W

©2010 Sony Corporation Printed in Malaysia

1 连接扬声器/Connect the speakers


首先，装配扬声器（请参阅扬声器安装指南），然后连接扬声器导线，使其与装置上SPEAKERS插孔的颜色相符。

First, assemble the speakers (refer to the Speaker Installation Guide), and then connect the speaker cords to match the color of the SPEAKERS jacks of the unit.

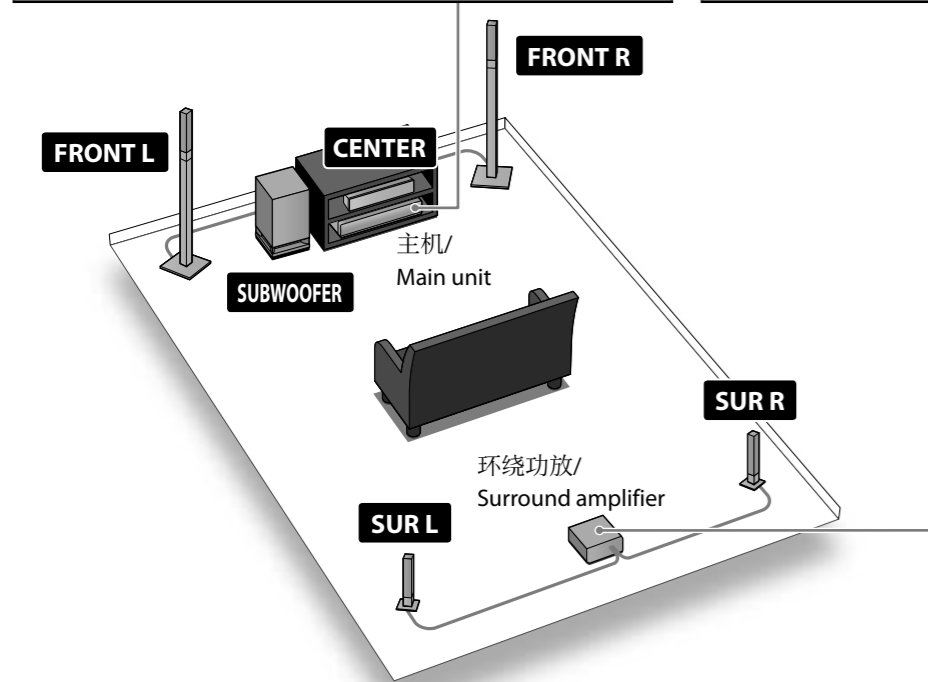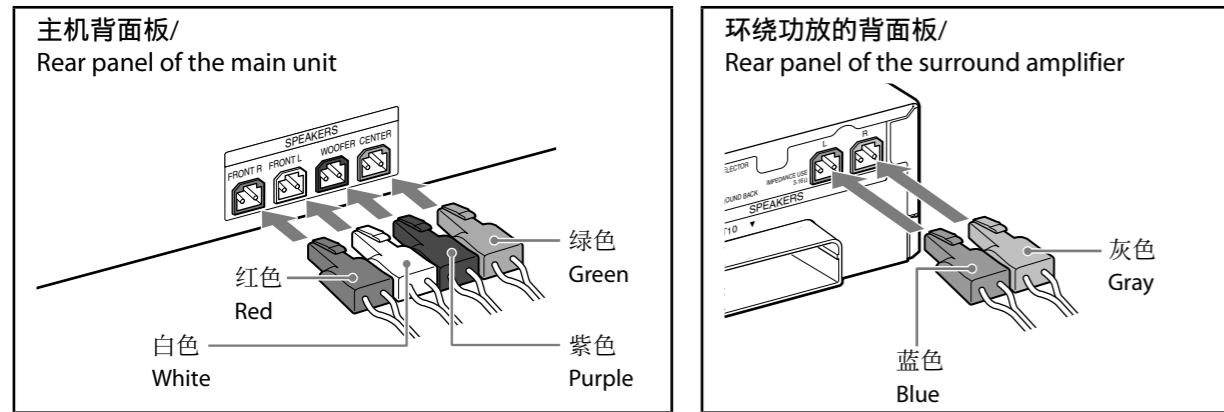

将扬声器导线连接至中置扬声器和低音扬声器
To connect speaker cords to the center speaker and the subwoofer

将带色环的扬声器导线连接至⊕。/Connect the speaker cord with the colored tube to ⊕.


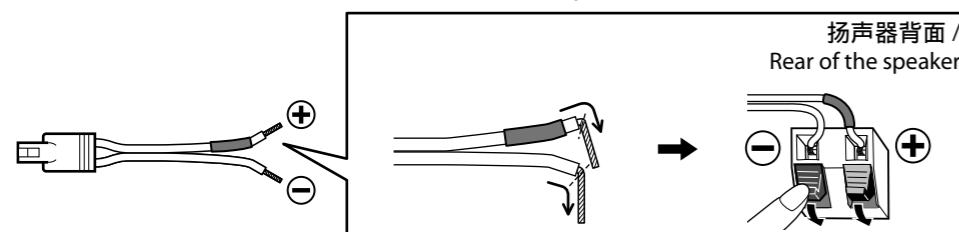


2 连接电视机/机顶盒/Connect your TV/set-top box

视电视机或机顶盒上的插孔而定，选择视频和音频的连接方式。

Depending on the jacks on your TV or set-top box, select the video and audio connection method.

连接至电视机/Connecting to your TV

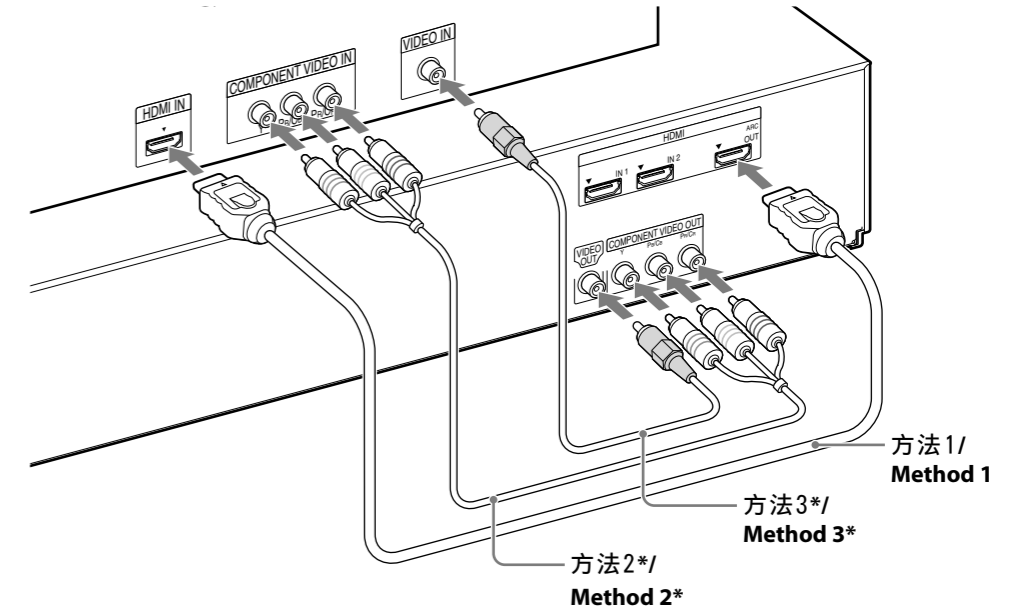
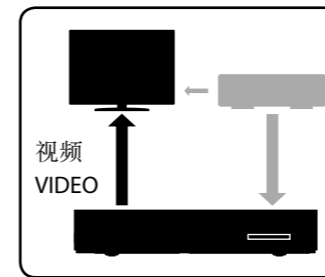


*不提供电缆。/*Cable not supplied.

连接至机顶盒/Connecting to your set-top box

如果不使用机顶盒，请参阅使用说明书中的“连接电视机（音频连接）”。

If you do not use a set-top box, refer to “Connecting the TV (Audio connection)” in the Operating Instructions.

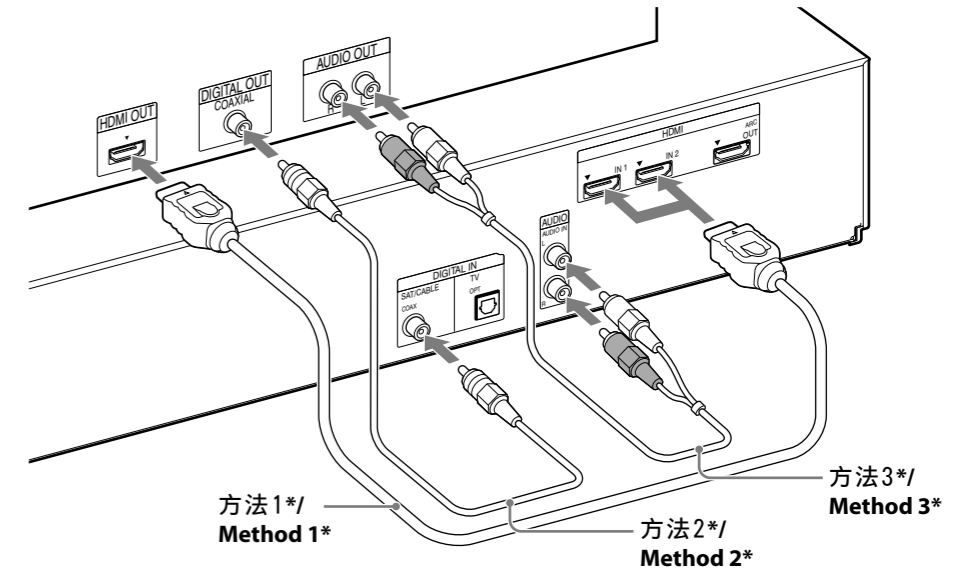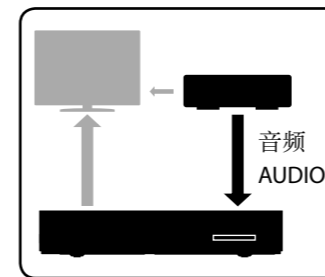


*不提供电缆。/*Cable not supplied.

3 启用无线传送/ Enable wireless transmission

1. 将无线收发器同时插入主机和环绕功放。


Insert the wireless transceivers into both the main unit and surround amplifier.

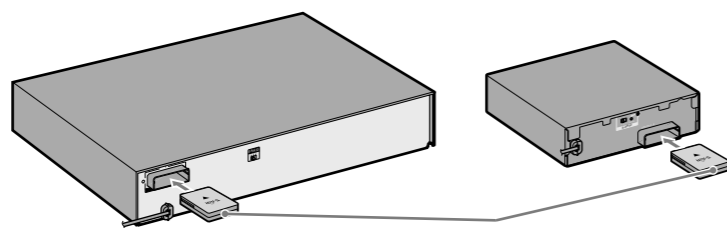

牢固插入直至听到喀嗒声。
Insert securely until they click.

2. 将S-AIR ID开关设定为“A”。

Set the S-AIR ID switches to "A."

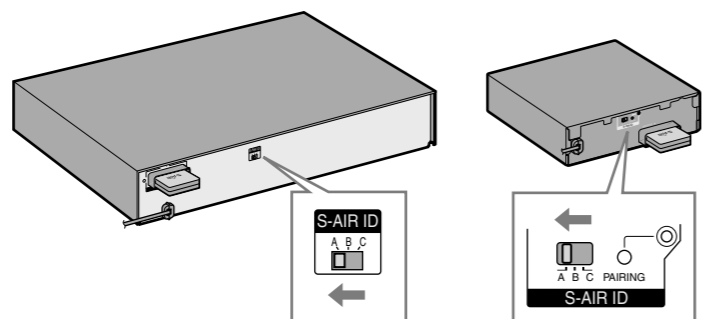


主机和环绕功放上的S-AIR ID出厂设定为“A”。

The S-AIR IDs on the main unit and surround amplifier are set to "A" at the factory.

3. 连接交流电源线(①)，然后打开电源(②)。

Connect the AC power cords (①), and turn on the power (②).

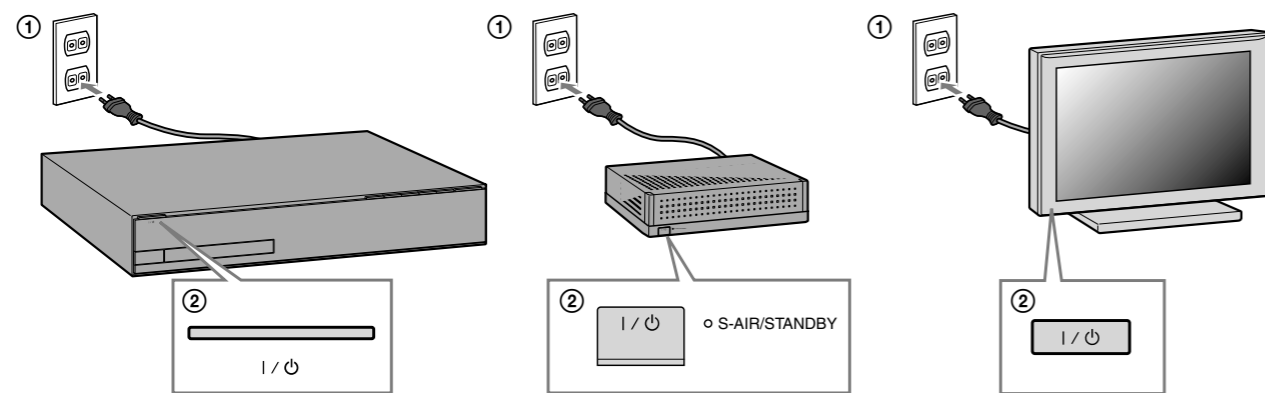


4 执行“简易设定”/ Perform "Easy Setup"

切勿在执行“简易设定”前插入光碟。

Do not insert a disc before performing the "Easy Setup".

1. 将电池装入遥控器。


Insert batteries into the remote.

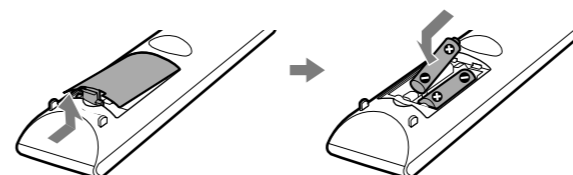


2. 切换电视机上的输入选择器，使如下系统画面出现在电视机屏幕上。

Switch the input selector on your TV so that system screens like the ones below appear on the TV screen.

启动/
Starting up

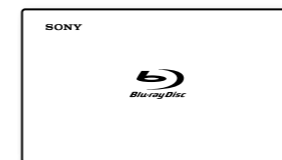


“简易设定”画面/
"Easy Setup" screen

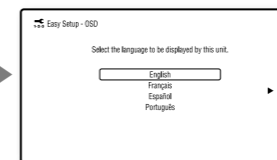

3. 按照“简易设定”中的画面指示，使用 ←/↑/↓/→ 和 ⊕ 执行基本设定。

Perform basic settings by following the on-screen instructions in "Easy Setup" using ←/↑/↓/→ and ⊕.

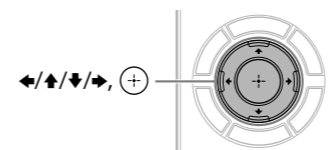


“简易设定”完成时，出现 [简易设定到此完成]。

[Easy Setup is now complete.] appears when "Easy Setup" is complete.



5 播放光碟/ Play a disc

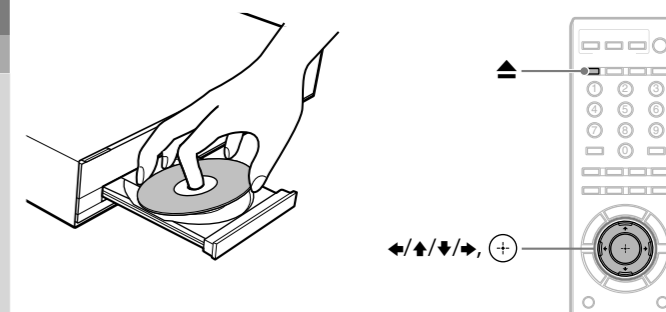

1. 按 ▲，在托盘上放置一张光碟。

Press ▲, and place a disc on the tray.

2. 按 ▲ 关闭光碟托盘。

开始播放。如果播放未自动开始，请在 [视频]、[音乐] 或 [照片] 类别中选择 ●，并按 ⊕。

Press ▲ to close the disc tray.

Playback starts. If playback does not start automatically, select ● in the [Video], [Music], or [Photo] category, and press ⊕.

更新至最新软件版本

您可以通过将系统连接至互联网来更新系统软件至最新版本。有关如何将系统连接至互联网的详细说明，请参阅使用说明书中的“步骤3：连接网络”。



软件更新时，前面板显示屏中会显示“UPDATING”，且可能不显示通过 HDMI 的视频信号。更新完成后，主机自动关闭。请等待至软件更新完成，请勿打开或关闭主机，或操作主机或电视机。

Updating to the latest software version

By connecting the system to the Internet, you can update your system's software to the latest version. For details on how to connect the system to the Internet, refer to "Step 3: Connecting to the Network" in the Operating Instructions.



During a software update, "UPDATING" is displayed in the front panel display and video signals via HDMI may not be displayed. After the update completes, the main unit automatically shuts off. Please wait for the software update to complete; do not turn the main unit on or off, or operate the main unit or TV.