

Thank you for purchasing this Sony product.

After following this step by step guide you will be able to:

Insert Batteries into the Remote Control.


Connect the Aerial to your projection TV.

Select the language of the menu screens.


Tune your projection TV.

Change the Programme order of the TV channels.

View TV Programmes.

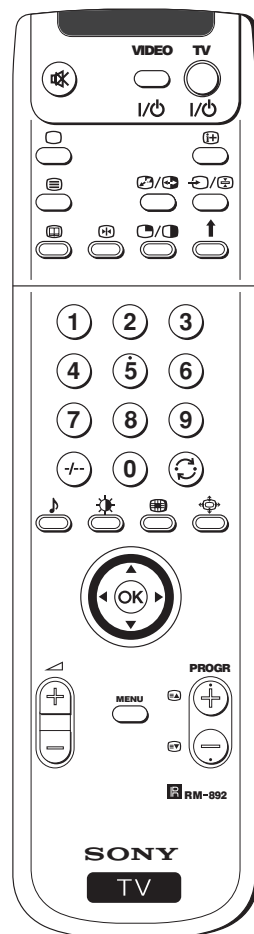


Remote Control

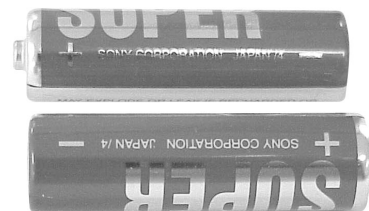

Batteries

Inserting Batteries into the Remote Control

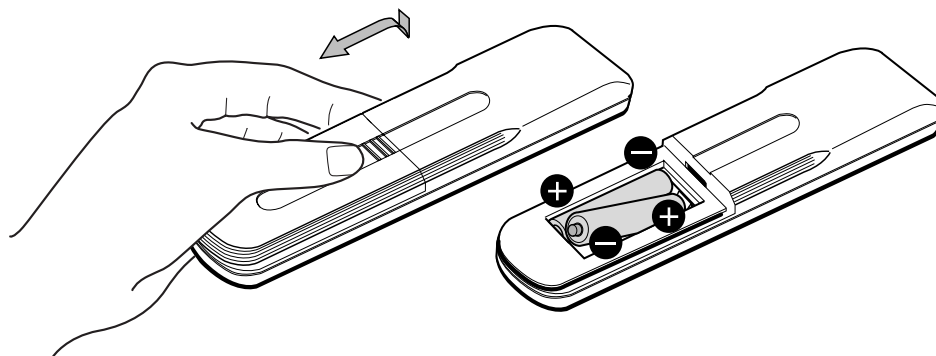


WIDE Digital Projection TV

4-205-771-02 (1)




1

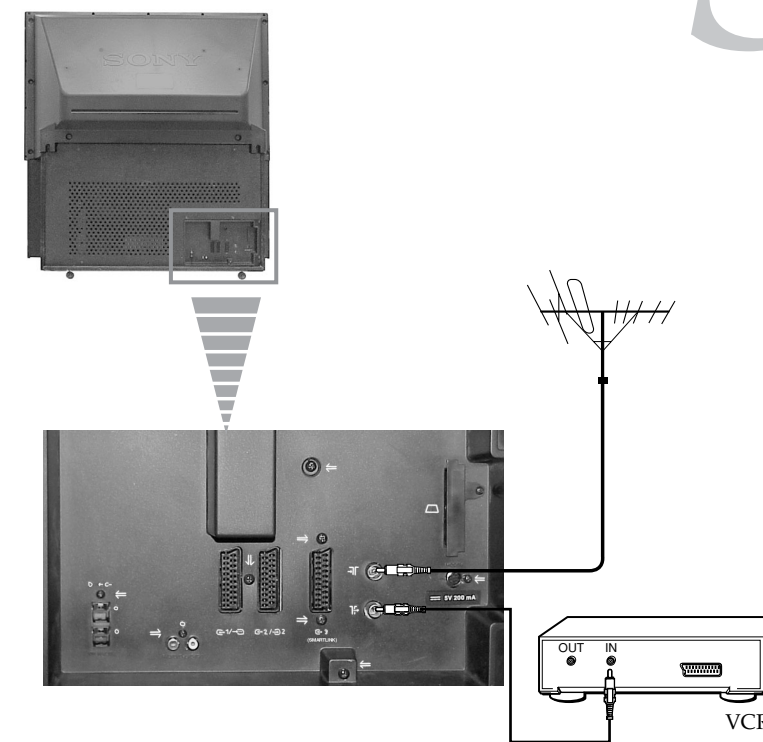

Connect a conventional aerial to the socket marked with the symbol on the rear of the projection TV.

Switching on the projection TV

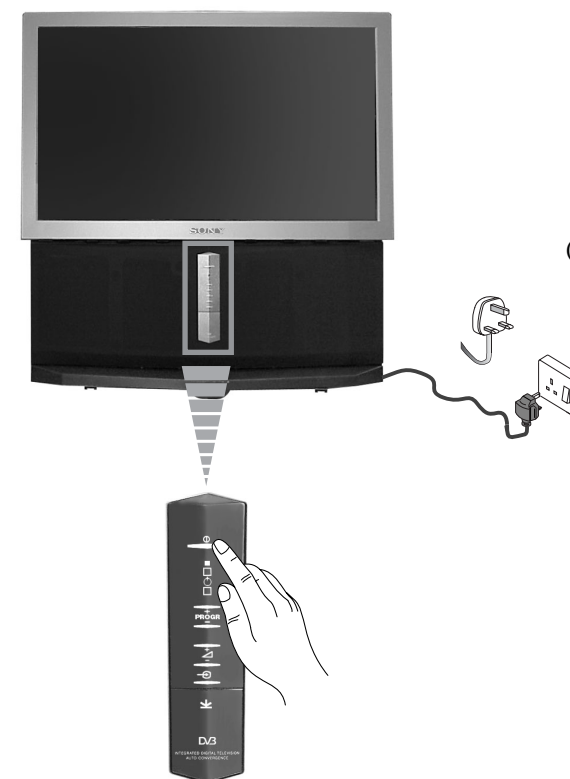

Connect the TV plug to the mains socket (220-240V AC, 50Hz).

Push in the On/Off switch on the front of the TV.

3

4

Selecting the language of the menu screens

This projection TV set works with menu screens. By following the instructions below, you can select the desired language of the menu screens.

5

Automatically Tuning the TV

You need to tune the TV to receive channels (TV Broadcast). By following the instructions below, this projection TV automatically searches and stores all available channels for you.

6


Changing the Programme Order of the TV channels

By following the instructions below, you can rearrange the order in which the channels appear on the screen.


7




The first time that you switch on your projection TV, the Language menu appears automatically.

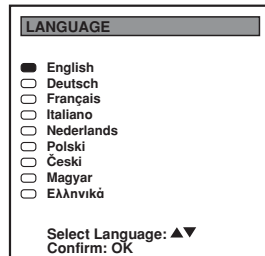


Push the joystick on the remote control to **▼** or **▲** to select the language, then press the **OK** button on the remote control to confirm your selection.

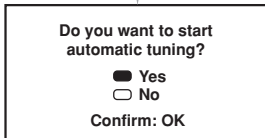


The Automatic Tuning menu appears on the TV screen in the selected language.

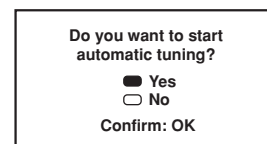

Press the **OK** button on the remote control to select **Yes**.

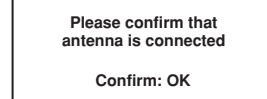


Confirm that the antenna is connected and then press the **OK** button on the remote control.

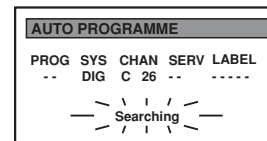


The automatic tuning starts and the message "Searching" flashes on the screen.


⚠ This procedure could take some minutes. Please be patient and do not press any button while the automatic tuning is in progress.

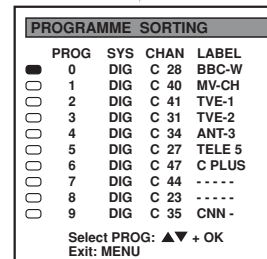

When the automatic tuning is finished, the Programme Sorting menu appears on the screen.

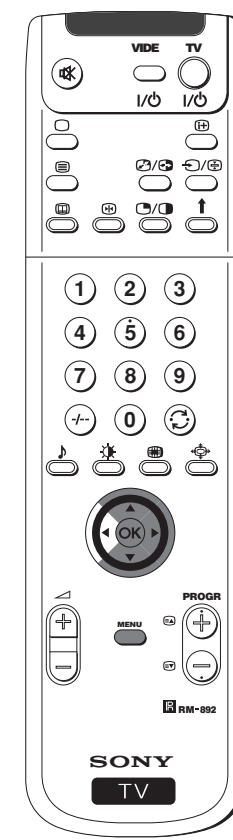


a) If you do not wish to change the channel order:

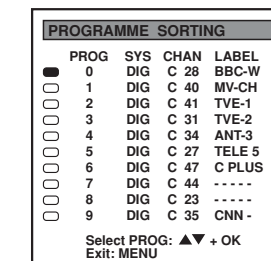


• Press the **MENU** button on the remote control to exit and return to the normal TV screen.

👍 Your projection TV is now ready for use.

b) If you wish to change the channel order:

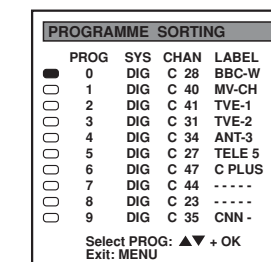

• Push the joystick on the remote control to **▼** or **▲** to select the programme number with the channel (TV Broadcast) you wish to rearrange, then push to **➡**.

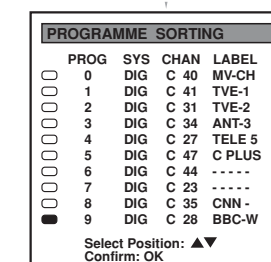

• Push the joystick to **▼** or **▲** select the new programme number position for your selected channel (TV Broadcast), then press the **OK** button.

① The selected channel now moves to its new programme position and the other channels move accordingly.

• Repeat all the above steps if you wish to change the order of the other channels on your TV.

• Press the **MENU** button on the remote control to exit and return to the normal TV screen.

👍 Your projection TV is now ready for use.

Your television stations are now stored in your television's memory.