

# FM Stereo FM-AM Receiver

## STR-DE590

### Easy Setup Guide


This Easy Setup Guide explains how to connect the DVD player, TV, speakers, and active sub woofer so you can enjoy multi channel surround sound from the DVD player. For details, refer to the operating instructions supplied with the receiver.

### 简易设置手册


此简易设置手册解释如何连接 DVD 播放机, 电视, 扬声器和有源重低音扬声器, 以便您可享受 DVD 播放机的多声道环绕声音响。有关详情, 请参照与接收机一起配备的操作说明书。

### Example of the speaker system configuration

扬声器系统配置范例

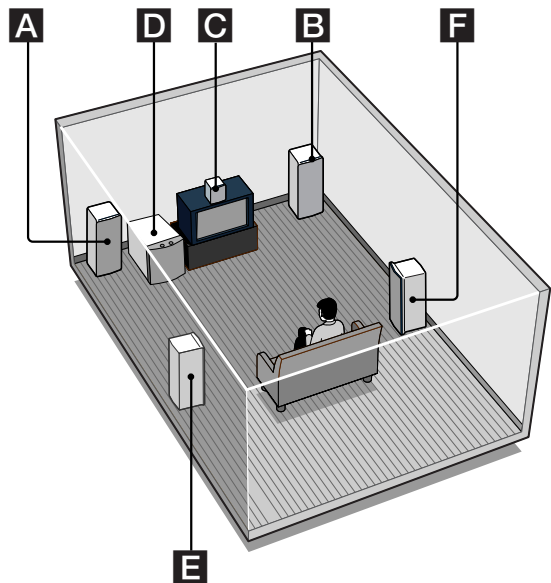

- A** Front speaker (L)  
前置扬声器 (左)
- B** Front speaker (R)  
前置扬声器 (右)
- C** Center speaker  
中置扬声器
- D** Active sub woofer  
有源重低音扬声器
- E** Surround speaker (L)  
环绕扬声器 (左)
- F** Surround speaker (R)  
环绕扬声器 (右)

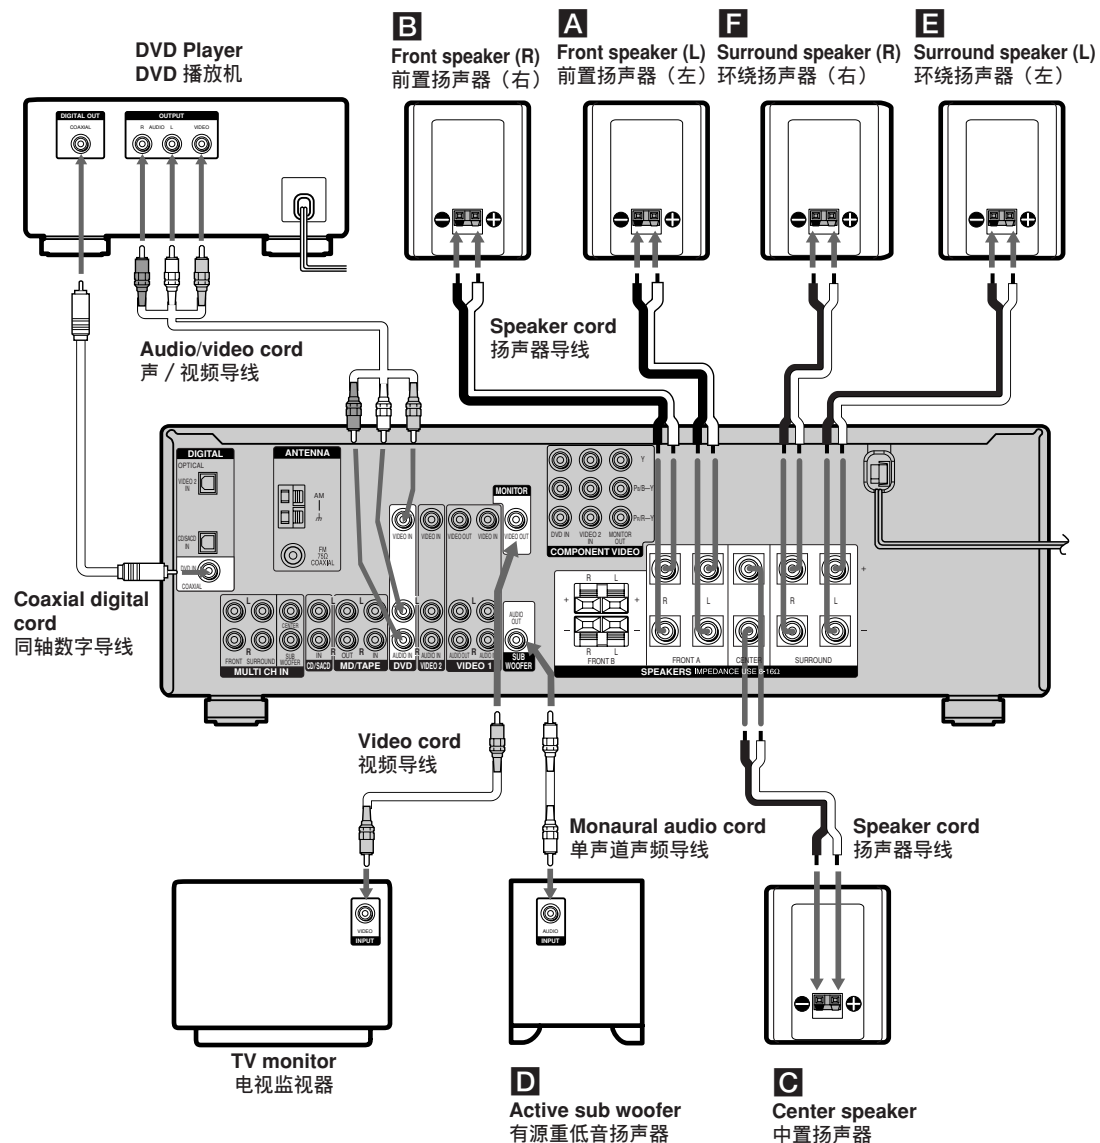

## English

### Easy setup guide for speaker system

Refer to the front page for speaker connections (A-F).

You can setup the speakers easily by selecting the speaker pattern.

- Find your speaker pattern referring to the illustration below. You can use the flow chart on the right.
- Press I/⏻ to turn on the system.
- Press MAIN MENU repeatedly to select "SET UP".
- Turn MENU to select "EASY SET". If it does not appear, select "NORM SET" and turn the -/+ to select "EASY SET".
- Turn MENU to select "SP. PAT. X-X".
- Turn the -/+ to select your speaker pattern, then press MEMORY/ENTER.


## 中文

### 扬声器系统的简易设置手册

参阅前页之扬声器连接 (A-F)。

选择扬声器排列可让您轻易地设置扬声器。


- 参看下图以查找您的扬声器排列。您可采用右边的流程表。
- 按 I/⏻ 以打开系统。
- 反复按 MAIN MENU 以选择 "SET UP"。
- 转动 MENU 以选择 "EASY SET"。若它不出现, 请选择 "NORM SET" 并转动 -/+ 以选择 "EASY SET"。
- 转动 MENU 以选择 "SP. PAT. X-X"。
- 转动 -/+ 以选择您的扬声器排列, 然後按 MEMORY/ENTER。

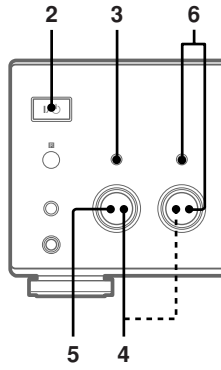


## What is your speaker pattern ? / 您的扬声器排列属何种类型 ?

The speaker pattern depends on the number of speakers you have.  
扬声器排列须视您所拥有的扬声器数量而定。


### 5 speakers and a sub woofer 五台扬声器和一台重低音扬声器

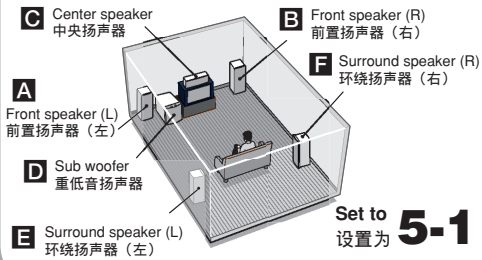


### 3 speakers / 三台扬声器

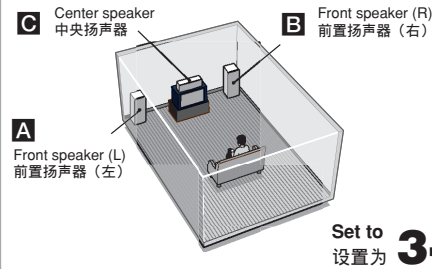

### 4 speakers / 四台扬声器

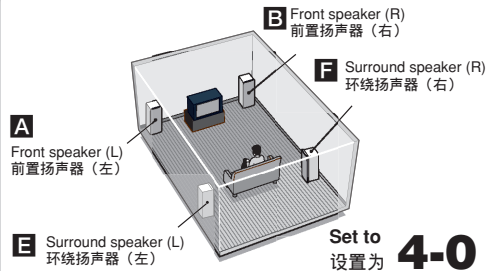

### 2 speakers / 两台扬声器

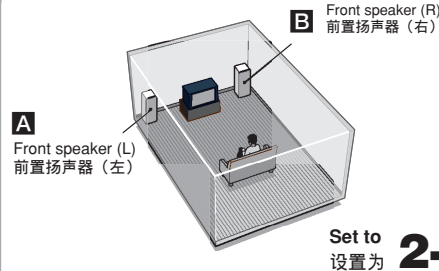

Refer to the illustration at left, follow → (yes) if you have the speakers and follow .....→ (no) if you do not.

参看左图, 若您有扬声器请选 → (是), 若没有则选 .....→ (否)。

