

Personal Audio System

Reference Guide



AUTO TIME SET



©2013 Sony Corporation Printed in China

http://www.sony.net/

ICF-C11iP

Before operating the system, please read this guide thoroughly and retain it for future reference.

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

As the main plug of AC adaptor is used to disconnect the AC adaptor from the mains, connect it to an easily accessible AC outlet. Should you notice an abnormality in it, disconnect it from the AC outlet immediately.

The nameplate and important information concerning safety are located on the bottom exterior of the main unit and on the surface of the AC adaptor.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same type.

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives

This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative: Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents.

On copyrights

iPhone, iPod, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. Lightning is a trademark of Apple Inc. "Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. No Power No Problem is a trademark of Sony Corporation. Auto Time Set is a trademark of Sony Corporation.

Notes

- This unit is not specified for use with an iPad, and malfunction may result if used with one.
- In the Reference Guide, "iPhone" is used as a general reference to functions on an iPod or iPhone, unless otherwise specified by the text or illustrations.

Precautions

- To disconnect AC power, grasp the plug itself, not the cord.
- Since a strong magnet is used for the speaker, keep credit cards using magnetic coding or spring-wound watches, CRT-based TVs, or projectors, etc., away from the unit to prevent possible damage from the magnet.
- Do not leave the unit in a location near a heat source such as a radiator or air duct, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on a surface (a rug, a blanket, etc.) or near materials (a curtain) which might block the ventilation holes.
- Should any solid object or liquid fall into the unit, unplug the unit and have it checked by qualified personnel before operating it any further.
- During a thunderstorm, do not touch the antenna (aerial) and plug.
- Do not touch the unit with wet hands.
- Do not place the unit anywhere near water.

Notes on the AC adaptor

- Use only the supplied AC adaptor. To avoid damaging the system, do not use any other AC adaptor.



Polarity of the plug

- Plug the AC adaptor into a nearby wall outlet (mains). In the case of a problem, unplug it from the wall outlet (mains) immediately.
- Do not install the AC adaptor in a confined space, such as a bookcase or built-in cabinet.
- To reduce the risk of fire or electric shock, do not expose the AC adaptor to dripping or splashing, and do not place objects filled with liquids, such as vases, on the AC adaptor.

NOTES ON LITHIUM BATTERY

- Wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Applicable accessory: Remote control.



Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.

On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead.




By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.


For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

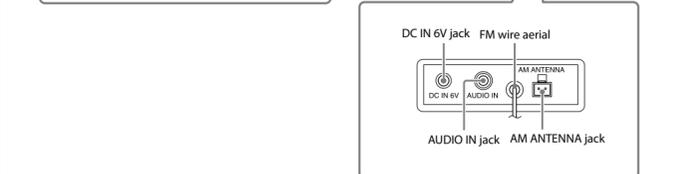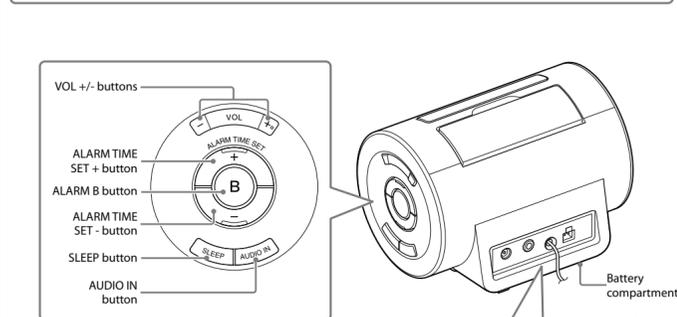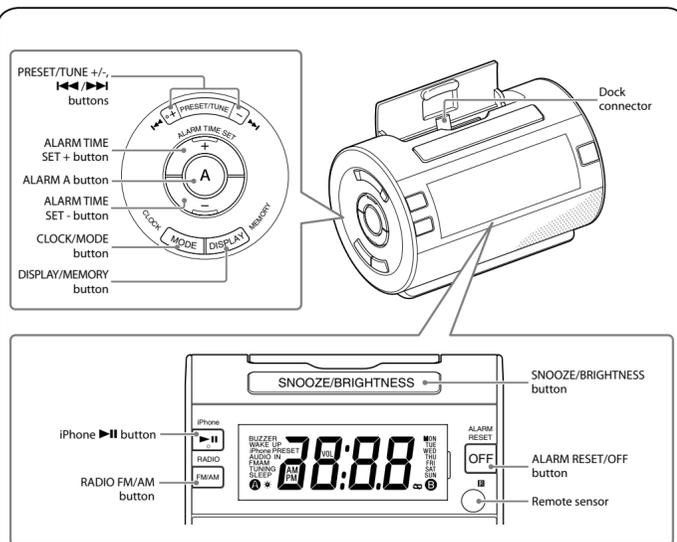

The VOL +, PRESET/TUNE +, and iPhone buttons have a tactile dot.

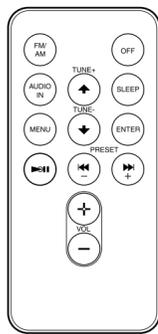


The VOL + and buttons have a tactile dot.

Getting started

Connecting to an AC power source

Connect the AC adaptor (supplied) to the DC IN 6V jack on the rear of this unit firmly and plug it into a wall outlet.

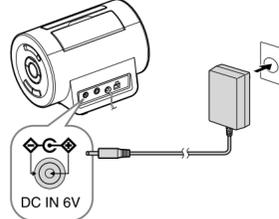

Notes

- Do not twist or place heavy objects on the AC adaptor cord.
- To disconnect AC power, grasp the plug itself, not the cord.

About the battery as a backup power source

This unit contains a CR2032 battery as a backup power source to keep the clock and the alarm operating during a power interruption. (No Power No Problem system)

Note for customers in Europe

The clock is preset at the factory, and its memory is powered by the preinstalled Sony CR2032 battery. If the "0:00" appears in the display when the unit is connected to AC outlet for the first time, the battery may be weak. In this case, consult a Sony dealer. The preinstalled CR2032 battery is considered part of the product, and is covered by the warranty. You are required to show "Note for customers in Europe" (in this instruction) to a Sony dealer in order to validate the warranty for this product.

When to replace the battery

When the battery becomes weak, "0:00" appears in the display. If a power interruption occurs while the battery is weak, the current time and alarm will be erased.

Replace the battery with a Sony CR2032 lithium battery. Use of another battery may cause a fire or explosion. To replace the battery, see "Replacing the battery of the unit" for details.

Connecting the AM loop aerial

The shape and length of the aerial is designed to receive AM signals. Do not dismantle or roll up the aerial.

- Remove only the loop part from the plastic stand.
- Set up the AM loop aerial. Refer to the supplied Startup Guide.
- Insert the AM loop aerial connector in the AM ANTENNA jack on the rear of the unit.


To remove the AM loop aerial

Push and hold down the tab of the aerial terminal clamp, and remove the AM loop aerial.



Remote control


Before using the supplied remote for the first time, remove the insulation film.

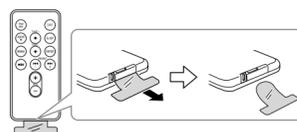

When to replace the battery

With normal use, the battery (CR2025) should last for about 6 months. When the remote can no longer operate the unit, replace the battery with a new one.

side facing up

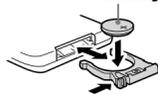

Notes

- If you are not going to use the remote for a long time, remove the battery to avoid any damage that may be caused by leakage or corrosion.

Operations

Setting the clock

To set the clock for the first time

This unit is preset to the current date and time at the factory, and is powered by a backup battery. All you need to do the first time is just plug it in and select your time zone.

- Plug in the unit. The current CET (Central European Time) appears in the display.
- Press and hold OFF and CLOCK/MODE for at least 2 seconds. Area number "1" flashes in the display.
- Press ALARM TIME SET + or - repeatedly to select the number as follows:

| Area number | Time zone |
|---------------------|---|
| 0 | Western European Time/ Western European Summer Time |
| 1 (default setting) | Central European Time/ Central European Summer Time |
| 2 | Eastern European Time/ Eastern European Summer Time |
| 3 | Moscow Standard Time |

- Press DISPLAY/MEMORY to set.

Notes

- To cancel the time zone setting, press OFF instead of DISPLAY/MEMORY in step 4.
- Though the clock is correctly set at the factory, discrepancies may arise during transport or storage. If necessary, set the clock to the correct time by referring to "To set the clock manually."

When daylight saving time (DST/summer time) begins

This unit automatically adjusts for daylight saving time (summer time).

* is displayed from the beginning of daylight saving time (summer time) and disappears at the end of the daylight saving time (summer time) automatically. Auto DST/summer time adjustment is based on GMT (Greenwich Mean Time).

- Area number 0: Daylight saving time (summer time) begins at: 1:00 AM on the final Sunday of March.
- Standard time begins at: 2:00 AM on the final Sunday of October.
- Area number 1: Daylight saving time (summer time) begins at: 2:00 AM on the final Sunday of March.
- Standard time begins at: 3:00 AM on the final Sunday of October.
- Area number 2: Daylight saving time (summer time) begins at: 3:00 AM on the final Sunday of March.
- Standard time begins at: 4:00 AM on the final Sunday of October.

To cancel Auto DST/summer time adjustment during the daylight saving time (summer time) period

The Auto DST/summer time adjustment can be canceled. Press and hold OFF and DISPLAY/MEMORY on the unit at the same time for at least 2 seconds while the clock is displayed. "*" and "Off" appear in the display to show that Auto DST/summer time adjustment has been canceled. The display returns to the clock.

Notes

- Changes to Auto DST/summer time adjustment by the unit (see above) are subject to circumstances and laws in each country/region. Should this interfere with desired adjustment, cancel the Auto DST/summer time adjustment and set the DST display manually as necessary. Customers living in a country/region that does not use daylight saving time (summer time) must cancel Auto DST/summer time adjustment before using the unit.
- To activate Auto DST/summer time adjustment again, press and hold OFF and DISPLAY/MEMORY on the unit at the same time for at least 2 seconds. "*" and "On" appear in the display to show that Auto DST/summer time adjustment has been activated. The display returns to the clock.
- When the unit is set to Moscow Standard Time, Auto DST/summer time adjustment defaults to off. You can turn it on by the above operation. The beginning and the end of daylight saving time (summer time) will be the same as area number 2.

To set the clock manually

To change the clock setting manually, operate the unit as follows.

- Plug in the unit.
- Press and hold CLOCK/MODE until the year flashes in the display.
- Press ALARM TIME SET + or - repeatedly to set the year, and then press CLOCK/MODE.
- Repeat step 3 to set the month, day, hour and minute. The seconds start incrementing from zero.

Notes

- If you do not press any button for about 1 minute while setting the clock, the clock setting will be canceled.
- A 100-year calendar (2013 - 2112) is installed in the unit. When the date is set, the day of the week is automatically displayed. MON = Monday, TUE = Tuesday, WED = Wednesday, THU = Thursday, FRI = Friday, SAT = Saturday, SUN = Sunday

To change the time format

You can choose a time format of the 24-hour system (default) or the 12-hour system. Press and hold OFF and SNOOZE/BRIGHTNESS on the unit at the same time for at least two seconds. The time format toggles between the 24-hour system ("0:00" = midnight) and the 12-hour system ("AM 12:00" = midnight).


To display the year and date

During clock display, press DISPLAY/MEMORY once for the date and month, and press it again for the year. After a few seconds, the display will change back to the current time automatically.

Using an iPhone with the unit


To set an iPhone

- Open the Dock cover.
- Hold the unit, and set the iPhone onto the unit in line with the Dock connector.

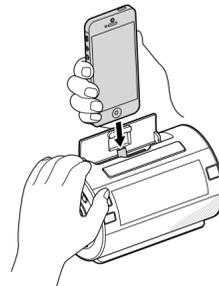


When an iPhone is difficult to set

Push the Dock cover slightly backwards while setting the iPhone.

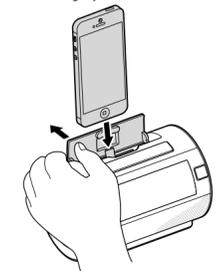


Note on operating an iPhone

Hold the iPhone when you are operating it.

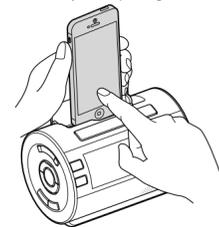

To remove an iPhone

Hold the unit when removing the iPhone.

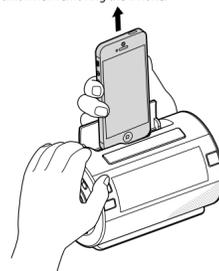

Notes

- An iPhone in a case or cover can be set on this unit. Remove the case or cover if it interferes with the Dock connection.
- Set the iPhone on the Dock connector firmly.
- When setting or removing the iPhone, hold it at the same angle as the Dock connector on the unit. Do not pull the iPhone forward too far.
- When setting or removing the iPhone, hold the unit securely.
- Do not twist or bend the iPhone, as this may result in connector damage.
- Remove the iPhone when transporting it; otherwise, a malfunction may result.

To charge an iPhone

You can use the unit as a battery charger for an iPhone. Charging begins when the iPhone is connected to the unit. The charging status appears in the display of the iPhone. For details, refer to the user's guide of the iPhone.

Continued on the reverse side

