



Enjoy Music with Xperia/iPhone via a Wireless Network

Quick Setup Guide

This leaflet is a setup guide for enjoying music from your Xperia (or Xperia Tablet)/iPhone (or iPad/iPod) with DLNA or AirPlay function via a wireless network.

A wireless LAN router (including an access point) is necessary in order to use the wireless network.

Home Audio System


4-464-271-11(1) © 2013 Sony Corporation Printed in China

CMT-SBT300W/SBT300WB

Refer to the operating instructions of this system in the cases below.

- To play music with another smartphone or a personal computer
- When the "WALKMAN" application is not installed on your Xperia
- To play music with BLUETOOTH

Is there the WPS button on your wireless LAN router?

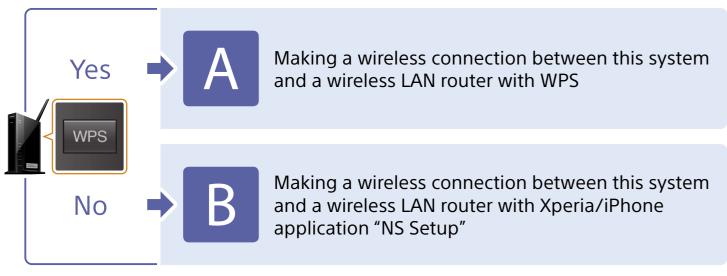

^{*} Your Xperia may not have the "WALKMAN" application. In that case, this function cannot be used. You can listen to music with some models of "WALKMAN" with this function, but they may require different operation. Refer to the operating instructions of your "WALKMAN" for details.

Making a wireless connection between this system and a wireless LAN router with WPS

 
Check that the network (LAN) cable is disconnected from the system then connect the power cord.



2 Press the I/U button to turn the system on.

The red STANDBY indicator goes off then starts flashing in the display window.

It may take several minutes until and starts flashing.



4 Press the OPTIONS button on the remote to display "BT/NW STBY." Press the ◆/♥ button on the remote repeatedly to select "WPS" then press the (+) button.

If "WPS" does not appear wait about 2 minutes.



 ${f 5}$ When "OK" appears on the display, press the \oplus

"WPS" flashes

O Hold the WPS button on the wireless LAN router pressed for a few seconds.

You must keep pressing the WPS button with some routers.



"CONNECT" flashes after "WPS" flashes for several tens of seconds in the display window of the system, after which is will light once connection is completed.

If and does not appear within 5 minutes or so, the setup may not have been completed properly. In that case, proceed from step 4 again. If the setup does not become successful after that, try connection B

When the connection between your smartphone and the wireless LAN router has been completed, go to the following.

For a user of Xperia Playing music stored in Xperia For a user of iPhone Playing music stored in iPhone

8 Make sure that your wireless LAN router is turned on. Have your SSID and Security key at hand.

Refer to the operating instructions of the wireless LAN router



Make a wireless connection between your smartphone and the wireless LAN router.

For a user of Xperia Donnecting Xperia with the wireless LAN For a user of iPhone
Connecting iPhone with the wireless LAN

Connecting Xperia with the wireless LAN



Tap [Wi-Fi].

application).

Playing music stored in Xperia



1 Launch ([WALKMAN] 2 Tap the icon and select [SONY:CMT-SBT300W(B)XXXXXX].



"NETWORK" appears on the display of the

Connecting iPhone with the wireless LAN

Tap [Wi-Fi].





 
Select the SSID you had in step 8 from the network list, and enter the Security key to For details, refer to the operating instructions

Select the SSID you

had in step 8 from the network list and enter the Security key to For details, refer to the operating instructions

of your iPhone.

Playing music stored in iPhone





2 Tap the icon and select [SONY:CMT-SBT300W(B)XXXXXX].



on the display of the system during music play.



Making a wireless connection between this system and a wireless LAN router with Xperia/iPhone application "NS Setup"

You can make a wireless connection between this system and your wireless LAN router by downloading the application "NS Setup" to your smartphone and operating as follows.

Check that the network (LAN) cable is disconnected from the system then connect the power cord.




Make sure that your wireless LAN router is turned on. Have your SSID and Security key at hand.

Refer to the operating instructions of the wireless LAN router.



 ${f 3}$ Press the I/ ${}^{\circlearrowright}$ button to turn the system on.

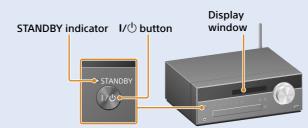

4 The red STANDBY indicator goes off then starts flashing n in the display window.

It may take several minutes until and starts flashing. Perform setup by using the smartphone application "NS Setup."

For a user of Xperia Setup in Xperia

For a user of iPhone Setup in iPhone

Setup in Xperia

① Download the free application ② Perform setup by using the application [NS Setup]. "NS Setup" from "Google Play."









Tap [Let's get






Select the SSID you had in step 2.



key you had in step 2.

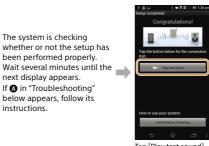

of the system by playing the test sound.

Playing music stored in Xperia

1 Launch ([WALKMAN] application).



2 Tap the icon and select [SONY:CMT-SBT300W(B)XXXXXX].

"NETWORK" appears

system during music



play.

Setup in iPhone

① Download the free application ② Perform setup by using the application [NS Setup]. "NS Setup" from "Apple Store."





2D Code









Wireless_...][™] to add a checkmark then return to the home





Tap [Let's Get





Select the SSID you



appears, follow its instructions key you had in

The system is checking

whether or not the setup

has been performed

properly. Wait several

display appears.

If (3) or (1) in

minutes until the next



Tap [Play Test Sound to confirm operation of the system by playing the test sound.

Playing music stored in iPhone

1 Launch ([Music] 2 Tap the Licon and select application).



[SONY:CMT-SBT300W(B)XXXXXX]. "AirPlay" appears



the system during music play.



*1 It may take several minutes until [Sony_Wireless Audio_Setup] appears. If it does not appear, reset the system by following "To reset the system" in "Troubleshooting." *2 If the SSID does not appear, tap the 2 icon at the upper right to update the display.

Troubleshooting

The displays below may appear during setup. In these cases, follow their instructions.





If **(A)** or **(B)** appears, reset the system by following the steps in "To reset the system" on the right. Then perform the setup operations again from the first step of ② in "Setup in Xperia" or "Setup in



If @ appears, perform the setup operations again from the first step of ② in "Setup in iPhone.



If **()** appears, operate by following the instructions on the display.

If the setup does not become successful after that or if "NO CONNECT" appears in the display window of the system reset the system by following the steps in "To reset the system" on the right.

To reset the system

step 2.

Reset the system as follows.

Also, If "Sony_Wireless_Audio_Setup" is not displayed during setup of iPhone, reset the system.

- 1 Disconnect the power cord from the wall outlet and make sure that the STANDBY indicator does not light. Then reconnect the power cord and turn the system on.
- 2 Hold the (stop) and I/ buttons of the system pressed until "ALL RESET" appears.

