



SRS-XB41



4-734-040-12(1)

©2018 Sony Corporation Printed in China




* 4 7 3 4 0 4 0 1 2 * (1)





1

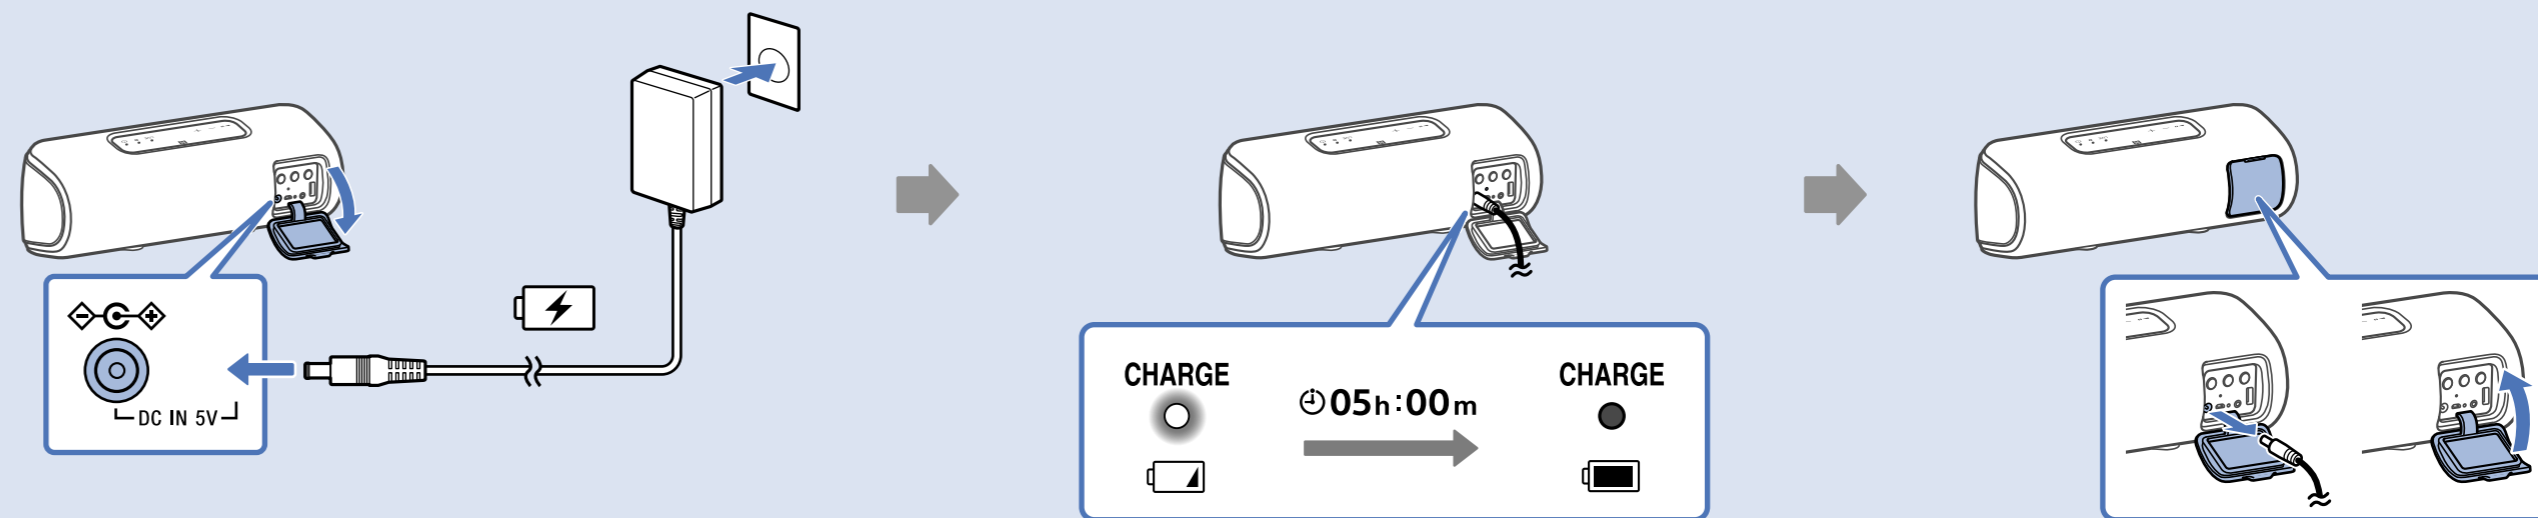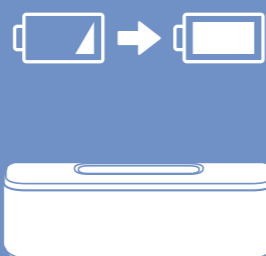

2

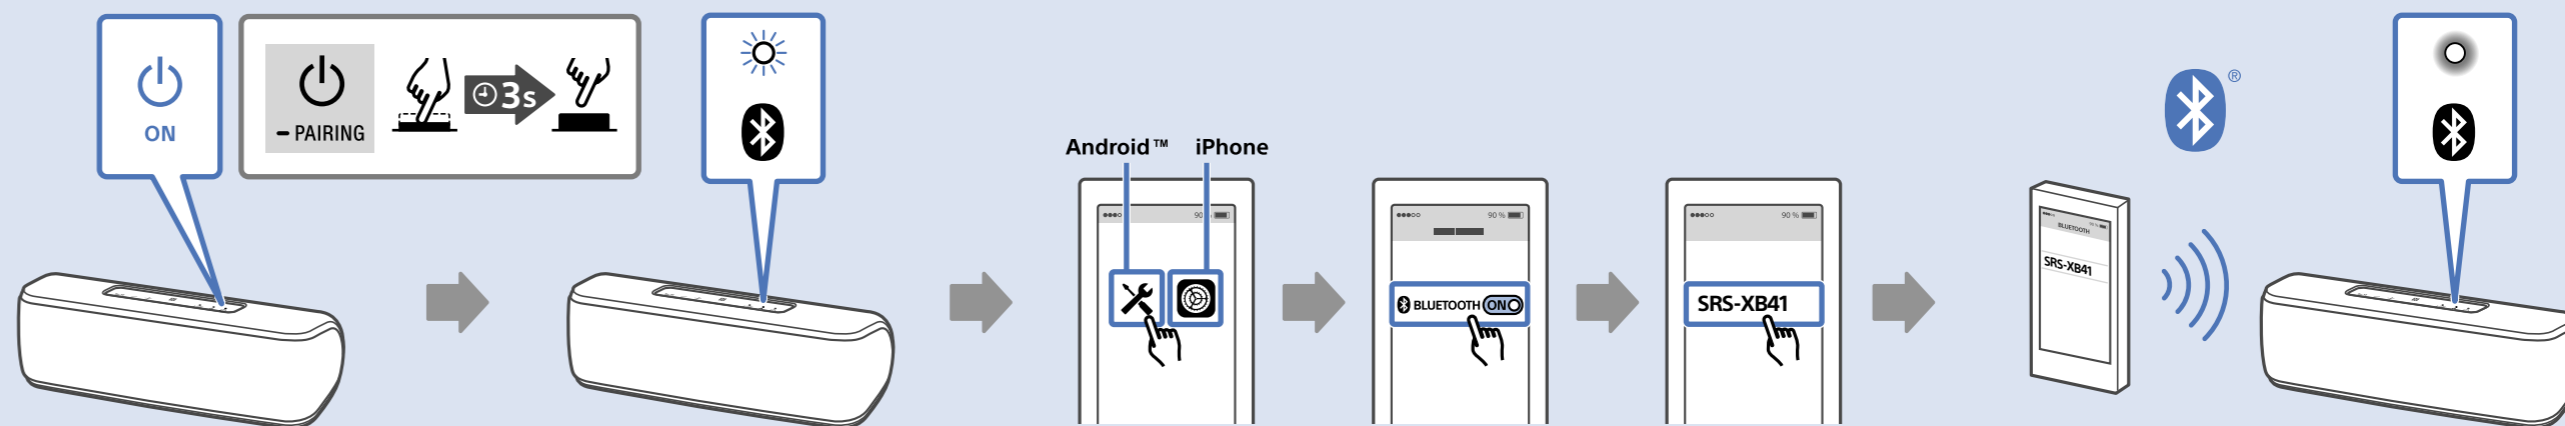

3

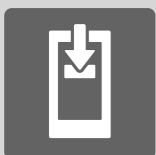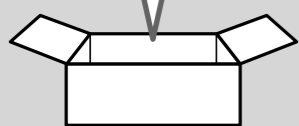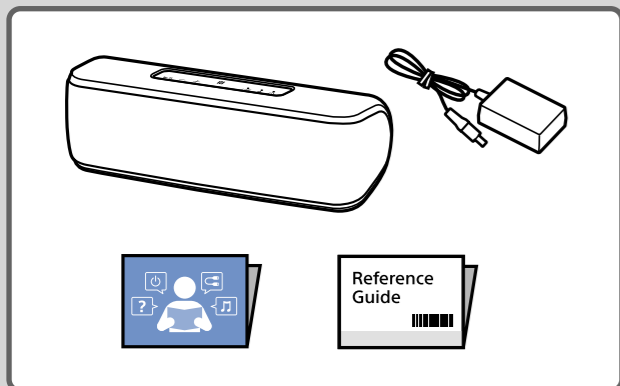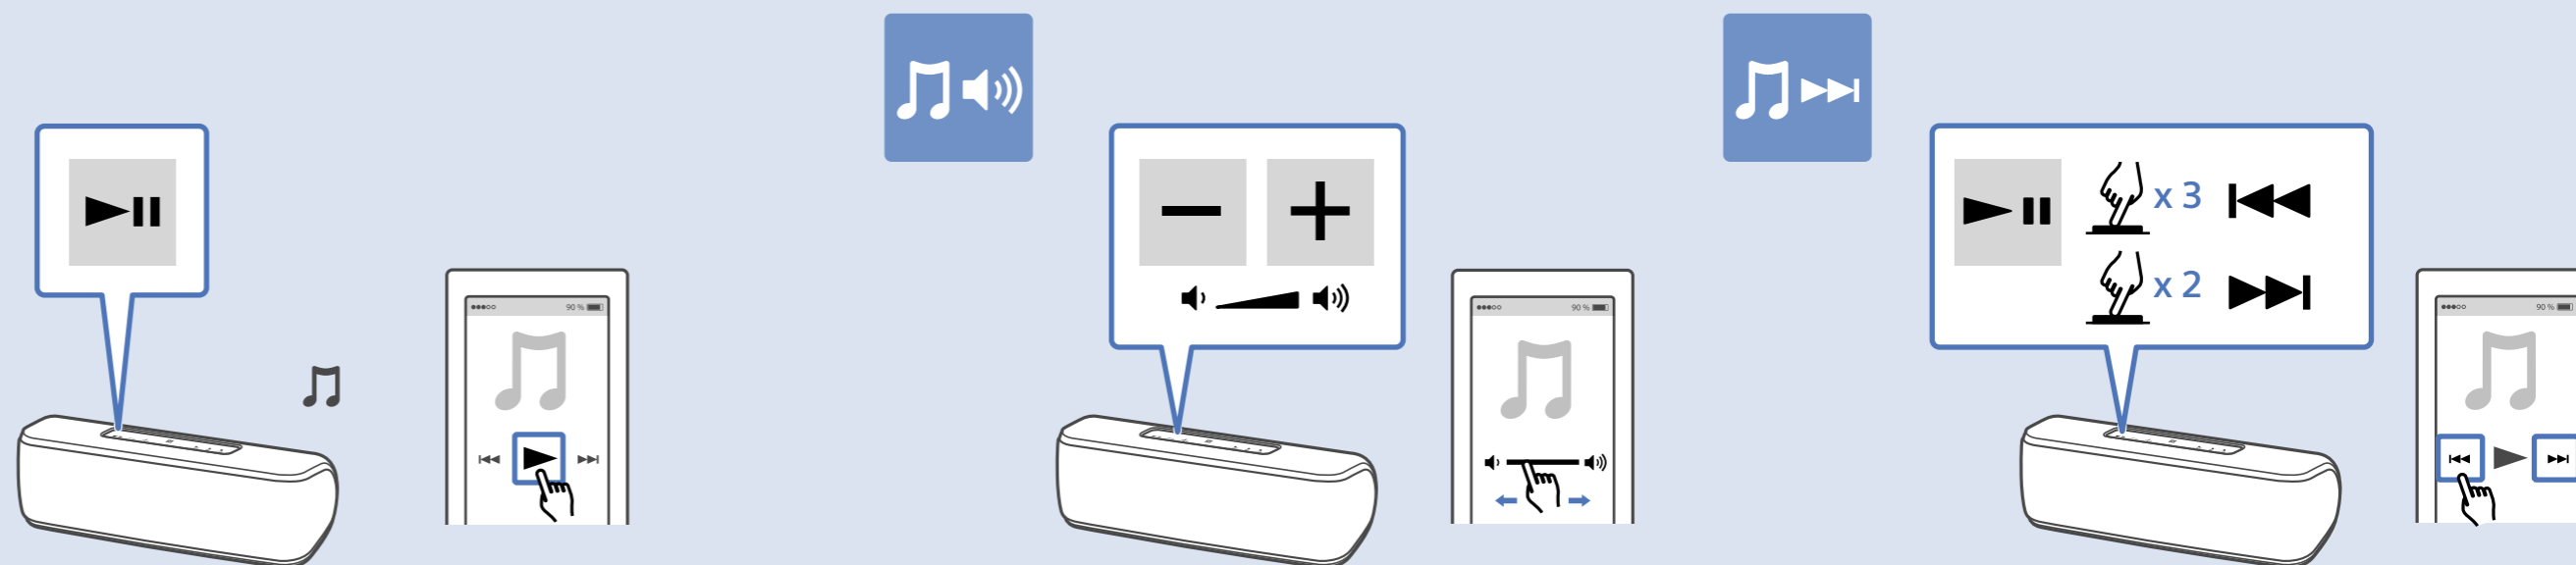


Android / iPhone



<http://www.sony.net/smcapp/>



 
Sony Music Center




Fiestable




LIGHT

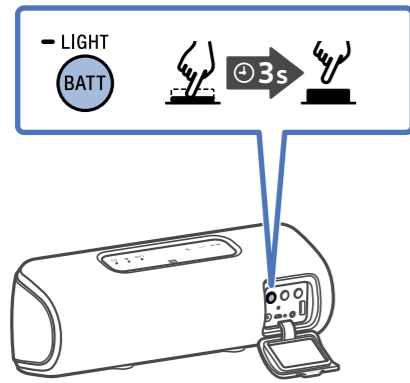




ON

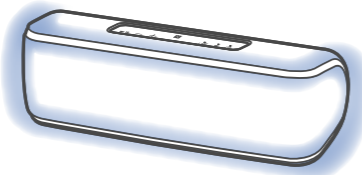




OFF

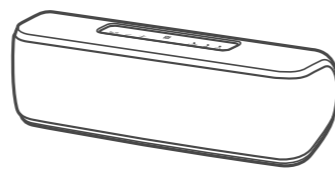


Wireless Party Chain

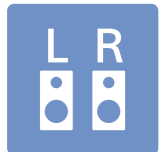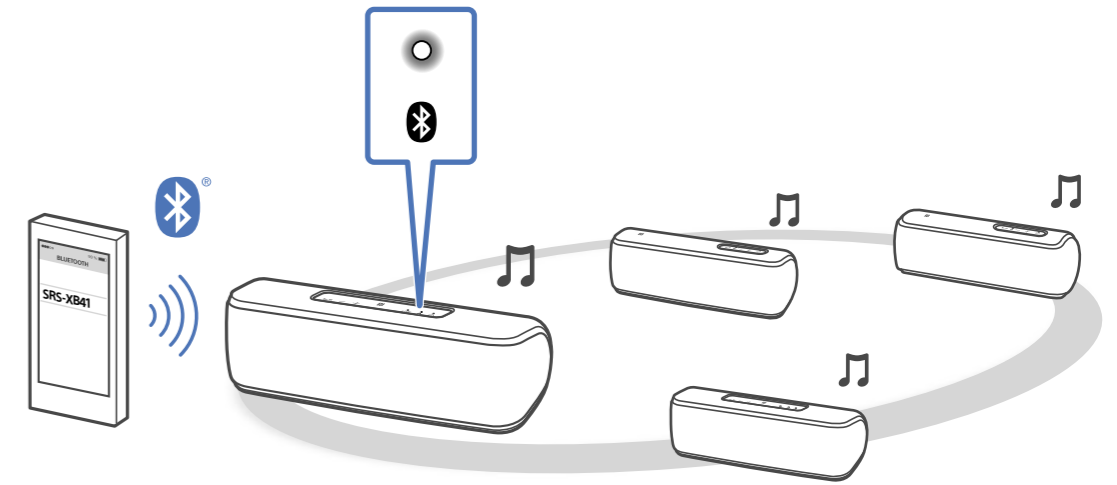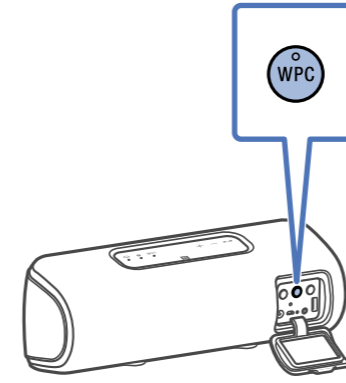

Speaker Add

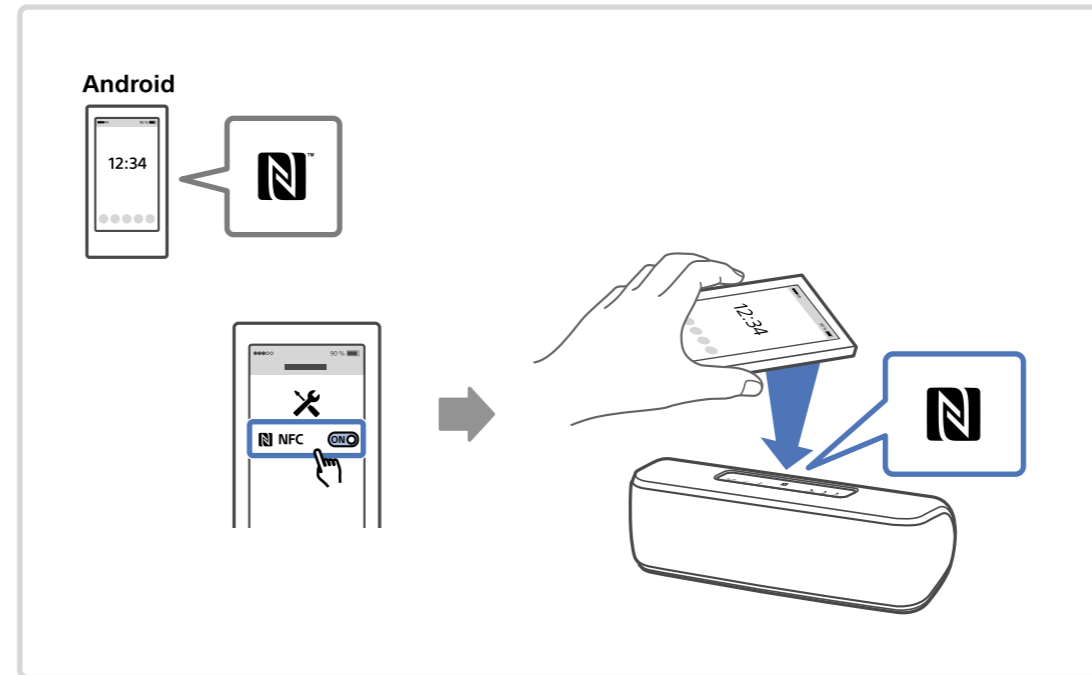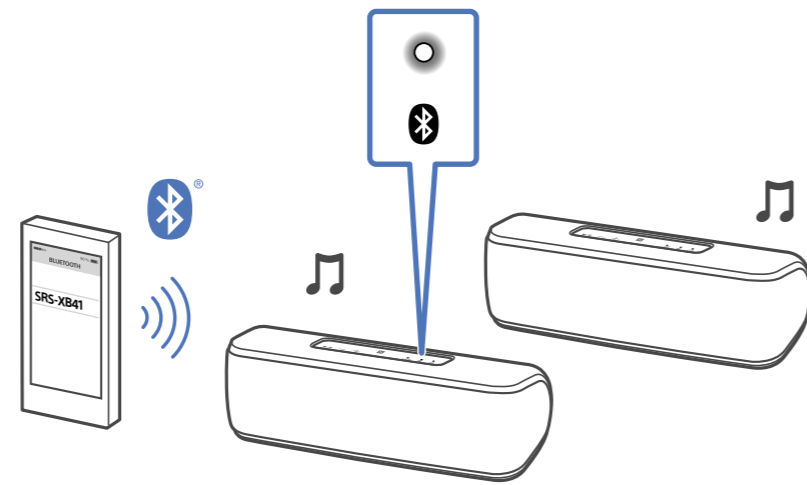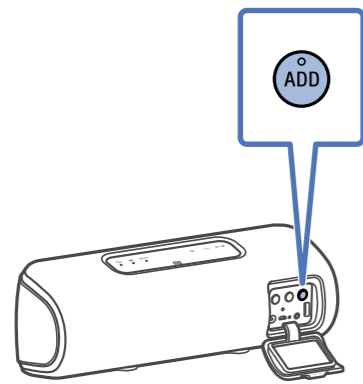

Help Guide → Speaker Add Wireless Party Chain Party Booster



http://rd1.sony.net/help/speaker/srs-xb41/h_zz/