


SONY

4-299-470-11(1)

Personal Audio Docking System

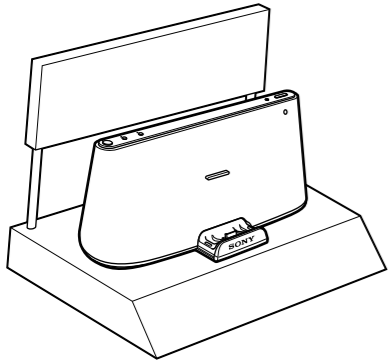

Reference Guide **US**

Guide de référence **FR**



* 4 2 9 9 4 7 0 1 1 * (1)

©2011 Sony Corporation Printed in China

RDP-X500iP Demo unit (Not for sale)

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.

As the main plug is used to disconnect the system from the mains, connect the system to an easily accessible AC outlet. Should you notice an abnormality in the system, disconnect the main plug from the AC outlet immediately.

The system is not disconnected from the mains as long as it is connected to the AC outlet, even if the system itself has been turned off.

The dating code and the nameplate are located on the bottom exterior.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same type.

For USA customers only


NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

- Replace the battery for the remote commander with a Sony CR2025 lithium battery only. Use of another battery may present a risk of fire or explosion.
- Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.
- Dispose of used battery promptly. Keep away from children.
- Keep the lithium battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.

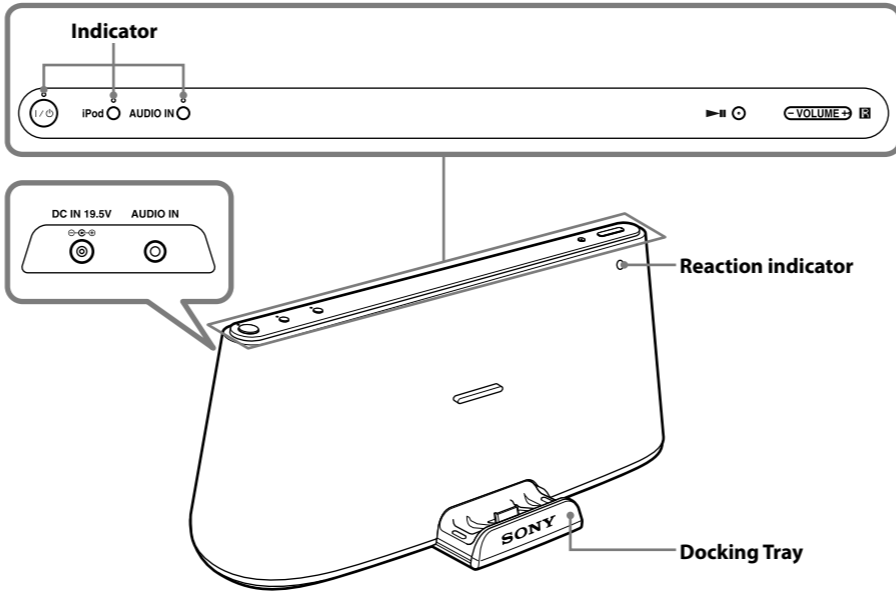

I/⏻, iPod, AUDIO IN buttons of the demo unit are not functional.

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

For the customers in Canada

This Class B digital apparatus complies with Canadian ICES-003.

For the state of California USA only

Perchlorate Material –special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate
Perchlorate Material: Lithium battery contains perchlorate

Precautions

Note on unit placement

- When playing the unit at loud volume, the unit may move due to vibration, depending on where the unit is placed. Check that the unit is placed where it will not fall down due to vibration.

Français

AVERTISSEMENT

Afin de réduire les risques d'incendie ou de choc électrique, n'exposez pas cet appareil à la pluie ni à l'humidité.

Pour réduire les risques d'incendie, ne couvrez pas les orifices d'aération de cet appareil avec des papiers journaux, des nappes, des rideaux, etc. Ne placez pas non plus de bougies allumées sur l'appareil.

Pour réduire les risques d'incendie ou de choc électrique, n'exposez pas l'appareil au suintement ou à des éclaboussures et ne posez aucun objet rempli de liquide, tel qu'un vase, sur l'appareil.

N'installez pas l'appareil dans un espace restreint, comme une bibliothèque ou un meuble encastré.

N'exposez pas les piles (rechargeables ou installées) à une chaleur excessive comme à la lumière du soleil, au feu ou à d'autres sources de chaleur pendant une période prolongée.

Étant donné que la fiche principale de l'adaptateur CA est utilisée pour débrancher l'adaptateur CA du réseau électrique, connectez-la à une prise CA facilement accessible. Si vous constatez un fonctionnement anormal, débranchez-la immédiatement de la prise CA.

L'appareil n'est pas déconnecté de la source d'alimentation CA tant qu'il reste branché sur la prise murale, même s'il a été éteint.

La plaque signalétique et des informations importantes pour votre sécurité sont apposées sur la partie inférieure à l'extérieur de l'appareil principal et sur la surface de l'adaptateur CA.

Vous devez savoir que tout changement ou toute modification non expressément approuvé(e) dans ce mode d'emploi risque d'annuler votre droit à utiliser cet appareil.

ATTENTION

Un remplacement incorrect de la pile peut poser un risque d'explosion. Remplacez la pile uniquement par une pile de type identique.

Pour les utilisateurs aux États-Unis uniquement

REMARQUE

Cet appareil a été soumis à l'essai et s'est avéré conforme aux limites pour un appareil numérique de classe B, conformément à la section 15 de la réglementation FCC. Ces normes sont conçues pour assurer une protection raisonnable contre les interférences nuisibles dans un environnement résidentiel. Cet appareil génère, utilise et peut émettre de l'énergie radioélectrique et, s'il n'est pas installé ou utilisé selon les directives, peut causer des interférences nuisibles aux communications radio. Cependant, il n'existe aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet appareil est la source d'interférences nuisibles pour la réception radio ou télévision, ce qui peut être déterminé en éteignant, puis en rallumant l'appareil, il est recommandé d'éliminer ces interférences en appliquant une ou plusieurs des mesures suivantes :

- Réorienter ou déplacer l'antenne réceptrice ;
- Éloigner l'appareil du récepteur ;
- Brancher l'appareil dans une prise d'un circuit différent de celui qui alimente le récepteur ;

— Consulter le détaillant ou un technicien radio ou télévision qualifié pour obtenir de l'aide.

AVERTISSEMENT

- Remplacez la pile de la télécommande uniquement par une pile au lithium Sony CR2025. L'utilisation d'une pile d'un type différent peut entraîner un risque d'incendie ou d'explosion.
- La pile peut exploser si elle est manipulée de façon inappropriée. Ne la rechargez pas, ne la démontez pas ou ne la jetez pas dans le feu.
- Mettez immédiatement au rebut les piles usagées. Gardez-les hors de portée des enfants.
- Tenez la pile au lithium hors de la portée des enfants. En cas d'ingestion de la pile, consultez immédiatement un médecin.

Consignes de sécurité importantes

- 1) Lisez ces instructions.
- 2) Conservez ces instructions.
- 3) Tenez compte de tous les avertissements.
- 4) Respectez toutes les instructions.
- 5) N'utilisez pas cet appareil à proximité de l'eau.
- 6) Nettoyez l'appareil uniquement avec un chiffon sec.
- 7) Ne bloquez pas les ouvertures de ventilation. Installez l'appareil conformément aux instructions du fabricant.
- 8) N'installez pas l'appareil à proximité d'une source de chaleur, telle qu'un radiateur, un poêle, une cuisinière ou d'autres appareils (notamment des amplificateurs) qui dégagent de la chaleur.
- 9) Pour des raisons de sécurité, veillez à utiliser une fiche polarisée ou une fiche avec terre. Une fiche polarisée possède deux lames dont une est plus large que l'autre. Une fiche avec terre possède deux lames et une broche de mise à la masse. La lame large ou la troisième broche sont prévues pour votre sécurité. Si la fiche fournie n'est pas adaptée à la prise, consultez un électricien pour remplacer la prise obsolète.
- 10) Protégez le cordon d'alimentation afin d'éviter qu'il soit piétiné ou pincé, en particulier au niveau des fiches, des prises de courant et du point de sortie de l'appareil.
- 11) Utilisez uniquement des options/accessoires spécifiés par le fabricant.
- 12) Utilisez l'appareil uniquement avec le chariot, le socle, le trépied, le support ou la table spécifiés par le fabricant ou vendus avec l'appareil. Si vous utilisez un chariot, soyez prudent lors du déplacement de la combinaison chariot/ appareil afin d'éviter de vous blesser lors du transport.



- 13) Débranchez l'appareil pendant les orages ou lorsque vous ne l'utilisez pas pendant des périodes prolongées.
- 14) Tout entretien ne peut être effectué que par un technicien qualifié. Un entretien est nécessaire si l'appareil a été endommagé d'une quelconque manière, par exemple si le cordon ou la fiche d'alimentation est endommagé, si du liquide a pénétré dans l'appareil ou si des objets sont tombés à l'intérieur de celui-ci, s'il a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement ou s'il a subi une chute.

Pour les utilisateurs au Canada

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Pour l'État de la Californie, États-Unis, seulement

Matériau contenant du perchlorate – une manipulation particulière pourrait s'appliquer.

Voir

www.dtsc.ca.gov/hazardouswaste/perchlorate

Matériau contenant du perchlorate : La batterie au lithium contient du perchlorate


Playing back the Music on the Display

The Display can play back two audio sources, one is from "AUDIO IN", the other is from your iPod.

Notes

- The unit has a default volume setting. To change the default volume, press the I/⏻ and AUDIO IN buttons at the same time for 2 seconds, and select your desired level. Next time the unit is turned AC on, the new default volume will be applied.
- After 5 minutes of inactivity, the unit returns to the default volume.
- I/⏻, iPod, AUDIO IN buttons of the demo unit are not functional, even connecting to an electrical outlet. When the AC power cord is disconnected, the main unit is to be power-off.

Demo unit and display stand (Image)

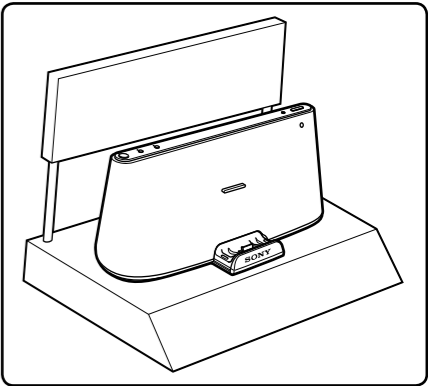

Playback from the iPod

When connecting iPod as an audio source, "Audio-in" (mode to play back Display media player) will automatically switch to iPod.

1 Plug the AC power cord into an electrical outlet.

2 Connect the iPod.

- Make sure the connector plug of the main unit is firmly inserted into the connector port of iPod.
- If the iPod is removed from the dock, the audio source will automatically switch to "Audio-in".

Resetting the unit (default setting)

Remove your iPod from the Dock connector, and then while holding down VOLUME –, hold down I/⏻. (Hold both buttons down for at least 5 seconds.) After resetting, the I/⏻ indicator flashes for 2 seconds.

Note

Display unit is special unit for a demonstration.