

SONY®

Umabonakude

Imiyalo yokusebenza

Izingxenyane Nezilawuli

Ukubukela i-TV

Ukuzulela kuMenyu yaseKhaya

Ukubuka Izithombe kusuka
Kwisisetshenziswa Esixhunyiwe

Ulwazi Olungeziwe

BRAVIA

KLV-48R472B / 40R482B / 40R472B / 32R482B / 32R426B / 32R422B / 32R412B
KLV-28R412B

Ithebula yokuqukethwe

Ulwazi Lokuphepha	3
Izexwayiso	5

Izingxenye Nezilawuli

I-TV	7
Isilawuli kude	8

Ukubukela i-TV

Ukushintha Isitayela Sokubuka	10
Ukushintsha Imodi Ebanzi	10
Ukusetha Ukukhethwa Kwesigameko	10

Ukuzulela kuMenyu yaseKhaya

Okuthandwayo	11
Izinhlelo	11
Ukusebenzisa i-TV njengoZimele weSithombe	11
Ukulalela umsakazo we-FM	12
Ukwabiwa kwesithombe (ngaphandle kwe-KLV-32R412B, KLV-28R412B)	13
Imidiya	13
Ukudlala Isithombe/Umculo/Ividiyo nge-USB	13
Amasethingi	15
Amasethingi Esistimu	15
Ukwesekwa Kwamakhasimende	22

Ukubuka Izithombe kusuka

Kwisisetshenziswa

Esixhunyiwe

Umfanekiso Wokuxhuma	23
Ukusebenzisa Isisetshenziswa Somsindo neVidiyo	24
Ukusebenzisa Ukulinganisa izihenqo (ngaphandle kwe-KLV-32R412B, KLV-28R412B)	24

Ulwazi Olungeziwe

Ukufaka i-TV Obodeni	25
I-adaptha Yokumisa Obodeni (India kuphela)	29
Ukufuna usizo	35
Isithombe	35
Umsindo	36
Iziteshi	36
Okuvamile	36
Ukucasiswa	37

Isingeniso

Siyabonga ngokukhetha lo mkhizizo wakwaSony. Ngaphambi kokusebenza i-TV, sicela ufunde le manuwali kahle bese uyigcina ukuze uyisebenzise nangeliyinye ilanga.

Qaphela

- Ngaphambi kokusebenza i-TV, sicela ufunde "Ulwazi Lokuphepha" (ikhasi 3).
- Imiyalelo mayelana "Ukufaka i-TV Obodeni" iyafakwa kuleli bhukuncazelo lemiyalelo ye-TV.
- Izithombe kanye nemifanekiso esitshenziswa Kugayidi Yokuqala Ngokushesha kanye nale manuwali okwezinkomba kuphela futhi kungahluka ekubonakaleni koqobo komkhizizo.

Indawo yelebuli yokukhomba

Amalebuli weNombolo yeModeli, izilinganiso Zokunikwzwa Kwamandla (ngokuya ngemithetho yokuphepha esebenzayo) kanye nosuku lokuKhiziza zibekwe emuva kwe-TV. Amalebuli enombolo yemodeli ye-adaptha ye-AC ezansi kwe-adaptha ye-AC.

Ulwazi Lokuphepha

ISEXWAYISO


Amabhethi akumele abhekane nokushisa okweqile njengokushisa kwelanga, umlilo noma okufanayo.

Ukufaka/Ukusetsha

Faka bese usebenzisa isethi ye-TV ngokuya ngemiyalelo ngezansi ukuze ugweme ubungozi bomlilo, ukushaywa ugesi noma ukonakala kanye/noma ukulimala.


Ukufaka

- Isethi ye-TV kufanele ifakwe duzane ne-awuthilethi yamandla kagesi e-AC efinyeleleka kalula (ama-mains socket).
- Beka isethi ye-TV endaweni eme kahle, elinganayo ukuze uyigweme ukuthi ingawini bese ibanga ukulimala komuntu noma ukonakala ku-TV.
- Umsebenzi wesivisi ofanelekile kuphela okufanele enze ukufaka kwebondeni.
- Ngezizathu zokuphepha, kuncomeka kakhulu ukuthi usebenzise izisekeli ze-Sony, kufaka phakathi: Ibhulakhethi Yokumisa Obondeni – SU-WL450 I-adaptha Yokumisa Obondeni (India kuphela)
- Qiniseka ukusebenzisa izikulufu ezinikezwe nenokufaka obondeni uma unamathiselwa ama-Mounting Hook kwisethi ye-TV. Izikulufu ezinikeziwe zakhiwe njengoba zibonisiwe emfanisweni uma zilinganiswa kusuka endaweni yokunamathisela ye-Mounting Hook. Ubugqinsi nobude bezikulufu kuyahluka ngokuya kohlobo lweBhulakhethi Lokubeka Odongeni. Ukusetshenziswa kwezikulufu ngaphandle kwalezo ezinikeziwe kungaholela ekonakaleni kwangaphakathi kwisethi ye-TV noma kuyibangele ukuthi iwe, njll.

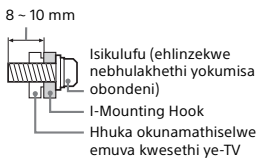

Ukuhanjiswa

- Ngaphambi kokuhambisa isethi ye-TV, nqamula onke amakhebula.
- Abantu ababili noma abathathu bayadingeka ukuhambisa isethi enkulu ye-TV.
- Uma uhambisa isethi ye-TV ngesandla, yibambe njengoba kukhonjisiwe ngezansi. Ungacindezeli kakhulu kwiphaneli ye-LCD kanye nozimele esikrinini.

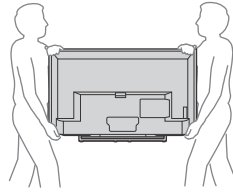


- Uma uhambisa isethi ye-TV, ungayibeki lapho kunyakaza khona noma ekudlidlizeleni okukhulu.
- Uma uhambisa isethi ye-TV ukuthi ilungiswe noma uma uyihambisa, ipake usebenzisa ikhathuni yakhona yoqobo nezinto zokupaka.

Izimbobo ezifaka umoya


- Musa ukuvala izimbobo ezifaka umoya noma ufake okunye kwikhabinethi.
- Shiya isikhala kwisethi ye-TV njengoba kubonisiwe ngezansi.
- Kuyanconywa kakhulu ukuthi usebenzise ibhulakhethi lokubeka odongeni ukuze unikele ngomjikelezo womoya ofanele.

Ifakwe odongeni

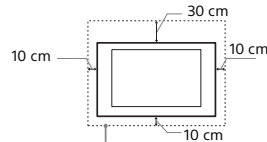

Shiya okungenani lesi sikhala kusethi.


Ifakwe nge-stand

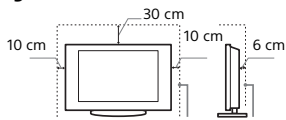

Shiya okungenani lesi sikhala kusethi.

- Ukuqinisekisa izimbobo ezifaka umoya ezilungile nokuvikela ukuqoqwa kokungcolile noma uthuli:
 - Ungabeki isethi ye-TV phansi, uyifake ngokuyibhakisa phansi, emuva, noma ngezixenye.
 - Ungabeki isethi ye-TV kusheluvu, iragi, noma lapho kuhlala khona izimpahla.
 - Ungambozi isethi ye-TV ngendwangu, njengekhetini, noma izinto ezifana namaphephandaba, njll.
 - Ungafaki isethi ye-TV njengoba kubonisiwe ngezansi.

Ukuzungeleza komoya kuvinjelwe.

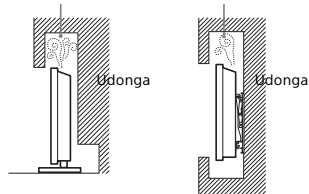

Ikhodi yamandla kagesi e-AC (ama-mains lead)

Phatha ikhodi yamandla kagesi e-AC (ama-mains lead) kanye ne-awuthilethi (ama-mains socket) njengokulandelayo ukuze ugweme ubungozi bomlilo, ukushaywa kukagesi noma ukonakala kanye/noma ukulimala:

- Isimo se-iplugali yamandla kagesi e-AC (iplugali yama-mains), enikezwe nesethi ye-TV, iyahluka ngokuya ngezifundo. Qiniseka ukuxhuma Intambo yamandla kagesi e-AC (ama-mains lead) nepulagi elingana I-awuthilethi yamandla kagesi e-AC (ama-mains socket).
- Sebenzisa kuphela amakhodi yamandla kagesi e-AC anikezwe yi-Sony (ama-mains lead), hhayi le yeminye imikhiziqo.
- Faka iplugali ngokugcwele ku-awuthilethi yamandla kagesi e-AC (ama-mains socket).
- Sebenzisa isethi ye-TV kusinikezeli se-110-240 V AC kuphela.
- Uma ufaka amakhebuli, qiniseka ukuthi unqamula ikhodi yamandla kagesi e-AC (ama-mains lead) ngokuphepha kwakho futhi unakekele ukuthi ungathintisi izinyawo zakho kumakhebuli.
- Nqamula ikhodi yamandla kagesi e-AC (ama-mains lead) kusuka ku-awuthilethi yamandla kagesi e-AC (ama-mains socket) ngaphambi kokusebenzisa noma ukuhambisa isethi ye-TV.
- Gcina ikhodi yamandla kagesi e-AC (ama-mains lead) kude nezinto ezishishayo.
- Nqamula iplugali yamandla kagesi e-AC bese uyihlanze njalo. Uma iplugali imbozwe uthuli futhi ibamba ukuswakama okuningi, ukuvikela kwayo kungahle kungezeleleke, okungahlelwa emlilweni.

Gaphela

- Ungasebenzisi ikhodi yamandla kagesi e-AC (ama-mains lead) kwesinye isisetsenziswa.
- Ungancinzi, ugohe, noma ushwabanise ikhodi yamandla kagesi e-AC (ama-mains lead) kakhulu. Isihlanganisi esikhulu singahle siveziwe noma sephukile.
- Ungashintshi ikhodi yamandla kagesi e-AC (ama-mains lead).
- Ungafaki okuthile okusindayo kukhodi yamandla kagesi e-AC (ama-mains lead).
- Ungadonsi ikhodi yamandla kagesi e-AC (ama-mains lead) kwayona uma unqamula ikhodi yamandla kagesi e-AC (ama-mains lead).
- Ungaxhumi izisetsenziswa eziningi ku-awuthilethi yamandla kagesi e-AC eyodwa (ama-mains socket).
- Ungasebenzisi isihlanganisi se-awuthilethi yamandla kagesi (ama-mains socket) esingalugile.

UKUQAPHELA KU-ADAPTHA YE-AC

Isexwayiso

Ukuzwe unciphise ubungozi bomlilo noma ukushaywa ugesi, ungavezi lesi sisetsenziswa emvelweni noma ekuswakameni. Ukuze uvikele umlilo noma ukushaywa, ungabeki izinto ezinamanzi, njeztitsha, kusisetsenziswa.

Ungafaki lesi sisetsenziswa esikhaleni esiminyene, njengeshelu yamabhuku noma okufana nalokho.

• Sicela uqinisekise ukuthi i-awuthilethi yamandla kagesi e-AC (ama-mains socket) ifakwe eduzane nesisetsenziswa futhi izothlakala kalula.

• Qinisekisa ukusebenzisa amakhodi we-adaptha ye-AC i-adaptha nawamandla kagesi e-AC (ama-mains lead). Uma kungenjalo kungabangela ukungasebenzi kahle.

• Xhuma i-adaptha ye-AC kwi-awuthilethi yamandla kagesi e-AC (ama-mains socket).


• Ungabeki ikhodi yamandla kagesi e-AC (ama-mains lead) izungeze i-adaptha ye-AC. Intambo enkulu ingasikeka kanye/noma ingabangela ukungasebenzi kahle kwe-TV.

• Ungathinti i-adaptha ye-AC ngezandla ezimanzi.

• Uma uqaphela okungavamile ku-adaptha ye-AC, inqamule kusuka ku-awuthilethi yamandla kagesi e-AC (ama-mains socket) ngokushesha.

• Isethi ayinqanyuliwe kusuka kumthombo we-AC uma isaxhumeke ku-awuthilethi yamandla kagesi e-AC (ama-mains socket), ngisho noma isethi kwayona icimile.

• Njengoba i-adaptha ye-AC izofudumala uma isetsenziswa isikhathi eside, ungezwa ukushisa uma uyithinta ngesandla.



Ukusetsenziswa okunqatshelwe

Ungafaki/usebenzise isethi ye-TV ezindaweni, emvelweni noma ezimeni njengelezi ezikhulu ngezansi, noma isethi ye-TV ingahle ungasebenzi kahle futhi ibange umlilo, ukushaywa ugesi, ukonakala kanye/noma ukulimala.

Indawo:

- Ngaphandle (elangeni), eceleni kolwandle, emkhumbini noma kwenye indawo ngaphakathi kwemoto, ezikhungweni zemithi, ezindaweni ezingamile kahle, duzane namanzi, emvelweni, ekuswakameni noma entuthwini.
- Uma i-TV ibekwe egumbini lokushintshela lendawo yomphakathi yokugezela noma lapho kubhukudwa khona, i-TV ingahle yonakaliswe yi-airborne sulfur, njll.



- Ngekhwalithi yesithombe esihle kakhulu, ingavezi isikrini ku-illumination eqondile noma elangeni.
- Gwema ukuhambisa i-TV kusuka edaweni ebandayo kuya kwefudumele. Ukushintsha kwezanga lokushisa kungabanga kungabangela ukuncibilika kwamanzi. Lokhu kungabangela ukuthi i-TV ibonise isithombe esingesihle kanye/noma nombala ongemuhle. Uma lokhu kuvela, vumela ukuswakama ukuthi kuphele konke ngaphambi kokukhanyisa i-TV.


Indawo:

- Izindawo ezishishayo, ezimanzi, noma ezinotuli; lapho izintuthwane zingangena khona; lapho kungavezwa ekudlidlizeni, duzane nezinto ezivuthayo (izibani, njll). Isethi ye-TV ngeke ivezwe ekuconseni noma lapho kunamanzi khona futhi azikho izinto zigcwalise ngokusamanzi, njengeztitsha, ezizobekwa ku-TV.
- Ungabeki i-TV esikhaleni ezimanzi noma esinotuli, noma egumbini elinentuthu engu-oyela noma isitimu (duzane namatafula okuphuka noma okufudumezayo). Umililo, ukushaywa ugesi, noma ukuncibilika kungaholela.
- Ungafaki i-TV ezindaweni ezishisa kakhulu, njengeselangeni, duzane ne-radiator nento yokowenza kushisa. I-TV ingashisa kakhulu ezimeni ezifana nalezi okungabangela ukuncibilika kokuvalelwe phakathi kanye/noma ukungasebenzi kahle kwe-TV.



Isimo:

- Ungasebenzisi uma izandla zakho zimanzi, nekhabinethi esusiwe, noma nokunamathiselwe okunganconyiwe umkhiqizo. Nqamula isethi ye-TV kusuka ku-awuthilethi yamandla kagesi e-AC (ama-mains socket) ne-antenna phakathi kombani.
- Ungafaki i-TV ukuthi ihlale esikhaleni esivulekile. Lokhu kungaholela ekutheni kube nokulimala noma ukonakala kwe-TV nokubangelwe ngumuntu.

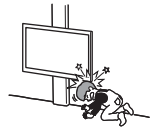

Izingcezu eziphukile:

- Ungaphonseli okuthize kwisethi ye-TV. Ingilazi lesikrini lingaphuka ngamandla futhi libangele ukulimala.
- Uma indawo yesethi ye-TV iqephusa, ungayithinti uze unqamule ikhodi yamandla kagesi e-AC (mains lead). Uma kungenjalo ungahle uhaywe ugesi.

Uma ingasebenzi

- Uma ngabe ngeke usebenzise isethi ye-TV izinsuku ezimbalwa, isethi ye-TV kufanele inqanyulwe kusuka kumandla e-AC (ama-mains) ngezizathu zendawo nezokuphepha.
- Njengoba isethi ye-TV ingaqanyulwe kusuka kumandla e-AC (ama-mains socket) uma isethi ye-TV icinyiwe, donsa ipulagi kusuka ku-awuthilethi yamandla kagesi e-AC (ama-mains lead) ukuze unqamule isethi ye-TV yonke.
- Kodwa, amanye amasethi e-TV angaba nezici ezingama isethi ye-TV ukuthi ashinywe amile ukuze asebenze kahle.

Okuqondene Nezingane

- Ungavumeli izingane ukuthi zigibele kusethi ye-TV.
- Gcina lo mkhiziqo kude nabantwana, ukuze bangawugwinyi ngephutha.

Uma izinkinga ezilandelayo zivela...

Cima isethi ye-TV bese unqamula ikhodi yamandla kagesi e-AC (ama-mains lead) ngokushesha uma enye yalezi zinkinga zivela. Cela umthengiseli wakho noma isikhungo sesevisi ye-Sony ukuthi ihlolwe umsebenzi ofanele.

Uma:

- Ikhodi yamandla kagesi e-AC (ama-mains lead) yonakele.
- Ukufakwa okungalungile kwe-awuthilethi yamandla kagesi e-AC (ama-mains socket).
- Isethi ye-TV yephulwe ngokubekwa, ukushisa noma kuphonswe okuthize kuyo.
- Noma yokuphi okusamanzi noma okuqunile kuwela ezimbobeni kukhabinethi.

Mayelana nezinga lokushisa leMonitha ye-LCD

Uma iMonitha ye-LCD isetshenziselwa isikhathi eside, iphaneli ezungezile iyafudumala. Kungenzeka uzwe ukushisa uma uthinta kuleyo ndawo ngesandla.

I-ADAPTHA YOKUMIA OBONDENI

Ulwazi olungezansi lubonisa ukuphathwa okungalungile kwe-Adaptha Yokumisa Obondeni. Qiniseka ukufunda lolu lwazi kahle bese ubebenzise ngokungalungile i-Adaptha Yokumisa Obondeni.


Kumakhasimende:

- Qiniseka ukubheka kahle izexwayiso ezilandelayo ngokuphepha ukuze uvikele ukulimala okukhulu ngomilo, ukushaywa ugesi, ukuwa komkhiziqo, noma uwele phansi
- Qiniseka ukwenza isivumelwano sokufaka kusonkontileka abanelayisensi futhi igcine izingane zikude phakathi kokufaka.
- Qiniseka ukwenza isivumelwano uma uhambisa noma ususa i-TV kusonkontileka abanelayisensi.
- Ungasusi izikulufu, njll., ngemva kokufaka i-TV.
- Ungenzi ushintsho ezingxenyeni ze-Adaptha Yokumisa Obondeni.
- Ungafaki esinye isisetsenziswa ngaphandle komkhiziqo ocacisiwe.
- Ungasebenzisi okunye ngaphandle kwe-TV ku-Adaptha Yokumisa Obondeni.
- Ungayami noma ulengise kusuka ku-TV.
- Ungabambi i-TV ngamandla kakhulu uma uhlanza noma unakekela.

Kubadayisi Nosonkontileka be-Sony:

Imiyalo elandelayo eyabadayisi be-Sony nosonkontileka kuphela. Qiniseka ukufunda izexwayiso zokuphepha ezichazwe ngezansi futhi unake kakhulu ukuphepha phakathi kokufaka, ukunakekela kanye nokuhlola lo mkhiziqo.

- Ungafaki i-Adaptha Yokumisa Obondeni ezindaweni zebonda lapha amakhona noma izinhlangothi ze-TV zidlula izindawo zebonda.



- Ungafaki i-TV ngaphezu noma ngaphansi kwesiqandisi somoya.
- Qiniseka ukufaka i-Adaptha Yokumisa Obondeni ngokuphephile obondeni ulandela imiyalo kule manuwalu yemiyalo. Uma ezinye izikulufu zingaqinile kahle noma ziphuma, i-Adaptha Yokumisa Obondeni ingahle iwe futhi ibangele ukulimala noma ukoneka kwendawo.
- Qiniseka ukusebenzisa izikulufu ezinikeziwe nezingxenye ezinamathiselwe kahle ulandele imiyalo enikeziwe kule manuwalu yemiyalo. Uma usebenzisa izinto zokukhipha, i-TV ingawu futhi ibange ukulimala komzimba komunye noma ukonakala ku-TV.
- Qiniseka ukhlanganisa ibuhlakethi kahle ulandela indlela eyalwe echazwe kule manuwalu yemiyalo.
- Qiniseka ukubopha izikulufu ngokuphephile endaweni enikeziwe.
- Qaphela ungabeki i-TV ekushayeni phakathi kokufaka.
- Qiniseka ukufaka i-TV ebondeni elimile futhi eliphansi.
- Ngemva kokufaka kahle i-TV, vikelwa amakhwebula kahle.
- Ungavumeli ikhodi yamandla kagesi e-AC noma ikhebuli exhumayo ukuthi icindezelwe ngoba okuxhumanisayo kwangaphakathi kungavela ngaphandle futhi kubange i-curcuit engaphelele noma ukwephuka kukangesi kwangaphakathi.



Izexwayiso

Ukubuka i-TV

- Ngekhwalithi yesithombe esihle kakhulu, ingavezi isikrini ku-illumination eqondile noma elangeni.
- Buka i-TV ngomkhanyo omaphakathi, njengokubuka i-TV ngomkhanyo ongangelungile noma phakathi kwesikhathi eside, kulimaza amehle wakho.
- Uma usebenzisa ama-headphone, lungisa ivolumu ukuze uvikele amaveleli amaningi, njengoba kungalimaza ukuzwa.

Isikrini se-LCD

- Noma isikrini se-LCD senziwe ngobuchwephe obuphezulu kanye no-99.99% noma amaphikiseli amaningi asebenza, amachashazi amnyana angahle avele noma izindawo ezikhanyayo zesibani (bumvu, luhlaza okwesibhakabhaka noma luhlaza okotshani) ingabonakala ngokulingana esikrini se-LCD. Lokhu kuyindawo eyisifanekiso yesikrini se-LCD futhi akukona ukungasebenzi kahle.
- Ungaphushi noma ulimaze isizihlungi esiphambili, noma ubeke izinto phezu kwesethi ye-TV. Isithombe singahle singalingani noma isikrini se-LCD singahle sephukile.
- Uma le sethi ye-TV isetshenziswe endaweni ebandayo, ibala lingavela esithombeni noma isithombe singabamnyama. Lokhu akukhombisi ukwahluleka. Lokhu kuyanyamalala njengeba izinga lokushisha liphakama.
- I-Ghosting ingavela uma izithombe ezimile ziboniswa ngokuqhubekayo. Inganyamalala emuva kwesikhasha.
- Isikrini kanye nekhabinethi kuyafudumala uma le sethi ye-TV isebenza. Kodwa-ke, lokhu akukona ukuphuka kwawo.
- Isikrini se-LCD siqukethe inani elincane lokusamanzi okuhhanyayo. Landela izinkombandlela nemithetho yendawo yakho ngokuvezwa.

ZU

Ukubamba kanye nokuhlaza indawo/ ikhabinethi yesikrini sesethi ye-TV

Qiniseka ukunqamula ikhodi yamandla kagesi e-AC (ama-mains lead) exhunywe kusethi ye-TV kusuka ku-awuthilethi yamandla kagesi e-AC (ama-mains socket) ngaphambi kokuhlaza.

Ukugwema ukwehla kwento noma ukwehla kokuvala isikrini, bona izexwayiso eziladelayo.

- Susa uthuli kusuka endaweni/kukhabinethi yesikrini, sula kahle ngendwangu ethambile. Uma uthuli licindezela, sula ngendwangu emanzi kancane ethambile enensipho kancane.
- Ungatheli amanzi noma insipho yokuhlaza ngqo kwisethi ye-TV. Ingahle iconsele phansi esikrinini noma ezingxenyezi zangaphandle futhi ingene kwisethi ye-TV, futhi ingabangela ukonakala kwesethi ye-TV.



- Ungasebezisi uhlobo lwe-abrasive pad, alkaline/isisusi se-acid, uphawuda we-scouring, or noma i-volatile solvent, jengotshwala, benzene, utonsi noma i-insecticide. Ukusebenzisa izinto ezinjalo noma ukunakekela ukubamba okwelulwe ngenjoloba noma izinto ze-vinyl kungaholela ekulimaleni endaweni yesikrini nomebenzi wekhabinethi.
- Ukunyamalala ngesikhathi kwezombobo zomoya kuyanconywa ukuqiniseka izimbobo zomoya ezilungile.
- Uma ulungisa i-engeli yesethi ye-TV, isuse kancane ukuze uvikele isethi ye-TV, ihambise kancane ukuze uvikele isthi ye-TV ekuhambeni noma ukushelela esitendini sayo.

Into ekhethekayo

Gcina izinto ezikhethekayo noma izinto ezithumela i-electromagnetic radiation kude nesethi ye-TV. Uma kungenjalo kungaba nobubi besithombe kanye/noma sibange umsindo.

Ukusebenza ngokungenazintambo kwesilinganiso

- Ungasebenzisi lesi silinganiso duzane nento yomuthi (i-pacemaker, njll.), njengoba ukusebenzisa kahle komuthi kungadaleka.
- Noma lesi silinganiso sihambisa/sithola amasiginali ahlakazekile, qaphela ngokuphazamisa okungagunyaziwe. Asikwazi ukubophezeleka kunoma iyiphi inkinga njengomphumela.

Isexwayiso mayelana nokubamba isilawulikude


- Bheka i-polarity efanele uma ufaka amabhethri.
- Ungasebenzisi izinhlobo ezahlukene zamabhethri zonke noma uxubanise amabhethri amadala namasha.
- Lahla amabhethri ngendlela engahlukumezi imvelo. Ezinye izindawo zinezindlela eziphephile zokulahla amabhethri. Sicela uxhumane nabomthetho abasendaweni.
- Phatha isilawulikude ngokunakekela. Ungawisi noma uyinyathele, uthete amanzi wanoma uluphi uhlobo kuyo.
- Ungabeki isilawulikude endaweni duzane nokushisa, indawo eqondene nelanga, noma igumbi elimanzi.

I-ADAPTHA YOKUMIA OBONDENI

- Uma usebenzisa i-TV efakwe obondeni ku-Adaptha Yokumisa Obondeni isikhathi eside, ibonda ngemuva noma ngaphezulu kwe-TV lingahle lisuke umbala noma uphephadonga ungaqini, ngokuya ngento yebonda.
- Uma i-Adaptha Yokumisa Obondeni isusiwe ngemva kokufaka ebondeni, izimbobo zezikulufu ziyasala.
- Ungasebenzisi i-Adaptha Yokumisa Obondeni endaweni lapho kudlidliza khona.

Izingxenye Nezilawuli

I-TV

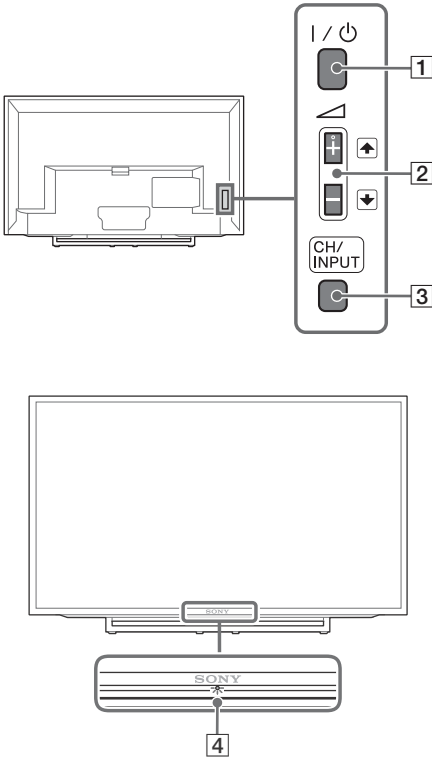

1 I/⏻ (Amandla)

Kuvula i-TV noma kushintshela kwimodi emile.

Qaphela

- Ukunqamula i-TV kusuka kumandla we-AC ngokuphelele, donsa ipulagi kusuka kusokhethi ye-mains.

2 ⏪ / + / - / ⏩ / ⏻ / ⏹ (Ivolyumu / Ukukhetha into)

- Ikhuphukisa/yehlisa ivolyumu, noma ikhetha ishaneli elandelayo (+) noma yangaphambilini (-) uma isaziso se-CH Phezulu/Phansi siboniswa ngokucindezela inkinobho ye-**CH/INPUT**.
- Ihambisa umthombo wokufaka phezulu/ phansi uma imenyu yokukhetha yokufaka iboniswa ngokucindezela inkinobho ye-**CH/INPUT**.

3 CH/INPUT

Ishtntsha phakathi kwesikrini CH Phezulu/ Phansi kanye nesikrini sokukhetha sokufaka.

4 (Isikhokhombisi Sokuzwela/LED)

- Ithola amasiginali kusuka kusilawuli kude. Ungabeki okuthile kusizweli. Ukwenza kanjalo kungase kuphazamise umsebenzi wakhona.
- Ikhanyisa ngokuphuzi uma isikhathi sokulala noma isikhathi sisethiwe (ikhasi 19), noma i-TV iku-Photo Frame Mode (ikhasi 11)
- Ikhanyisa ngokuluhlaza uma i-[Ukongga Amandla] isethelwe ku-[Isithombe Sicishiwe] (ikhasi 22).
- Kukhanyisa umbala oluhlaza lapho i-TV ivuliwe.
- Ayikhanyisi uma i-TV ikwimodi emile.
- Kuyabanika ngenkathi irimothi isetshenziswa.


Qaphela

- Qiniseka ukuthi i-TV icishiwe ngokuphelele ngaphambi kokukhipha ikhodi yamandla kagesi we-AC. Ukukhipha ikhodi yamandla kagesi we-AC ngenkathi i-TV ikhanya kungase kubangele isikhombisi ukuthi sihlale sikhanya noma kungabangela ukuthi i-TV ingasebenzi kahle.

Ihinti

- I-⏪ + inecashazi lokuthinta. Isebenzise njengesikhombi uma usebenzisa i-TV.

Isilawuli kude

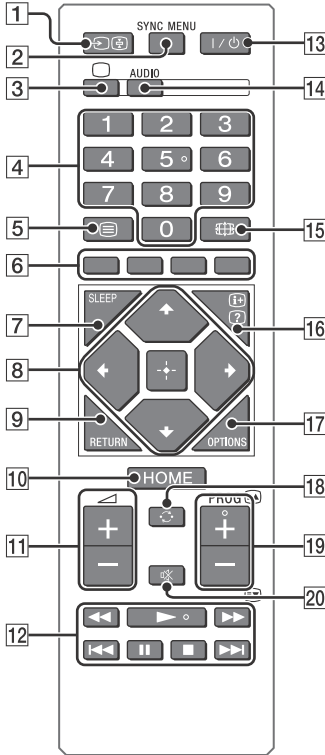

1 (Ukukhetha kokufaka / Ukubamba umbhalo)

- Ibonisa futhi ikhethe umthombo wokufaka (ikhasi 24).
- Kwimodi yombhalo, ibamba ikhasi lamanje.

2 SYNC MENU

Cindezela ukubonisa Imenyu BRAVIA Sync bese kukhetha isisetsheziwa esixhunyiwe se-HDMI/MHL [Ukukhethwa Kwedivayisi]. Izinketho ezilandelayo zingakhethwa kusuka ku-BRAVIA Sync Menu.

Ukulawulwa Kwedivayisi:

Sebenzisa i-[Ukulawulwa Kwedivayisi] ukuze usebenze ngesisetsheziwa esisebenzisana ne-BRAVIA Sync Control. Khetha izinketho kusuka ku-[Ekhaya (Imenyu)], [Izinketho], [Uhlu Lokuqukethwe] ne-[Cisha] ukuze usebenzise izisetsheziwa.

Izipikha:

Ikhetha i-[Izipikha ze-TV] noma i-Isistimu ye-Audio ukukhipha umsindo we-TV kusuka kuzipikha noma izisetsheziwa zomsindo ezixhunyiwe.

Ukulawula i-TV:

Sebenzisa imenyu [Ukulawulwa kwe-TV] ukusebenzisa i-TV kusuka kumenyu [Ekhaya (Imenyu)] noma [Izinketho].

Buyela ku-TV:

Ukhetha le nketho ukubuyela ohlelwe le-TV.

3

Iphuma Kwimodi Yombhalo, noma ishintshela ekubonisweni kwe-TV uma kuboniswa kokufaka kwangaphandle.

4 Izinkinobho zezinombolo

- Khetha amashaneli. Kwizinombolo zesjaneli u-10 nangaphezulu, faka inombolo elandelayo ngokushesha.
- Kwimodi yombhalo, faka izinombolo ezintathu zenombolo yekhasi ukuze ukhethe ikhasi.

5 (Umbhalo)

Kwimodi yombhalo, bonisa Ukusakazwa kombhalo.

Ngaso sonke isikhathi uma ucindezela u-, izinguquko zokubonisa zishintsha njengokulandelayo:

Umbhalo → Umbhalo esithombeni se-TV (imodi ehlangene) → Awukho umbhalo (phuma kwisevisi yombhalo)

6 Izinkinobho zombala

Abonisa igayidi yokusebenza (uma izinkinobho zitholakala).

7 SLEEP

Isetha isikhathi ifremu yesikhathi esithandwayo ukuthi sivale i-TV ngokuzenzekela.

8 (Ukukhetha into / Enter)


- Khetha noma lungisa izinto.
- Qinisekisa izinto ezikhethiwe.

9 RETURN

- Ibuyela kwisikrini sangaphambilini sanoma iyiphi imenyu ebonisiwe.
- Imisa ukudlala uma kudala ifayela lesithombe/umculo/ividiyo.

10 HOME

Kubukisa noma kukhansela imenyu.

11  +/- (Ivolyumu)

Kulungisa ivolyumu.

12 

- Sebenzisa isisetshenizwa esihambelana ne-BRAVIA Sync.
- Lawo makhiye futhi angasetshenziswa ukulawula ukudlala kwemidiya kwe-USB.

13  (Ukuma kwe-TV)



Kuvula i-TV noma kushintshela kwimodi emile.

14 **AUDIO**

Ikhetha umsindo-nhlangothimbili (ikhasi 16).

15  (Imodi Ebansi)


Lungisa isibonisi sesikrini. Cindezela ngokuphindaphindiwe ukukhetha imodi ebanzi oyithandayo (ikhasi 10).

16  /  (Ulwazi / Ukukhululwa kombhalo)



- Kubukisa ulwazi. Cindezela kanye ukubonisa ulwazi mayelana nohlelo/kokufaka okubukayo. Cindezela futhi ukususa isibonisi kusuka esikrinini.
- Kwimodi yombhalo, ikhulula ulwazi olufihlakele (isb. izimpendulo emibuzweni).



17 **OPTIONS**


Cindezela ukubukisa uhlu oluqukethe izindlela ezingamulelayo kwamanye amamenyu wesethingi. Izinketho ezikuhlu ziyahluka ngokuya kokufaka nokuqukethwe kwamanje.

18  (Yeqa)

Kubuyela kushaneli eyandulele noma okokufaka okubukwe ngaphezu kwemizuzwana engaphezu kwengu-15.


19 **PROG +/-** /  / 

- Kukhetha ishaneli elandelayo (+) noma eyandulele (-).
- Kwimodi yombhalo, ikhetha ikhasi elilandelayo () noma elandulele ()

20  (Thulisa)

Ithulisa umsindo. Cindezela futhi ukubuyisa umsindo.

Ihinti

- Inombolo 5, , **PROG** + kanye nenkinobho **AUDIO** zinamachashazi okuthinta. Sebenzisa amachashazi okuthinta njengezikhombisi uma usebenzisa i-TV.

Ukubukela i-TV


- 1 Cindezela u-I/⏻ ku-TV ukuze ukhanyise i-TV.
- 2 Cindezela izinkinobho zezinombolo noma u-PROG +/- ukuze ukhethe ishaneli ye-TV.
- 3 Cindezela u-◀ +/- ukuze ulungise ivolyumu.

Ukushintsha Isitayela Sokubuka


Ukushintsha Imodi Ebanzi

- 1 Cindezela u-⏮ ngokuphindiwe ukuze ukhethe imodi ebanzi.


[Izumu ebanzi]*




[Gcwele]



[Okuvamile]




[Zoom]*




* Izingxenye ezingaphezulu nangaphansi kwesithombe zingase zinqamuleke.

Okwe-HDMI PC (isikhathi se-PC)


Okuvamile



Gcwele 1



Gcwele 2




Ukusetha Ukukhethwa Kwesigameko

- 1 Cindezela u-OPTIONS.
- 2 Cindezela u-⏮/⏭ bese u-⏮ ukuze ukhethe i-[Khetha Isigaba].
Uma ukhetha inketho yesigameko osithandayo, ikhwalithi yomsindo neyesithombe yesigameko esikhethiwe zizosethwa ngokuzenzekelayo. Izinketho ongakwazi ukuzisetha zingahluka. Izinketho ezingekho zimpunga.

Ukuzulela kuMenyu yaseKhaya

Inkinobho ye-**HOME** ikuvumela ukuthi ufinyelele amasethingi nezici ze-TV ezahlukahlukene.

1 Cindezela u-**HOME**.

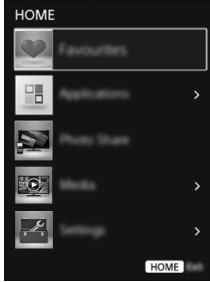

2 Cindezela u-**⇅** ukuze ukhethe inketho, bese ucindezele u-**+**.

Okuthandwayo

Isici esiyintandokazi sikuvumela ukuthi ucacise amashaneli angafika kwangu-18 wezinhlalo zakho ozithandayo.

1 Cindezela u-**HOME**.

2 Cindezela u-**⇅** bese u-**+** ukuze ukhethe i-[Okuthandwayo].



3 Cindezela u-**⇅** bese u-**+** ukuze ukhethe uhlelo.

Izinhlalo

Ukusebenzisa i-TV njengoZimele weSithombe

Uzimele Wesithombe ubonisa iwashi kanye nekhalela ngesikhathi esisodwa njengoba abonisa isithombe, kanye nokulalela umculo noma umsakazo we-FM.

1 Cindezela u-**HOME**.

2 Cindezela u-**⇅** bese u-**+** ukuze ukhethe i-[Izinhlalo].

3 Cindezela u-**⇅** bese u-**+** ukuze ukhethe i-[Imodi Yefremu Yesithombe].



Ukuze ukhethe isithombe noma umculo kusuka kumemori ye-USB

1 Cindezela u-**OPTIONS** ngenkathi udlala ifayela lesithombe noma lomculo.

2 Cindezela u-**⇅** bese u-**+** ukuze ukhethe [Imodi Yefremu Yesithombe] ukuze uvule Ifremu Yesithombe.

Khetha imodi Yokubonisa

Ungashintsha ukuboniswa kukazimele wesithombe ngokukhetha u-[Imodi Yombukiso] ku-[Amasethingi Efremu Yesithombe] (ikhasi 19).

Ukukhetha imodi Yokubonisa Iwashi

Ungakhetha phakathi kwamamodi wokubonisa iwashi amathathu u-[Umbukiso Wewashi] ku-[Amasethingi Efremu Yesithombe] (ikhasi 19).

Qaphela

- Le TV ayinaso isipele samandla sebhetri sewashi. Ngakho-ke, uma kunokuphazamiseka kukagezi noma uma unqamula ikhodi gagesi, qiniseka ukusetha kabusha usuku nesikhathi samanje.

Ubude besikhathi

Ukonga ugesi, i-TV idlala ngokuqhubekayo kwiModi ye-Phoro-Frame kufika emahoreni angu-24 ngaphambi kokucima ngokuzenzekelayo. Ngemva kokucima okuzenzekelayo, ungasebenzi iModi ye-Photo Frame okungenani ihora elilodwa ukugwema ukusha kwepaneli. Ungashintsha isethingi le-[Ubude] ku-[Amasethingi Efremu Yesithombe] (ikhasi 19).

Ukuvikela kokusha kwepaneli, indawo yesithombe, iwashi kanye nekhanda zishintshwa ngokuzenzekelayo njalo ngehora.

Ukulalela umsakazo we-FM

- 1 Cindezela u-HOME.
- 2 Cindezela u-↕/↔ bese u-⊕ ukuze ukhethe i-[Izinhlelo].
- 3 Cindezela u-↕/↔ bese u-⊕ ukuze ukhethe i-[Umsakazo we-FM].
- 4 Cindezela u-PROG +/- ukuze ukhethe isiteshi somsakazo we-FM.

Ukuphuma kwimodi Yomsakazo we-FM

- 1 Cindezela u-RETURN.

Ukusetha ngaphambilini Iziteshi

Zomsakazo

Uma usebenzisa umsebenzi woMsakazo we-FM kokuqala, cindezela u-HOME bese ukhethe u-[Amasethingi] → [Amasethingi Esistimu] → [Ukusethwa Kweshaneli] → [Ukusethwa Komsakazo we-FM] → [Ukushuna Ngokuzenzekela].

Ukuze ushintshe ukusethwa kabusha kweziteshi zomsakazo

- 1 Cindezela u-OPTIONS kwimowudi Yomsakazo we-FM.
- 2 Cindezela u-↕/↔ bese u-⊕ ukuze ukhethe i-[Seth. Ph. FM].
- 3 Cindezela u-↕/↔ bese u-⊕ ukukhetha isiteshi somsakazo ofuna ukusishintsha.

- 4 Cindezela u-↕/↔ bese u-⊕ ukuze ushintshe ifrikhwensi ye-FM bese ukuhlela gama lesiteshi soMsakazo.

Qaphela

- Uma isiteshi sinomsindo, ungakwazi ukuthuthukisa ikhwalithi yomsindo ngokucindezela u-↕/↔.
- Uma uhlelo lwestiriyo se-FM lunomsindo omile, cindezela u-AUDIO kuze kuvele i-[Mono]. Ngeke ubekhona umphumela westiriyo, kodwa umsindo uzokwehliswa.

Ukwabiwa kwesithombe (ngaphandle kwe-KLV-32R412B, KLV-28R412B)

Xhuma, kopisha, futhi ubuke izithombe ozithandayo ku-TV usebenzisa amadivayisi wakho (isb. ama-smart phones noma amathebhuilethi).

- 1 Cindezela u-HOME.
- 2 Cindezela u-/↓ bese u- ukuze ukhethe i-[Ukwaba isithombe].
- 3 Landela imiyalo esikrinini ukuze uxhume idivayisi yakho ku-TV.
- 4 Vula isiphequluli sewebhu kudivayisi ngemva kokuthi konke ukuxhuma kuqaliwe, bese ulandele imiyalo esikrinini ukuze ufinyelele i-URL.

Ukubonisa isithombe ku-TV

- 1 Thinta kudivayisi ukuze uqale.
- 2 Khetha isithombe, bese uthinta isithonjana se- kudivayisi yakho.

Ukuze ulondolozwe isithombe esiboniswe ku-TV

- 1 Isithonjana kudivayisi yakho, bese bamba isithombe ukuze uvule imenyu yokuqokethwe.
- 2 Khetha u-[Londoloza].

Qaphela

- Umlando wesithonjana kudivayisi yakho kuzogcina izithombe ezingafika ku-5. Xhuma idrayivu ye-USB ukuze ugcine izithombe ezingafika ku-50.
- Kufika kuma-smart phone noma amathebhuilethi angu-10 angaxunywa ku-TV ngesikhathi esisodwa.
- Usayizi wefayela omkhulu wesithombe ngasinye ngu-10 MB.

Imidiya

Ukudlala Isithombe/Umculo/Ividiyo nge-USB

Ungajabulela amafayela wesithombe/womculo/wevidiyo alondolozwe kwikhamera emile yedijithali ye-Sony noma i-camcorder ngekhebula ye-USB noma idivayisi yokulondoloza ye-USB ku-TV yakho.

- 1 Xhuma idivayisi ye-USB esekelwe ku-TV.
- 2 Cindezela u-HOME.
- 3 Cindezela u-/↓ bese u- ukuze ukhethe i-[Imidiya].
- 4 Cindezela u-/↓ bese u- ukukhetha u-[Isithombe], [Umculo] noma u-[Ividiyo].
Uma idivayisi engaphezu kweyodwa ye-USB ixhunyiwe, cindezela inkinobho ebomvu ukukhetha u-[Okukhethwayo Kokudlala] bese u-[Ukukhethwa Kwevidiyo] ukuze ukhethe idivayisi ye-USB elungile.
- 5 Cindezela u-/↓/↔/⇒ bese u- ukuze ukhethe ifayela noma ufolda.

Izinketho zokudlala

Cindezela inkinobho ebomvu ukuze ubonise uhlu lwamasethingi wokudlala we-USB.

Ukulungisa ikhwalithi yesithombe sevidiyo ye-USB

- 1 Cindezela u-OPTIONS phakathi kokudlala kwevidiyo.
- 2 Cindezela u-/↓ bese u- ukuze ukhethe i-[Isithombe].
- 3 Cindezela u-/↓/↔/⇒ bese u- ukuze ukhethe futhi ulungise into.

Ukudlala isithombe njengombukiso weslayidi (Isithombe)

1 Cindezela inkonkono eluhlaza ekubukweni kwesithonjana ukuze uqale islayidi sombukiso. Ukuze usethe i-[Umthelela Wamaslayidi] ne-[Ijubane Lombukiso], cindezela u-**OPTIONS** → [Okukhethwayo Kokudlala]. Ukuze umise umbukiso weslayidi, cindezela u-**RETURN**.

Gaphela

- Ngenkathi i-TV ifinyelela idatha kudivayisi ye-USB, bheka okulandelayo:
 - Ungacimi i-TV.
 - Unganqamuli ikhebuli ye-USB.
 - Ungasusi idivayisi ye-USB.Idatha kudivayisi ye-USB ingahle yonekile.
- I-Sony ngeke ibe necala lanoma yikuphi ukonakala, noma ukulahlekelwa, kwedatha kwi-media yokuqopha ngenxa yokungasebenzi kahle kwanoma yimaphi amadivayisi axhunyiwe noma i-TV.
- Isistimu yefayela kudivayisi ye-USB isekela i-FAT16, FAT32 kanye ne-NTFS.
- Igama lefayela negama lefolda kungase kungabonakali kahle kwezinye izimo.
- Lapho uxhuma ikhamera emile yedijithali ye-Sony setha imowudi yoxhumano le-USB yekhamera kube Okuzenzekelayo noma Isitoreji Sesinyokotho. Ukuze uthole ulwazi olwengeziwe olumayelana nemodi yoxhumano le-USB, bheka iziqondiso ezinikezwe nekhamera yakho yedijithali.
- Hlola iwebhusayithi engezansi ukuthola ulwazi olubuyekeziwe olumayelana namadivayisi we-USB ahambisanayo.
<http://www.sony-asia.com/bravia/flash.html>
- Sebenzisa idivayisi yesitoreji se-USB esebenzisana nezimiso zesigaba sedivayisi yesitoreji senyokotho.
- Uma ifayela ekhethiwe liqukethe ulwazi olungalungile, noma lingasebenzisani, ngeke lidlalwe.

Ifomethi yeVidiyo ye-USB

- AVI (.avi)
 - I-Codec MPEG1, MPEG2, Xvid, MPEG4,
 - yeVidiyo: H.264, Motion JPEG
 - I-Codec PCM, MPEG1 Layer1/2, MPEG2
 - Yomsindo: AAC (2ch), MPEG4 AAC (2ch), MPEG4 HE-AAC (2ch), Dolby Digital (2ch), WMA v8, MP3.
- ASF (.wmv, .asf)
 - I-Codec WMV v9, Xvid, VC-1
 - yeVidiyo:
 - I-Codec MP3, WMA v8
 - Yomsindo:
- MP4 (.mp4, .mov, .3gp)
 - I-Codec MPEG-4, H.264, H.263, Motion
 - yeVidiyo: JPEG
 - I-Codec MPEG1 Layer1/2, MP3, MPEG2
 - Yomsindo: AAC, MPEG4 AAC, MPEG4 HE-AAC
- MKV (.mkv)
 - I-Codec WMV9, MPEG4, H.264, VC-1,
 - yeVidiyo: VP8
 - I-Codec PCM, MPEG1 Layer1/2, MP3,
 - Yomsindo: MPEG2 AAC (2ch), MPEG4 AAC (2ch), MPEG4 HE-AAC (2ch), Dolby Digital (2ch), WMA v8, DTS, DTS 2.0, VORBIS
- WebM (.webm)
 - I-Codec VP8
 - yeVidiyo:
 - I-Codec VORBIS
 - Yomsindo:
- PS (.mpg, .mpeg, .vro, .vob)
 - I-Codec MPEG1, MPEG2
 - yeVidiyo:
 - I-Codec MPEG1 Layer1/2, MP3, Dolby
 - Yomsindo: Digital (2ch), DTS, DTS 2.0
- TS (.ts, .m2ts)
 - I-Codec MPEG2, H.264, VC-1
 - yeVidiyo:
 - I-Codec MPEG1 Layer1/2, MP3, MPEG2
 - Yomsindo: AAC, MPEG4 AAC, MPEG4 HE-AAC, Dolby Digital, DTS, DTS 2.0

Ifomethi Yomculo we-USB

- LPCM (.wav)
- MPEG1, audio layer3 (.mp3)
- WMA V8 (.wma)

Ifomethi Yesithombe se-USB

- JPEG (.jpg, .jpeg)

Qaphela

- Ukuphinda kudlala kwamafomethi wefayela angenhla akuqinisekiwe.

Amasethingi

Amasethingi Esistimu

Qaphela

- Izinketho ongazilungisa ziyahluka kuya ngesimo. Izinketho ezingatholakali zenziwe zaba mpunga noma azibukiswa.



Isithombe

Imodi Yesithombe

Kusetha imowudi yesithombe. Izinketho ezingakhethwa ziyahluka ngokuya ngamasethingi we-[Khetha Isigaba].

Ukusetha kabusha

Setha kabusha wonke amasethingi we-[Isithombe] ngaphandle kwe-[Imodi Yesithombe] kanye ne-[Isithombe Esisile Ngokwengeziwe] kumasethingi wakhona.

Ukukhanyisa kwasemuva

Kulungisa ukukhanya kwelambu langemuva.

Isithombe

Kukhulisa noma kwehlisa ukugqama kwesithombe.

Ukukhanya

Kukhanyisa noma kufiphalisa isithombe.

Umbala

Kukhulisa noma kunciphisa ukujula kombala.

I-Hue

Kukhulisa noma kunciphisa imibadlana eluhlaza nemibadlana ebomvu.

Ukucija

Kucijisa noma kuthambisa isithombe.

Ithempesha Yombala

Kulungisa ubumhlophe besithombe.

Ukunciphiswa Umsindo

Kwehlisa umsindo wesithombe (isithombe esineqhwa) kwisignali yokusakaza okubuthakathaka.

Ukunciphiswa Umsindo we-MPEG

Kwehlisa umsindo wesithombe kwividiyo encishisiwe ye-MPEG.

Idrayivu Yesinema

Kunikeza ukunyakaza kwesithombe okuthuthukisiwe lapho kudlala izithombe ze-BD (Idiski ye-Blu-ray), i-DVD noma i-VCR ezithathwe kwifilimu, ngokwehlisa ukufiphala nobumpunga. Khetha i-[Okuzenzekel.] ukuze umiselele okuquethwe okususelwe kwifilimu loqobo njengoba linjalo.

Qaphela

- Uma isithombe sinamasignali angavamile noma umsindo omningi kakhulu, i-[Idrayivu Yesinema] icishwa ngokuzenzakalela ngisho noma i-[Okuzenzekel.] ikhethiwe.

Amasethingi Aseqophelweni

Isetha amasethingi we-[Isithombe] ngokuningiliziwe.

Ukusetha kabusha: Isetha kabusha wonke amasethingi athuthukile kumasethingi wakhona.

Isithuthukisi Sokuhluka: Lungisa ngokuzenzakalela i-[Ilambu langemuva] ne-[Isithombe] kumasethingi alunge kakhulu ngokuqhathanisa ksuka ekukhanyeni kwesikrini. Le sethingi isebenza kakhulu kwizithombe ezimnyama, futhi izongezelela ukwahluka kwezithombe ezimnyama.

Isilungisi Sokumnyama: Ithuthukisa izindawo ezimnyama zesithombe ngokwahluka okuqinile.

Isisimamisi-mbala: Lungisa ibhalansi phakathi kwezindawo ezimnyama zesithombe.

Ubumhlophe obucacile: Ugcizelela umbala omhlophe.

Umbala oqhamile: Yenza imibala ibonakale kakhulu.

Imodi Yomnyakazo we-LED: Yehlisa ukufiphala kumamvu ngokulawula umthombo welambu langemuva le-LED, kodwa ukukhanya kuyehla.

Ukusethwa Kwesithombe Esihlakaniphile Ngokwengeziwe

Isithombe Esihlakaniphile

Ngokwengeziwe: Kukhulisa ikhwalithi yesithombe ngokuvumelana namasethingi akhethwayo, ishaneli noma okokufaka ividiyo. Izinketho ezingakhethwa ziyahluka ngokuya ngamasethingi we-[Khetha Isigaba].

Inkombandlela Yezinga Lesignali: Uma u-[Vuliwe] akhethiwe, ibha yeleveli yesignali izoboniswa uma ukhetha kokufaka kweshaneli se-analogi noma ividiyo.

Ukwenziwa Ngcono Kwesithombe: Ikuvumela ukuthi uthuthukise isithombe kumasethingi wakho owakhethayo.



Umsindo

Imodi Yomsindo

Khetha ngokuya ngokuqukethwe ofuna ukukujabulela.

Ukusetha kabusha

Isetha kabusha wonke amasethingi [Umsindo] ngaphandle kwe-[Imodi Yomsindo] kanye ne-[Umsindo-nhlangothimbili] kuya kokwakhona.

Isilinganisi

Kulungisa amasethingi okuvama komsindo.

Ukukhuphula Umsindo

Kukhiqiza umsindo ogcwele ngamandla amanindi, ngokugcizelela imisindo yebhesi.

Izwi Elicacile

Kwenza amazwi nomsindo kucace nakakhulu.

Ivolyumu Ehlakaniphile

Yehlisa umehluko kumaleveli wevolyumu phakathi kwazo zonke izinhlelo kanye nezikhangiso (isb. izikhangizo uma zibaphezulu kunezinhlelo).

Ibhalansi

Kugxilisa ibhalansi yesipikha esingakwesokunxele noma esingakwesokudla.

Ukusetha Ivolyumu

Kulungisa izinga levolvyumu yokokufaka kwakamuva ngokuhlobene nokunye okokufaka.

Umsindo-nhlangothimbili

Isetha umsindo kusuka kuzipikha kuya ku-[I-Mono], [Istiriyo], [Enkulu] noma ku-[Isabhu].

Qaphela

- Isignali yokugcina ayiqinile neze, umsindo ngokuzenzakalela uba-monaural.
- Uma umsindo wesitiriyo uphezulu lapho uthola uhlelo le-NICAM, khetha u-[I-Mono]. Umsindo uba i-monaural, kodwa ukuba phezulu kwawo kuyehliswa.
- Isethingi le-[Umsindo-nhlangothimbili] liyabekwa kwindowo yohlelo ngalunye.
- Awukwazi ukulalela umsindo wokusakaza westiriyo uma i-[I-Mono] ikhethiwe.

Ihinti

- Uma ukhetha esinye isisetshenziswa esixhunywe ku-TV, setha i-[Umsindo-nhlangothimbili] ku-[Istiriyo], [Enkulu] noma i-[Isabhu].



Iskrini

Imodi ebanzi

Ngeminingwane mayelana nemodi ebanzi, bona i-ikhasi 10.

Banzi ngokuzenzakalela

Kushintsha ngokuzenzakalela imowudi ebanzi ngokuya ngesignali yokokufaka kusuka kwisetsenziswa sangaphandle. Ukugcina isethingi yakho, khetha i-[Cishiwe].

Ihinti

- Ngisho noma ngabe i-[Banzi ngokuzenzakalela] isethwe ku-[Vuliwe] noma i-[Cishiwe], ungakwazi ukuguqula ifomethi yeskrini ngokucindezela u- ngokuphindaphindiwe.

4:3 Ngokuzihlelile

Isetha okwakhona kwe-[Imodi Ebanzi] kusignali yokufaka ye-4:3.

Indawo Yombukiso Ozenzekelayo

Khetha u-[Vuliwe] ukulungisa ngokuzenzakalayo indawo yokubonisa esekelwe kokuqokethwe noma u-[Cishiwe] ukukhetha kwizinketho ze-[Indawo yokubukisa].

Indawo yokubukisa

Kulungisa indawo yokubukisa isithombe.

Umnyakazo Olele

Kulungisa indawo elele yesithombe.

Umnyakazo Omile

Ilungisa indawo evundile yesithombe.

Amasethingi e-PC

Kheha imodi yesikrini noma lungisa indawo yesibonisi sesithombe uma uthola signali yokungenayo ye-PC.



Ukusetwa Kweshaneli

1 Digit Direct

Uma i-[1 Digit Direct] isethelwe ku-[Vuliwe], ungakhetha ishaneli usebenzisa inkimbo yenombolo eyodwa (0 - 9) kusilawuli kude.

Ukushuna Ngokuzenzekela

Ishunela kuwo amashaneli akhona.

Ukuhlela Kohlelo

Ishintsha ukuhleleka kwendlela iziteshi ezizcinwa ngayo ku-TV.

Amalebula Ohlelo

Nika ishaneli igama olithandayo kufina kwizinhlamvu eziyisikhombisa noma izinombolo.

Zisethele Uhlelo Ngaphambilini

Ngaphambo kokukhetha u-[Ilebula]/[AFT]/[Isicwengi Se-Audio]/[Yeqa]/[Isistimu Yombala], cindezela u-PROG +/- ukuze ukhethwe inombolo yohlelo neshaneli. Awukwazi ukukhetha inombolo yohlelo olusethele ku-[Yeqa:] (ikhasi 18).

Uhlelo/Isistimu ye-TV/Ifrikhwensi:

Kusetha iziteshi zohlelo ngokuzenzela.

Ilebula: Kunikeza igama elithandwa nguwe kuze kufike kwizinhlamvu noma izinombolo, kwishaneli ekhethiwe.

AFT: Ikuvumela ukuthi ushune kahle ishaneli ekhethiwe ngokuzenzela. Uma i-[Vuliwe] ikhethiwe, ukushuna kahle yenziwa ngokuzenzekelayo.

Ukuhlungwa Komnsindo: Kuthuthukisa umsindo weshaneli ngayinye uma umpendukezela ivela ekusakazweni kwe-mono kusistimu ye-TV [B/G], [I] ne-[D/K].

Qaphela

- Ngeke ukwazi ukuthola istiriyo noma umsindo-nhlangothimbili lapho i-[Phansi]/[Phezulu] ikhethiwe.

Yeqa: Yeqa amashaneli angasetshenziwe.

Isistimu Yombala: Khetha isistimu yombala ([Okuzenzekel.], [PAL], [SECAM], [NTSC3.58], [NTSC4.43] noma i-[PAL60]) ngokuya ngeshaneli.

Izinga Sign.: Ibonisa ileveli yesignali yohlelo olubukwe manje.

Ukusetlwa Komsakazo we-Fm

Kusetlwa ngaphambilini iziteshi zomsakazo we-FM ezifika kwezingu-30 ezingase zitholakale endaweni yakini.

Ukushuna Ngokuzenzekela: Ikuvumela ukushuna ngokuzenzekelayo kanye nokulondoloza wonke amashaneli atholakalayo.

Seth. Ph. FM: Njalo uhlala ushuna ngokwenza futhi ulondoloze ishaneli ngayinye etholakalayo ngesikhathi esisodwa.

Qaphela

- Ukunika amandla lesi sici, finyelela imodi Yomsakazo we-FM ngokusebenzisa u-Home (Menyu) (ikhasi 12), bese ushethe ngaphambili iziteshi zomsakazo ze-FM ngokuya kwezinyathelo ezishiwo ngenhla.

Ukukhiya Kwabazali

Ikhodi ye-PIN

Kusetlwa i-TV ukuba ivimbele isiteshi noma okokufaka kwangaphandle. Sebenzisa 0-9 kurimothi ukufaka i-PIN khodi engamadijithi amane.

Shintsha i-PIN khodi

Khetha ukushintsha i-PIN khodi yakho.

Ukuvinjwa Kohlelo

Ikhiya ishaneli ukuthi ingabukwa. Ukuze ubuke ishaneli evinjelwe, khetha u-[Akuvinjiwe].

Ukhiye Wokufakwayo Okuphuma Phandle

Kukhiya okokufaka kwangaphandle ukuba kungabukwa. Ukuze ubuke okokufaka kwangaphandle okuvinjelwe, khetha i-[Akuvinjiwe].

Qaphela

- Ukufaka i-PIN khodi elungile yesiteshi esivinjelwe noma okokufaka kwangaphandle kuzomisa ukusebenza okwesikhashana isici se-[Ukukhiya Kwabazali]. Ukuze wenze amasethingi [Ukukhiya Kwabazali] asebenze futhi, cisha bese uvula i-TV.

Ihinti

- Uma ulahlekelwe i-PIN khodi yakho, bheka i-ikhasi 36.

Ukusethwa

Ukusethwa kwe-Wi-Fi (ngaphandle kwe-KLV-32R412B, KLV-28R412B)

I-Wi-Fi eyakhelwe phakathi: Ikhanyisa/ icisha i-Wireless LAN.

Wi-Fi Direct: Ikhanyisa/icisha ukubonisa izithombe, umculo namamuvi noma ilawulo ileveli yevolyumu isebenzisa idivayisi ye-Wi-Fi direct njenge-PC, iselula noma ikhamera yedijithali.

Amasehingi we-Wi-Fi Direct: Setha ukuxhuma idivayisi ye-Wi-Fi direct ku-TV isebenzisa umsebenzi we-Wi-Fi Direct. Uma ungakwazi ukuxhuma, cindezela ukhiye **OPTIONS** bese ukhethe u-[Ukuzenzela].

Igama Ledivayisi: Shintsha igama le-TV eliboniswa kudivayisi exhunyiwe.

Ukusethw. Kwenethwekhi Yasekhaya: Ivumela amadivayisi ukuxhuma usebenzisa umsebenzi osetshenziswayo.

Amasehingi Efremu Yesithombe

Imodi Yombukiso: Ikuvumela ukukhetha imodi yombukiso. Bona ikhasi 12.

Umbukiso Wewashi: Ikuvumela ukukhetha umbukiso wewashi.

Uhlelo lwe-Audio: Isetha i-[Umsakazo we-FM], [Umculo] noma i-[Cishiwe] njengohlelo lwe-Audio.

Ukukhethwa Komfanekiso: Khetha umfanekiso.

Ikhethelo Lomculo: Khetha umculo.

Seth. Yombukiso Wamaslayidi: Khetha kusuka kumodi yesibonisweni sombukiso weslayidi noma ukubuka kwesithombe esisodwa.

Seth. Yokuph. Udlalise Umculo: Khetha kusuka ekulaloleni amathrekhi noma ithrekhi yomculo eyodwa.

Ubude besikhathi: Khetha isikhathi ([1 h], [2 h], [4 h] noma [24 h]) ngemva kokuthi i-TV ishintshele kwimodi yokuma ngokuzenzekelayo.

Usuku lokuqala lesonto: Setha i-[iSonto] noma u[Msombuluko] njengosuku lokuqala lesonto kukhalenda.

Ukuqala Ngokuzenzekela kwe-USB

Uma idivayisi ye-USB ixhunyiwe entubeni ye-USB, khetha i-[Vuliwe] ukuze ubuke ngokuzenzekelayo isithonjana Sesithombe/Umculo/lvidiyo edlalwe ngaphambilini.

Iwashi/Izibali-sikhathi

Isetha isibali-sikhathi newashi.

Isibali-skh. Sokulala: Setha isikhathi ngemizuzu ongathanda ukuba i-TV ihlale ivuliwe ngayo ngaphambi kokuba ivale shaqa ngokuzenzakalela.

Kwisibali-sikhathi: Ikhanyisa i-TV kusuka kumodi emile ngesikhathi usetha, futhi ushuna kushaneli noma kokufaka kwezintandokazi zakho. Ngaphambi kokusetha lo msebenzi, qiniseka ukuthi usetha isikhathi samanjanje esilungile.

Ukusetha Iwashi: Setha isikhathi nosuku lwamanje. Lesi sici futhi singasethwa kusuka ekusethweni kokuqala.

Ukuqalekela

Kuqalisa isimiso sokuyilungiselela kwasekuqaleni. Le nketho ikuvumela ukushuna kabusha i-TV ngemva kohambisa izindlu, noma ukusesha amashaneli amasha avulwe abasakazi.

Ulimi

Khetha ulimi amamenyu azobukiswa ngalo.

Ilogo Yokuqalisa

Khetha i-[Vuliwe] ukubukisa ilogo lapho i-TV ivuliwe. Khetha i-[Cishiwe] ukukukhubaza.

Inkombandlela ye-LED

Khetha u-[Vuliwe] ukuze ukhanyise kombandlela ye-LED. Khetha i-[Cishiwe] ukukukhubaza.

Ukusetlwa kwe-AV





Izibekiso zevidiyo: Inika igama kokufakwayo kwesisetshenziswa sangaphandle.

Vumela: Khetha u-[Okuzenzekel.] ukubonisa amagama kuphela uma isisetshenziswa sixhunyiwe, noma u-[Njalo] ukubonisa ngaphandle kwesimo sokuxhumana.

Kokufaka Okubekisayo: Isebenzisa okukodwa kokubekisa ukunika igama kusisetshenziswa esixhunyiwe. Khetha u-[Lungisa amaphutha] ukudala kokubekisa kwakho.

Isistimu Yombala: Ikhetha isistimu yombala [Okuzenzekel.], [PAL], [SECAM], [NTSC3.58], [NTSC4.43] noma i-[PAL60] ngokuya ngesignali yevidiyo yokwenziwa kusuka kumthombo wokungenayo.

Okufakwayo Ividiyo/Component:

Khetha u-[Okuzenzekel.] ukuze i-TV ithole futhi ishintshe phakathi kwe-jack yevidiyo ye-component  noma i-jack yevidiyo  uma i-jack yevidiyo ye-component  noma i-jack yevidiyo  ixhunyiwe.

Qaphela

- Ngeke ukwazi ukusebenzisa i-jack yevidiyo ye-component kane ne-jack yevidiyo ngesikhathi esisodwa.

Izipikha: Khetha okokukhipha umsindo kuzipikha ze-TV noma isisetshenziswa somsindo wangaphandle.

Isifakwakhanda/I-Audio Out: Isetha okokukhipha umsindo kuzifakwakhanda, amasistimu we-audio wangaphandle noma i-Subwoofer Esebenzayo exhunyiwe ku-TV. Nqamula izifakwakhanda kusuka ku-TV uma ukhetha i-[I-Audio Out] noma i-[Subwoofer].

Ilinki Yesipikha Yesifakwakhanda:

Ishintsha izipikha zangaphakathi ze-TV zikhanye/zicishe uma uxhuma izifakwakhanda ku-TV.

Ivolyumu Yesifakwakhanda: Kulungisa ivolyumu yezifakwakhanda.

Qaphela

- Le nketho ayitholakali uma i-[Isifakwakhanda/I-Audio Out] isethelwe ku-[I-Audio Out].

I-Audio Out:

Okushintshekayo: Uma usebenzisa isistimu ye-audio yangaphandle, okukhipha ivolyumu kusuka kokuphumayo kwe-audio kungalawulwa kusetshenziswa irimothi ye-TV.

Okuhlezi: Okukhipha i-audio ye-TV kuhlezi. Sebenzisa isilawuli sakho sokwamukela se-audio ukulungisa ivolyumu (namanye amasethingi we-audio) ngesistimu yakho ye-audio.

I-Audio Out Edijithali: Isetha isignali yomsindo ophumayo ngokuxhuma isebenzisa ikhebuli ye-HDMI (ARC). Sethela ku-[Okuzenzekel.], uma uxhuma isisetshenziswa esisebenzisana ne-Dolby Digital noma i-DTS. Sethela ku-[PCM], uma uxhuma isisetshenziswa esingasebenzisani ne-Dolby Digital noma i-DTS.

Indawo ye-TV: Ithuthukisa amasethingi wesipikha uma usetha njenge-[Kume Phezu-Kwetafula] noma i-[Kume Odongeni] ngokuya ngendawo ye-TV yakho.

Amasething. BRAVIA Sync

Kuvumela i-TV ukuba ixhumane nesisetshenziswa esihambisana nomsebenzi Wokulawul. kwe-BRAVIA Sync, nexhunye kuma-jack we-HDMI/ MHL ye-TV. Qaphela ukuthi amasethingi okuxhumana nawo kumele enziwe kwisisetshenziswa esixhunyiwe.

Ukulawul. kwe-BRAVIA Sync: Isetha noma ukuthi ingahlanganisi imisebenzi ye-TV kanye nesisetshenziswa esixhunyiwe esisebenzisana ne-Ukulawul. kwe-BRAVIA Sync. Uma usetha ku-[Vuliwe], imisebenzi elandelayo iyatholakala. Uma isisetshenziswa esithile se-Sony esingasebenzisani ne-Ukulawul. kwe-BRAVIA Sync sixhunyiwe, leli sethingi lifakwa kusisetshenziswa esixhunyiwe ngokuzenzekelayo.

Amadivayisi Acishiwe

Ngokuzenzekela: Uma lokhu kusethelwe ku-[Vuliwe], isisetshenziswa esixhunyiwe esimbelana ne-Ukulawul. kwe-BRAVIA Sync siyacisha uma i-TV iye kumodi yokuma.

Ukuvulwa kwe-TV Ngokuzenzekela:

Uma lokhu kusethelwe ku-[Vuliwe], i-TV iyakhanya uma ukhanyisa isisetshenziswa esixhunyiwe esisebenzisana ne-Ukulawul. kwe-BRAVIA Sync (ngaphandle kwemodi ye-MHL).

Shintsh. Kokufakw.

Ngokuzenzek.(MHL): Uma lokhu kusethelwe ku-[Vuliwe], idivayisi ye-MHL ishintshelwa kokufakwa kwe-MHL ngokuzenzekelayo. Uma i-TV ikumodi emile, ngeke ishintshe ngokuzenzekelayo. Khetha i-[Cishiwe] ukukukhubaza. Ukuba khona kwe-[Shintsh. Kokufakw. Ngokuzenzek.(MHL)] kuncika ekutheni idivayisi esebenzisana ne-MHL iyaseseka yini lesi sici.

Uhlu Divayisi BRAVIA Sync: Ibonisa uhlu lwesisetshenziswa esixhunyiwe esisebenzisana ne-Ukulawul. kwe-BRAVIA Sync. Ikhetha i-[Qalisa] ukubuyekeza i-[Uhlu Divayisi BRAVIA Sync].

Okhiye Bokulawula Bedivayisi: Khetha imisebenzi yenkinobho yeremothi ye-TV ukusebenzisa isisetshenziswa esixhunyiwe.

Akukho

Iyeka ukulawula kweremothi ye-TV.

Okuvamile

Ngemisebenzi eyisisekelo, njengezinkinobho zokuzula (phezulu, phansi, kwesokunxele noma kwesokudla, njall).

Okhiye Bokushuna

Ngemisebenzi eyisisekelo kanye nemisebenzi yezinkinobho ezihlobene neshaneli, njenge

PROG +/- noma (0-9), njll.

Kubalulekile uma ulawula isishuni noma usetha ibhokisi eliphezulu, njll; ngerimothi.

Okhiye Bemenyu

Ngemisebenzi eyisisekelo kanye nemisebenzi yezinkinobho ze-HOME/ OPTIONS.

Kubalulekile uma ukhetha amamenyu wesidlali se-BD, njll; ngerimothi.

Okhiye Bokushuna Nemenyu

Ngemisebenzi eyisisekelo kanye nemisebenzi yezinkinobho ezihlobene neshaneli nenkinobho ye-HOME/ OPTIONS.

Qaphela

- Ngeke ukwazi ukusebenzisa i-[Ukulawul. kwe-BRAVIA Sync] uma imisebenzi ye-TV ihlobene nemisebenzi yesistimu yomsindo ehambisana Nokulawul. kwe-BRAVIA Sync.
- Esinye isisetshenziswa esine-[Ukulawul. kwe-BRAVIA Sync] asisekeli isici se-[Ukulawulwa Kwedivayisi].

Ukwesekwa Kwamakhasimende

Kunikela ulwazi lwemodeli, i-sftware, nokunye kwe-TV yakho. Neminingwane, bona i-ikhasi 22.



Ukusetha kabusha

Kusetsha kabusha amaseethingi e-Eco yakamuva abe ngamanani azihlelele.

Ukongwa Amandla

Kunciphisa ukudonsa amandla kagesi we-TV ngokulungisa ilambu lasemuva. Uma ukhethe i-[Isithombe Sicishiwe], lesi sithombe siyacishwa. Umsindo uhlala ungashintshiwe.

I-Idle TV Standby

Kucisha i-TV ngemva kokuba igcinwe ingenzi lutho isikhathi sobude obusethwe ngaphambilini.

Ukwesekwa Kwamakhasimende

Igama Lemodeli

Bonisa igama lemodeli le-TV yakho.

Isihumusho se-Software

Bonisa isihumusho se-software samanje se-TV yakho.

Izemukeli

Buka Izibekiso zevidiyo: Ikuvumela ukuthi ubuke noma uphathe i-TV nokungenayo kwangaphandle.

Hlola Isithombe

Buka Isithombe Sovivinyo: Ikuvumela ukuhlola isimo sesithombe esibonisweni.

Isibuyekezo se-Software

Khetha ukwenza isibuyekezo sesistimu.

Amaseethingi Asefekthri

Kusetsha kabusha wonke amaseethingi abe awasefekthri. Ngemva kokuqedela le nqubo, iskrini sokulungiselela kwasekuqaleni siyabukiswa.

Qaphela

- Qiniseka ukungacishi i-TV phakathi kwalesi sikhathi (kuthatha imizuzwana engaba ngu-30) noma cindezela noma yiziphi izinkinobho.
-


Ulwazi Lomkhiqizo

Kubukisa ulwazi lomkhiqizo we-TV yakho.

Ukubuka Izithombe kusuka Kwisetshenziswa Esixhunyiwe

Umfanekiso Wokuxhuma

Ungaxhuma ibanga elibanzi lezisetshenziswa ezikhethekayo ku-TV yakho.

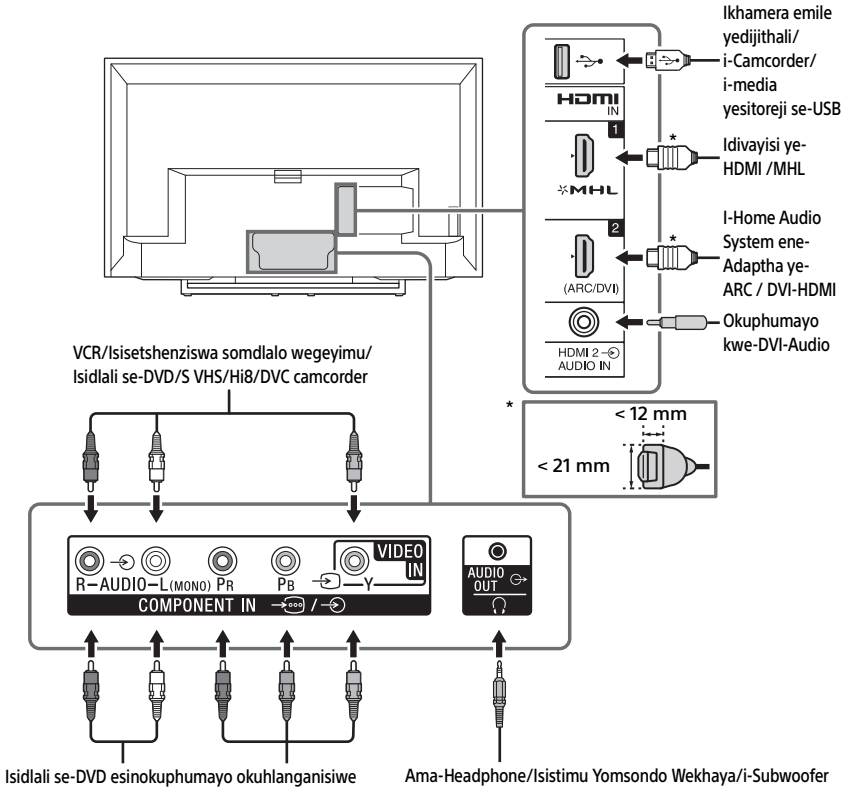

ZU

Ukubuka Izithombe kusuka Kwisetshenziswa Esixhunyiwe

Ikhwalithi Yesithombe

- Amakhebulu ahlengene we-AV
- Ikhebula ye-Antenna
- Ikhebula ehlangene
- Ikhebula ye-HDMI







Amavidiyo we-Standard definition (SD) anamasiginali wezithombe anokucaca okuvundile okungu-480 (NTSC) noma imigqa 576 (PAL/SECAM).



Amavidiyo we-High definition (HD) anamasiginali wezithombe anokucaca okungu-720 noma imigqa engu-1080.

Ukusebenzisa Isisetshenziswa Somsindo neVidiyo

- 1 Khanyisa isisetshenziswa esixhunyiwe.
- 2 Cindezela u-  ukuze ubonise umthombo wokufaka.
- 3 Cindezela u- /  bese u-  ukuze ukhethe umthombo wokungenayo owuthandayo.
Into egqanyisiwe izokhetha uma kudlula imizuzwana emibili ngaphandle komsebenzi.

Gaphela

- Uma uxhuma nekhebuli ye-HDMI, qiniseka ukusebenzisa ikhebula ye-HighSpeed HDMI ene-Cable Type Logo (Ikhebuli ye-SONY enconyiwe)
- Uma uxhuma isisetshenziswa se-mono, xhuma ikhebuli yomsindo ku-L (mono) jack.
- Uma uxhuma idivayisi enokuphumayo kwe-DVI, xhuma ikhebuli yevidiyo ye-DVI HDMI ku- HDMI IN 2 (ARC/DVI) kanye nekhebula yomsindo ye-DVI HDMI ku- HDMI 2 AUDIO IN jack.

Ukusebenzisa Idivayisi ye-MHL





Sebenzisa IKHEBULA ye-MHL 2 nelogo ye-MHL (akunikeziwe).
I-TV ishaja idivayisi exhunyiwe ehambisana ne-MHL exhunyiwe nedivayisi ngenkathi idlala amafayela wesithombe/umculo/amavidiyo.

Ukusebenzisa amadivayisi we-BRAVIA Sync

Uma uxhuma i-TV kusisetshenziswa esihambisana ne-BRAVIA Sync, ungakulawulo konke.
Qiniseka ukwenza amasethingi adingekayo ngaphambilini. Amasethingi wokulaw. we-BRAVIA Sync kufanele asethelwe kokubili ku-TV nezisetshenziswa ezixhunyiwe. Bona i-[Amasething. BRAVIA Sync] (ikhasi 21) ngamasethingi ohlangothini le-TV. Bheka imiyalo yokusebenza yesisetshenziswa esixhunyiwe ngamasethingi ohlangothini lesisetshenziswa esixhunyiwe.


Ukusebenzisa Ukulinganisa izihenko (ngaphandle kwe-KLV-32R412B, KLV-28R412B)

Ukuboniswa kwesikrini kubonisa isikrini sedivayisi esebenzisanayo (isb. Ama-smartphone) esikrini sakho se-TV esikhulu ngobuchwepheshe be-Miracast.
Ayikho imizila yezintanto (noma indawo yokufinyelela) edingekayo ukusebenzisa leli sici.

- 1 Cindezela ibhathini le- / , bese ukhetha [Ukulinganisa izihenko] usebenzisa amabhathini we- / .
- 2 Sebenzisa idivayisi ehambisana nokulinganisa izihenko ukuxhuma i-TV. Uma kuxhunyiwe, isikrini sizoboniswa kudivayisi kanye naku-TV. Ngemininingwane, bheka mumanuwali yemiyalo yedivayisi.

Ukubonisa amadivayisi axhunyiwe/ amadivayisi angabhaliwe

Lapho isikrini esilindile Sokulinganisa izihenko sikhombisiwe, cindezela ibhathini ethi **OPTION**, bese ukhetha okuthi [Veza Uhlu Lwamadivayisi/ Diliitha].

Ukuze ucishe ukubhalisa idivayisi, khetha idivayisi kuhlu bese ucindezele u- . Bese, ukhethe u-[Yebo] esibonisini sokuqinisekisa.

Ukukhombisa idayilogi lapho uzama ukuxhuma idivayisi ne-TV

Ukwenza lo msebenzi usebenze kungase kugweme idivayisi engahlosiwe ekubeni ixhunyiwe.

Lapho isikrini esilindile Sokulinganisa izihenko sikhombisiwe, cindezela ibhathini ethi **OPTION**, bese ukhetha okuthi [Isaziso Sokubhalisa] → [Vuliwe].

Qaphela ukuthi emva kokuba wenqabe isicelo sokubhalisa esiphuma kwidivayisi, ngeke ukwazi ukuxhuma idivayisi ngaphandle uma uyidilitha ohlwini lwedivayisi.

Ukushintsha isethingi le-band (kwezingcweti)

Uma isikrini simile sokubonisa sisikrini siboniswa, cindezela u-**OPTION**, bese ukhethe u-[Isethingi le-band].

Qaphela

- Ukuxhuma amadivayisi kufanele kuhambisane nokulandelayo:
—Amadivayisi ahambisana Nokulinganisa izihenko: Uxhumo lwe-2.4 GHz (5 GHz akusekelwe).
- Ngolwazi mayelana ne-band engenazintambo esekelwayo yedivayisi yakho, bheka kumanuwali yomyalo yedivayisi yakho.

Ukufaka i-TV Obodeni

Le manuwali yemiyalo ye-TV ibonisa kuphela izinyathelo ekulungiseleni ukufaka i-TV ngaphambi kokufaka obodeni.

Okuqondiswe Kumakhasimende:

Ngenxa yezizathu zokuvikelwa komkhiqizo kanye nokuphepha, i-Sony ikuncoma kakhulu ukuthi ukufakwa kwe-TV yakho kwenziwe abadayise bakwa-Sony noma osonkontileka abagunyaziwe. Ungazami ukuzifakela wena.

Kubadayisi bakwa-Sony kanye Nakosonkontileka:

Qaphelani kakhulu ukuphepha ngesikhathi sokufaka, ukulungisa okwenziwa ngezikhathi ezithize kanye nokuhlolwa kwalomkhiqizo.

Ulwazi olwanele luyadingeka ukufaka lo mkhiqizo, ikakhulukazi ukunquma amandla webonda wokumisa isisindo se-TV. Qinisekisa ukwethembeka ukunamathisela kwalo mkhiqizo kubathengisi be-Sony noma osonkontileka abalayisensiwe bese ubheka kakhulu ukuphepha phakathi kokufaka. U-Sony awuxhumi ngokomthetho uma kukhona ukulimala okudalwa ukungaphathi kahle noma ukungafaki kahle.


Sebenzisa Ibhulakethi Yokumisa Obodeni SU-WL450 (akunikeziwe) ukufaka i-TV obodeni.

Uma ufaka Ibhulakethi Yokumisa Obodeni, futhi bheka Kwimiyalo Yokusebenza kanye neGayidi Yokufaka enikezwe neBhulakethi Yokumisa Obodeni.

Qaphela

- Uma i-Table-Top Stand inamathiselwe ku-TV, susa i-Table-Top Stand kuqala. Bona Igayidi Yokuqala Ngokushesha bese ulandele ngokubuyela emuva izinyathelo zokunamathisela i-Table-Top Stand.
- Beka i-TV isikrini sayo sibheke phansi endaweni elingene futhi emile embhozwe ngendwangu ejonqile futhi ethambile, uma uphephisa i-Mounting Hook noma uma ususa i-Table-Top Stand kusuka ku-TV ukugwema ukonakala kwendawo yesibonisi se-LCD.

1 Qinisekisa ukuthi udonga lunesikhala esanele ukuthi i-TV iyakwazi ukusekela isisindo okungenani esiphindwe izikhathi ezine kunese-TV. Bheka ithebula elandelayo ngokufaka i-TV obodeni. Bona ikhasi 37- 39 (Ukucasiswa) ngesisindo se-TV.

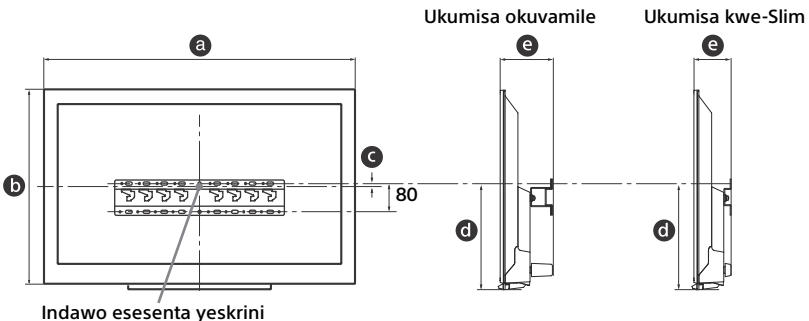

Indawo esesenta yeskrini

Igama Lemodeli KLV-	Ubukhulu besibonisi		Ubukhulu bobuphakathi besikrini	Ubude bokumisa		
	a	b	c	d	e	
					Ukumisa okuvamile	Ukumisa kwe-Slim
48R472B	1086	646	-29	305	152	111
40R482B	926	556	8	298	145	104
40R472B						
32R482B	736	451	61	299	143	103
32R426B						
32R422B						
32R412B						
28R412B	640	400	94	306	142	-

Qaphela


- Izinombolo kwithebula zingahluka kancane ngokuya ngokufaka.
- Uma i-TV yakho ifakiwe obondeni, uhlangothi oluphezulu lwe-TV luya phambili kancane.

2 Namathisela izingxenye Zokunamathiselwayo kweBhulakhethi Yokumisa Obondeni. Hlola izingxenye Zokunamathiselwayo ngokubheka ku-"1" weSiqondiso Sokufaka Ibhulakhethi Yokumisa obondeni.


Qaphela

- Uma usebenzisa isikrudrayiva sikagesi, yenza amandla okujika abe ku-1.5 N·m {15 kgf·cm}.
- Qinisekisa ukulondoloza izingxenye ezingasetshenziwe endaweni ephaphile ngokusebenzisa okulandelayo. Buyisela lemanuwali ngokubheka okulandelayo.

Ukumisa okuvamile

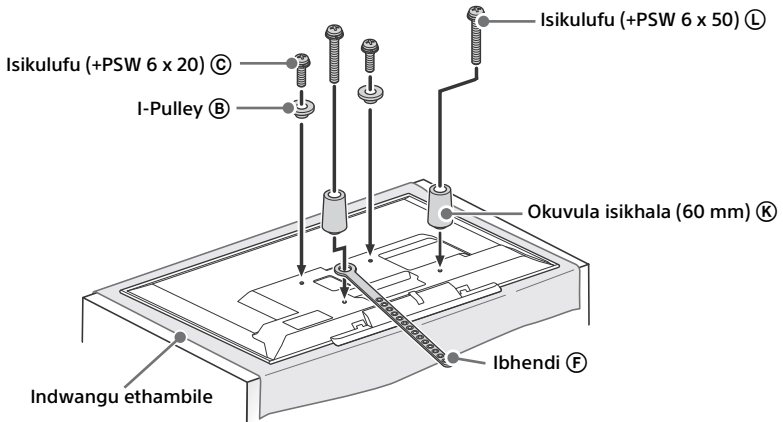

Ukumisa kwe-Slim (ngaphandle kwe-KLV-28R412B)

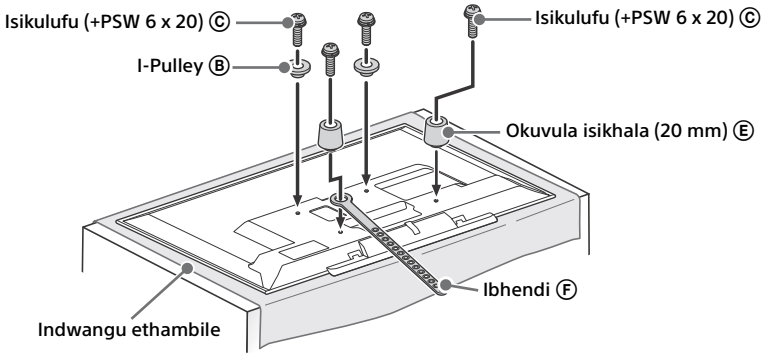


3 Xhuma amakhebuli adingekayo ku-TV.

Qaphela


- Ngeke ukwazi ukufinyelela kunoma iyiphi itheminali ngemva kokufaka i-TV obondeni.

4 Nqwabelanisa i-Adaptha ye-AC usebenzisa iziphathi zamakhebuli (G) (ezinikezwe ne-TV). Qiniseka ukuthi ilebuli ibheke ngaphandle uma unqwabelanisa i-Adaptha ye-AC.


KLV-48R472B, KLV-40R482B, KLV-40R472B

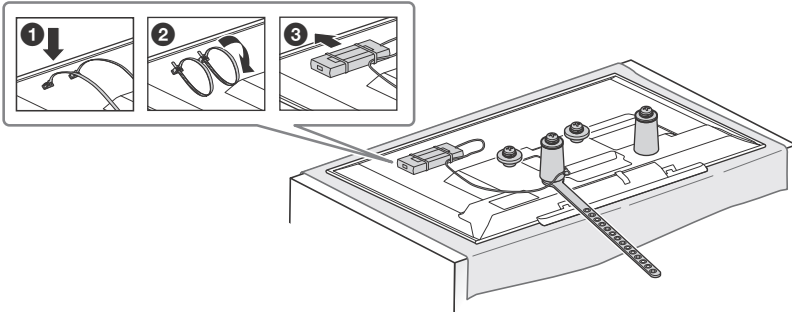

KLV-32R482B, KLV-32R426B, KLV-32R422B, KLV-32R412B

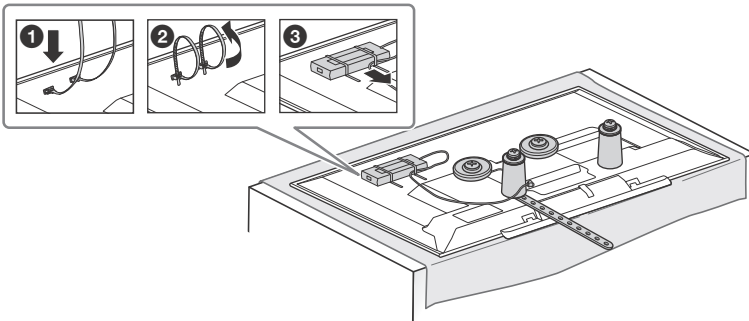


KLV-28R412B

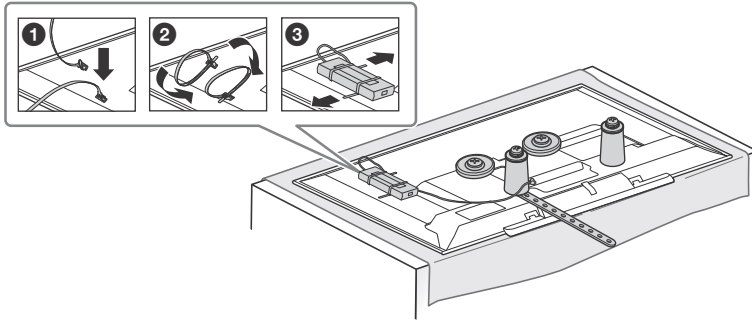

5 Faka i-TV ku-Base. Bheka ku-"5" weGayidi Yokufaka ne-"Ukufaka i-TV Obondeni" weMiyalo Yokusebenza enikezwe neBhlahkethi Yokumisa Obondeni.

Igama Lemodeli KLV-	Indawo ye-Hook
48R472B	
40R482B	
40R472B	
32R482B	c
32R426B	
32R422B	
32R412B	
28R412B	

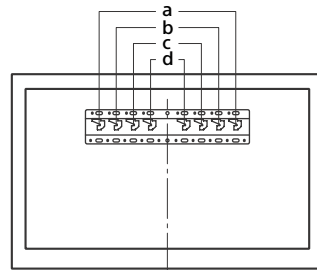

Bheka imiyalo enikezwe Nebhulakhethi Yokumisa Obondeni yemodeli yakho ukuze ufake i-TV odongeni.

I-adaptha Yokumisa Obondeni (India kuphela)

Amakhasimende Avelele

Okuhlakaniphile okulingene kuyadingeka ngokufaka lo mkhiqizo. Uqinisekisa kubosonkontileka bokuqala ukufaka kubathengisi be-Sony noma amalayisense wamankontileka bese ubheka kakhulu ukuphepha phakathi kokufaka. I-Sony ayinacala kuzikhubazo ezithile noma ingozi ebangwe ngu-mishandling noma ukufaka okungalungile, noma ukufaka noma ikuphi ngaphandle komkhiqizo okhethiwe. I-Statutory Rights yakho (uma ngabe ikhona) azithintekile.

Kubadayisi bakwa-Sony kanye Nakosonkontileka

Okuhlakaniphile okulingene kuyadingeka ngokufaka lo mkhiqizo. Uqinisekise ukufunda le manuwali yeziyalo ngempela ukwenza umsebenzi yokufaka ngokuphepha. U-Sony awuxhumi ngokomthetho uma kukhona ukulimala okudalwa ukungaphathi kahle noma ukungafaki kahle. Sicela unike ikhasimende le manuwali emuva kokufaka.


Qaphela

- Bona ikhasi 3 (Ulwazi Lokuphepha) kanye nekhasi 5 (Izexwayiso) ku-ADAPTHA YOKUMISA OBONDENI ngaphambi kokufaka i-Adaptha Yokumisa Obondeni.
- Uma i-Table-Top Stand inamathele ku-TV, susa i-Table-Top Stand kuqala. Bona Igayidi Yokuqala Ngokushesha bese ulandele ngokubuyela emuva izinyathelo zokunamathisela i-Table-Top Stand.
- Beka i-TV isikrini sayo sibheke phansi endaweni eleveli futhi emile embozwe ngendwangu ehlonzi futhi ethambile enkulu kune-TV, uma uvikela Isitendi noma uma ususa i-Table-Top Stand kusuka ku-TV ukuvikela ukulimaza indawo yesisbonisi se-LCD.

1 Lungisela izinto ezifanele.

Izinsiza zeBhulakhethi Yokumisa Obondeni (zinikeziwe)

(A) Ithempulethi Lekhasi



(B) I-Base Yokumisa Obondeni (2)



(C) Ama-Pulley (2)




(D) Isikulufu (+PSW 6 x 16) (3)



(E) Okuvula Izikhala (2)




(F) I-Band



2 Qiniseka ukuthi ubonda lunesikhala esanele se-TV futhi liyakwazi ukusekela isisindo okungenani esiphindwe saleyo TV.

Bhaka kuthebula elilandelayo ekufakeni i-TV obondeni. Bona ikhasi 37-39 (Ukucasiswa) ngesisindo se-TV.

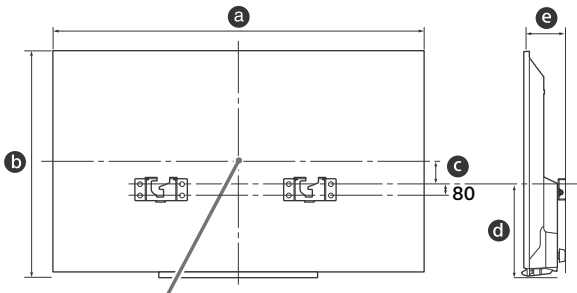

Iphoyinti eliphakathi lesikrini


Iyunithi: mm

Igama lemodeli KLV-	Ubukhulu bokubonisa		Ubukhulu obuphakathi besikrini	Ubude bokuyikhweza	
	a	b		d	e
40R482B	926	556	16	274	104
32R482B					
32R422B	736	451	-37	275	95
32R412B					
28R412B	640	400	-62	275	95


Gaphela

- Imifanekiso ekwithebula ingehluka kancane kuncike ekufakweni.

3 Yenza umaki Kuthempulethi Lekhasi Ⓐ obonisa ubuphakathi besikrini se-TV yakho.

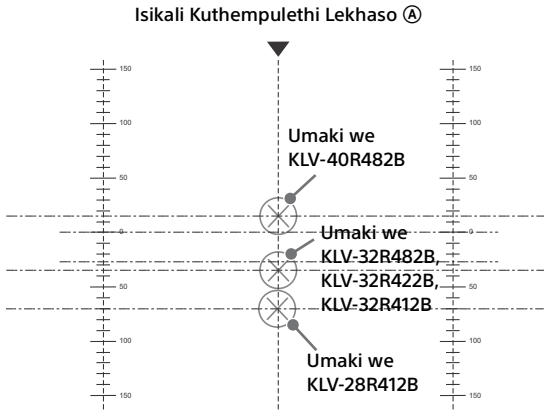


4 Namathisela Ithempulethi Lekhasi Ⓐ obondeni bese ubhoboze izimbobo ngokuya ngezinombolo Kuthempulethi Lekhasi Ⓐ usebenzisa isibhobozi sikagezi.

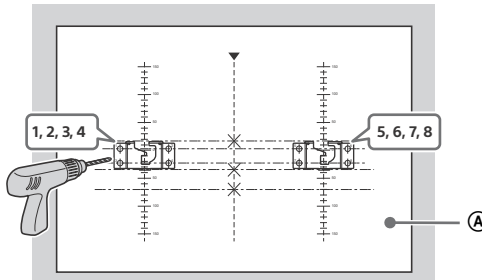


5 Susa Ithempulethi Lekhasi Ⓐ kusuka obondeni.

6 Namathisela i-Base Yokumisa Obondeni Ⓑ obondeni kahle usebenzisa izikulufu (8 mm ngokugqinsi, azinikeziwe).

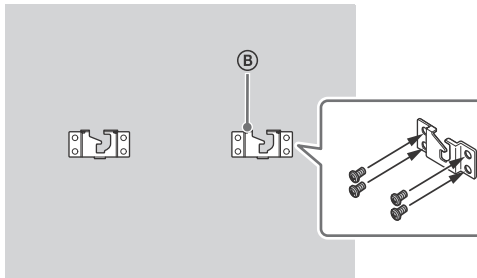


- 7 Namathisela ama-Pulley © usebenzisa izikulufu ezinikeziwe ④. Namathisela ama-Spacer ⑤ ezimbobeni ezikhonjiswe ngomami onguxantathu △. Bese, namathisela i-Band ⑥ usebenzisa isikulufu esinikeziwe ④.

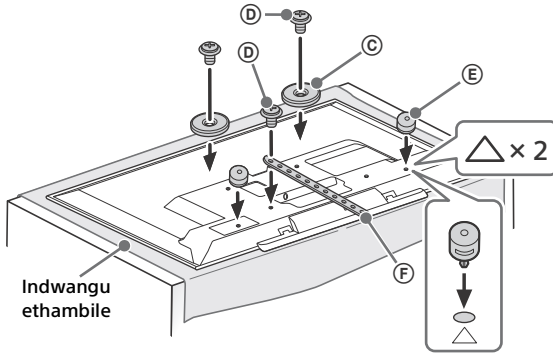


- 8 Qiniseka ukuxhuma futhi unqwabelanise amakhebuli ngaphambi kokufaka i-TV obondeni.

- 9 Nqwabelanisa i-Adaptha ye-AC usebenzisa iziphathi zamakhebuli ⑥ (ezinikezwe ne-TV). Qiniseka ukuthi ilebuli ibheke ngaphandle uma unqwabelanisa i-Adaptha ye-AC.


KLV-40R482B

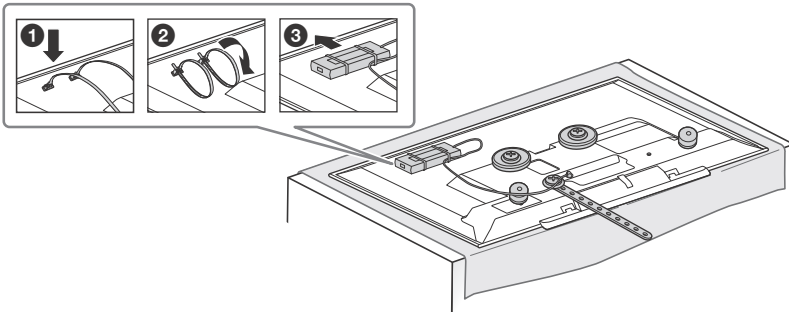


KLV-32R482B, KLV-32R422B, KLV-32R412B

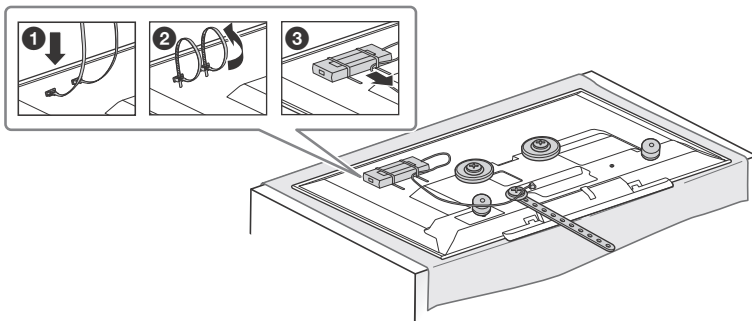

KLV-28R412B

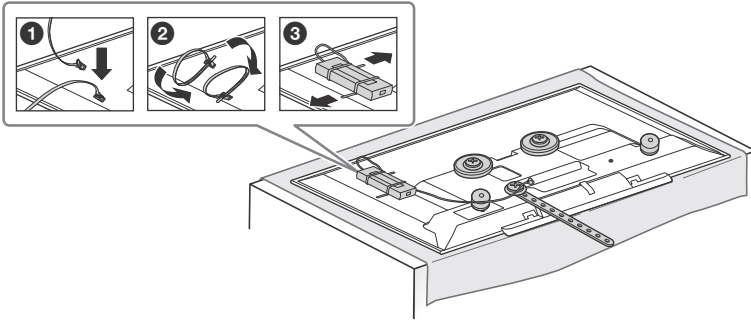

- 10** Faka i-TV obondeni. Qinisekisa ukuthi ama-Pulley © anamathiselwe kahle ku-Base Yokumisa Obondeni ©. Bese, namathisela i-Band © obondeni usebenzisa isikulufu (5 mm ubungqinsi, asinikeziwe).

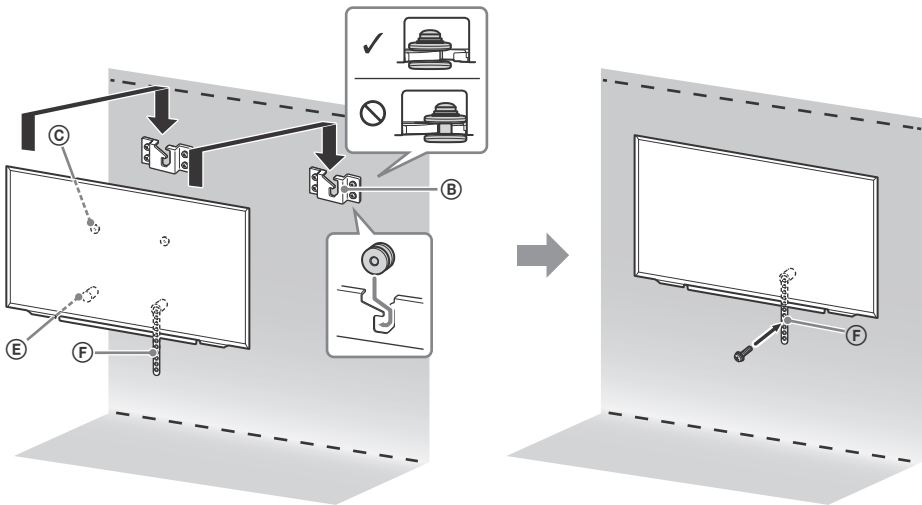


ZU

Ulwazi Olungeziwe

Ubukhulu bezindawo zembobo obondeni

Nikela ngolwazi olulandelayo kubasebenzi abanelayisensi uma kudingeka.

Sebenzisa izikulufu (8 mm ngobugqinsi, azinikeziwe) ukufaka i-Base Yokumisa Obondeni ⓑ obondeni. Qiniseka ukusebenzisa lthempulethi Lekhasi Ⓐ elinikeziwe elibonisa indawo eqondile ye-Base Yokumisa Obondeni ⓑ ngokufaka okulula.

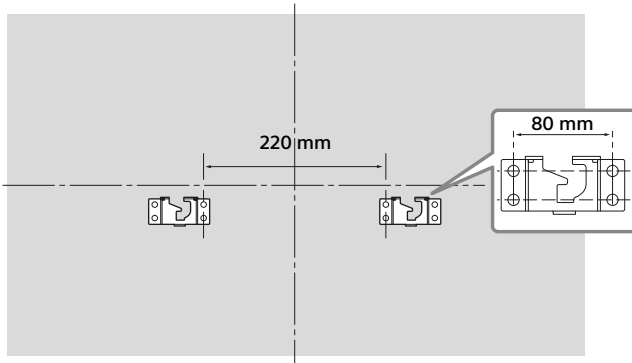

Ukufuna usizo

Uma isikhombisi se-LED sikhanyisa ngokubomvu, bala ukuthi sikhanyisa kangaki (isikhathi esibekiwe amasekhondi amathathu).

Uma isikhombisi se-LED sikhanyisa ngokubomvu, setha kabusha i-TV ngokunqamula ikhodi yamandla kagesi e-AC (mains lead) kusuka ku-TV amaminithi amabili, bese ukhanyise i-TV.

Uma inking iqhubeka, xhumana nomdayiseli wakho noma isikhungo sesevisi se-Sony ngenombolo yezikhathi isikhombisi se-LED sikhanyisa ngokubomvu (isikhathi esibekiwe amasekhondi amathathu). Cindezela u-I/⏻ ku-TV ukuze uyicime, nqamula ikhodi yamandla kagesi e-AC (mains lead), bese wazise umdayiseli wakho noma isikhungo sesevisi se-Sony.

Uma isikhombisi se-LED singabanizi, hlola izinto njengokulandelayo.

Uma inkinga iqhubeka, thatha i-TV yakho ukuthi iyolungiswa umuntu okhandayo oqeqeshiwe.

Isithombe

Asikho isithombe (isikrini simnyama) nomsindo

- Bheka ukuxhumeka kwekhebula le-eriyeli.
- Xhuma i-TV emandleni e-AC (ama-mains), bese ucindezela u-I/⏻ ku-TV noma isilawuli kude.

Asikho isithombe noma alukho ulwazi lwemenyu kusuka kusisetshenziswa esixhunyiwe ku-jack yokufaka yevidiyo oluvelayo esikrinini

- Cindezela u-⏻ ukubonisa uhlu lwezisetshenziswa ezixhunyiwe, bese ukhethe kokufaka okuthandayo.
- Hlola uxhumano oluphakathi kwesisetshenziswa sokuzikhethela ne-TV.

Izithombe ezimbili noma i-ghosting

- Hlola uxhumano lwe-antenna/ikhebula, indawo noma ukuma.

Kuvela iqhwa nomsindo kuphela kuskurini

- Hlola ukuthi i-antenna ayinqamukanga noma ayigobanga yini.
- Hlola ukuthi i-antenna ayikakaphelelwa yini isikhathi sayo sokusebenza (iminyaka emithathu kuya kwemihlanu ekusebenziseni okuvamile, unyaka owordwa kuya kwemibili endaweni eseduze nolwandle).

Isithombe esisontekile (imigqa enamachashazi noma imithende)

- Gcina i-TV ikude nemithombo yomsindo kagesi njengezimoto, izithuthuthu, imishini yokomisa izinwele noma isisetshenziswa sokuzikhethela.
- Lapho ufaka isisetshenziswa sokuzikhethela, shiya isikhala phakathi kwesisetshenziswa sokuzikhethela ne-TV.
- Bheka ukuxhumeka kwekhebula le-eriyeli.
- Gcina ikhebula ye-antenna ikude namanye amakhebula okuxhuma.

Umsindo wesithombe lapho ubuka isiteshi se-TV

- Lungisa [AFT] (Automatic Fine Tuning) ukuthola isamukeli sesithombe esingcono kakhulu (ikhasi 17).

Amaphoyinti amancane kakhulu futhi/noma amaphoyinti agqamile ayavela kuskurini

- Isithombe seyunithi eliboniswayo asenziwe ngama-pixel. Amacashazi amancane amnyama kanye/noma amacashazi akhanyayo (pixels) esikrinini awakhombisi ukungasebenzi kahle.


Amakhontuwa esithombe asontekile

- Shintsha isethingi yamanje ye- [I-Cinema Drive] kwenye isethingi (ikhasi 15).


Awukho umbala kwizinhlelo

- Khetha u-[Ukusetsha kabusha] (ikhasi 15).

Awukho umbala noma umbala ongavamile uma kubukwa isiginili kusuka kuma-jack we-Y, Pb, Pr we-

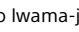- Hlola uxhumo lwama-jack Y, Pb, Pr we-  futhi uhlole i-jack ngayinye ukuthi ingabe ihlezi ngokuqinile kuma-jack wayo.

Asikho isithombe kusuka kusisetshenziswa esixhunyiwe esivelayo kusikrini



- Vula isisetshenziswa esixhunyiwe.
- Hlola ukuxhumeka kwekhebula.
- Cindezela u- ukubonisa uhlu lwezisetshenziswa ezixhunyiwe, bese ukhethe kokufka okuthandayo.
- Faka kahle ikhadi lememori noma enye idivayisi yokulondoloza kwikhamera emile yedijithali.
- Sebenzisa ikhadi lememori lekhamera emile yedijithali noma enye idivayisi yokulondoloza elungiswe ngokuya ngemanuwali yemiyalo enikeziwe nekhamera emile yedijithali.
- Ukusebenza akuqinisekisiwe kuwo wonke amadivayisi we-USB. Futhi, ukusebenza kuyehluka kuya ngezici zedivayisi ye-USB nokudlalwa kwevidiyo.

Ayikwazi ukukhetha isisetshenziswa esikhethiwe kumenyu noma ayikwazi ukushintsha kokufaka

- Hlola ukuxhumeka kwekhebula.

Umsindo

Awukho umsindo, kodwa isithombe sihle

- Cindezela u- +/- noma  (Thulisa).
- Hlola ukuthi ingabe [Izipikha] ku-[Ukusethwa kwe-AV] zisethelwe ku-[Ukuvale umsindo Kuvuliwe/Kucishiwe] (ikhasi 20).
- Hlola ukuthi ingabe ipulagi ye-headphone ixhunyiwe yini ku-TV.

Awukho umsindo noma umsindo ophezulu

- Hlola ukuthi isethingi yesistimi ye-TV ifanelekile yini (ikhasi 16).

Iziteshi

Ezinye iziteshi azinalutho

- Isiteshi esesevisi ehla kaze kile/yemali ekhishelwayo kuphela. Bhalisela ukukhokhela isevisi ye-TV.
- Isiteshi sisetshenziselwa idatha kuphela (asikho isithombe noma umsindo).
- Xhumana nomsakazi ukuthola imininingwane yokudlulisa.

Okuvamile

I-TV icisha ngokuzenzakalela (i-TV ingena kwimowudi yokuma ngomumo)

- Hlola ukuthi ingabe i-[Isibali-skh. Sokulala] iyasebenza yini (ikhasi 19).
- Hlola ukuthi ingabe i-[Ubude] isetshenziswe i-[Kwisibali-sikhathi] (ikhasi 19) noma i-[Amasethingi Efremu Yesithombe] (ikhasi 19).
- Hlola ukuthi ingabe i-[I-Idle TV Standby] iyasebenza yini (ikhasi 22).

Eminyane imithombo yokokufaka ayikwazi ukukhethwa

- Khetha i-[Izibekiso zevidiyo] bese ukhethe i-[Njalo] yomthombo wokufaka (ikhasi 20).

Irimothi ayisebenzi

- Faka amabhethri amasha.

Isisetshenziswa se-HDMI/MHL asibonakali ku- [Uhlu Divayisi BRAVIA Sync]

- Hlola ukuthi isisetshenziswa sihambisana nokuthi Ukulawul. kwe-BRAVIA Sync.

Ayikwazi ukukhetha i- [Cishiwe] ku- [Ukulawul. kwe-BRAVIA Sync]

- Uma uxhume noma iyiphi isistimu yomsindo ehambisana nokuthi Ukulawul. kwe-BRAVIA Sync, ngeke ukwazi ukukhetha [Cishiwe] kule menyu. Ukuze ushintshe okuphumayo komsindo kusipikha se-TV, khetha i-[Izipikha ze-TV] kumenyu ye- [Izipikha] (ikhasi 20).

Iphasiwedi ye- [Ukukhiya Kwabazali] ikhohlakela

- Cindezela u-**HOME** bese ukhethe u-[Amasethingi] → [Amasethingi Esistimu] → [Ukukhiya Kwabazali] → [I-PIN Khodi] bese ufake u-9999 njengekhodi ye-PIN (Ikhodi ye-PIN 9999 ihlala yamukelekile).

Gcina Imowudi Yokubukisa noma Ilogo Yesici Sokuphromotha kuyavela kuskrini

- Kerimothi, cindezela u-**RETURN** bese ucindezele u-**HOME** bese ukhethe [Amasethingi] → [Amasethingi Esistimu] → [Ukusethwa] → [Ukuziqalekela]. Qiniseka ukuthi ukhetha u-[Ekhaya] ku- [Indawo].

Ukucasiswa

Isistimu

Isistimu yephaneli

Iphaneli le-LCD (Liquid Crystal Display),
Umkhanyo we-LED

Isistimu ye-TV

I-analogue: B/G, I, D/K, M

Uhlelo lombala/lwevidiyo

I-analogue : PAL, SECAM, NTSC3.58, NTSC4.43

Amashaneli asibekelayo

I-analogue: 45.25 MHz - 863.25 MHz, Kuya
ngokukhethwa kwendawo

Kokuphumayo komsindo (Okokunikeziwe kwe-
19.5V kuphela)

8 W + 8 W

Ama-jacks okufaka nawokukhipha

Ikhebula ye-antenna

Itheminali yangaphandle ewu-75 ohm ye-VHF/
UHF

COMPONENT IN/ VIDEO IN

COMPONENT IN

Amafomethi asekelwayo: 1080p, 1080i, 720p,
576p, 576i, 480p, 480i

Y: 1 Vp-p, 75 ohms, 0.3V negative sync

Pb: 0.7 Vp-p, 75 ohms

Pr: 0.7 Vp-p, 75 ohms

Okungenayo kwevidiyo (Ama-phono jacks)

COMPONENT IN/ AUDIO IN

I-inphuthi yomsindo (Ama-phono jacks)

HDMI IN 1/MHL, HDMI IN 2 (ARC/DVI)

Ividiyo ye-HDMI: 1080/24p, 1080p, 1080i, 720p,
576p, 576i, 480p, 480i

Ividiyo ye-MHL: 1080/24p, 1080/30p, 1080i, 720p,
720/30p, 576p, 576i, 480p, 480i

I-iniphuthi ye-PC: (Okumile × Okuvundlile,

Ubuningi bokumile, ubuningi bokuvundlile,

Okuvamile)

Kwe-KLV-48R472B / 40R482B / 40R472B /
32R482B

640 × 480, 31.5 kHz, 60 Hz

800 × 600, 37.9 kHz, 60 Hz

1024 × 768, 48.4 kHz, 60 Hz

1280 × 768, 47.4 kHz, 60 Hz

1280 × 768, 47.8 kHz, 60 Hz

1360 × 768, 47.7 kHz, 60 Hz

1280 × 1024, 64 kHz, 60 Hz

*1920 × 1080, 67.5 kHz, 60 Hz

* Isikhathi se-1080p uma sisetshenziswa
kokufakwayo kwe-HDM kuzophathwa
njengesikhathi sevidiyo kanye nesikhathi se-PC.

Kwe-KLV-32R426B / 32R422B / 32R412B /
28R412B

640 × 480, 31.5 kHz, 60 Hz

800 × 600, 37.9 kHz, 60 Hz

1024 × 768, 48.4 kHz, 60 Hz

1280 × 768, 47.4 kHz, 60 Hz

1280 × 768, 47.8 kHz, 60 Hz

1360 × 768, 47.7 kHz, 60 Hz

Umsindo: I-PCM yeziteshi ezimbili: 32, 44.1 kanye
48 kHz, 16, 20 kanye 24 bits, we-Dolby Digital

☞ Kokufaka komsindo we-analogue (i-jack
encane) (HDMI IN 2 kuphela)

I-ARC (Audio Return Channel) (HDMI IN 2 kuphela)

☞ HDMI 2 AUDIO IN

Kokufaka komsindo we-HDMI (i-jack encane)

☞ AUDIO OUT, ☞

Okuphumayo komsindo, ama-Headphone (ijack
encane), i-Subwoofer

⚡

Intuba ye-USB

☉ DC IN 19.5 V (ngaphandle
kwe-KLV-32R426B)

Okokufaka kwe-adaptha ye-AC

☉ DC IN 12/19.5 V (KLV-32R426B kuphela)

Kokufaka kwe-adaptha ye-AC: 19.5 V

Kokufaka kwe-DC: 12 V

Okunye

Izisekeli ngakhetha kuzo

Ibhulakhethi Yokumisa Obondeni: SU-WL450

Ikhebula ye-MHL: DLC-MB10/DLC-MB20/
DLC-MC10/DLC-MC20/DLC-MC30

Ithempesha yokusebenzisa

0 °C – 40 °C

Umswakama wokusebenza

10 % – 80 % RH (okungancishisiwe)

Amandla nokunye

Amandla kagesi Adingekayo

19.5 V DC ne-adaptha ye-AC

Isilinganiso: Kokufaka 110 V - 240 V AC, 50/60 Hz

Usayizi weskrini (Ukulinganisa ngokuvundlile)
(Sond.)

KLV-48R472B: 48 inches / 120.9 cm

KLV-40R482B: 40 inches / 101.6 cm

KLV-40R472B: 40 inches / 101.6 cm

KLV-32R482B: 32 inches / 80.1 cm

KLV-32R426B: 32 inches / 80.0 cm

KLV-32R422B: 32 inches / 80.0 cm

KLV-32R412B: 32 inches / 80.0 cm

KLV-28R412B: 28 inches / 69.9 cm

Veza ukuzimisela

KLV-48R472B: 1,920 amachashazi (okuqondile) × 1,080 imigqa (okuthe thwi)
KLV-40R482B: 1,920 amachashazi (okuqondile) × 1,080 imigqa (okuthe thwi)
KLV-40R472B: 1,920 amachashazi (okuqondile) × 1,080 imigqa (okuthe thwi)
KLV-32R482B: 1,920 amachashazi (okuqondile) × 1,080 imigqa (okuthe thwi)
KLV-32R426B: 1,366 amachashazi (okuqondile) × 768 imigqa (okuthe thwi)
KLV-32R422B: 1,366 amachashazi (okuqondile) × 768 imigqa (okuthe thwi)
KLV-32R412B: 1,366 amachashazi (okuqondile) × 768 imigqa (okuthe thwi)
KLV-28R412B: 1,366 amachashazi (okuqondile) × 768 imigqa (okuthe thwi)

Ukudleka kwamandla kagesi

KLV-48R472B: 75 W
KLV-40R482B: 75 W
KLV-40R472B: 75 W
KLV-32R482B: 45 W
KLV-32R426B: 45 W
KLV-32R422B: 45 W
KLV-32R412B: 45 W
KLV-28R412B: 45 W

Ubukhulu (Sond.) (w x h x d)

ne Table-Top Stand

KLV-48R472B: 1,086 × 674 × 196 mm
KLV-40R482B: 926 × 584 × 162 mm
KLV-40R472B: 926 × 584 × 175 mm
KLV-32R482B: 736 × 473 × 131 mm
KLV-32R426B: 736 × 473 × 144 mm
KLV-32R422B: 736 × 473 × 144 mm
KLV-32R412B: 736 × 473 × 144 mm
KLV-28R412B: 640 × 422 × 144 mm

Ngaphandle kwe-Table-Top Stand

KLV-48R472B: 1,086 × 646 × 90 mm
KLV-40R482B: 926 × 556 × 89 mm
KLV-40R472B: 926 × 556 × 89 mm
KLV-32R482B: 736 × 451 × 80 mm
KLV-32R426B: 736 × 451 × 80 mm
KLV-32R422B: 736 × 451 × 80 mm
KLV-32R412B: 736 × 451 × 80 mm
KLV-28R412B: 640 × 400 × 80 mm

Isinyokotho (Sond.)

ne Table-Top Stand

KLV-48R472B: 9.4 kg
KLV-40R482B: 7.5 kg
KLV-40R472B: 7.4 kg
KLV-32R482B: 5.0 kg
KLV-32R426B: 4.9 kg
KLV-32R422B: 4.9 kg
KLV-32R412B: 4.9 kg
KLV-28R412B: 3.9 kg

Ngaphandle kwe-Table-Top Stand

KLV-48R472B: 9.1 kg
KLV-40R482B: 7.0 kg
KLV-40R472B: 7.0 kg
KLV-32R482B: 4.7 kg
KLV-32R426B: 4.7 kg
KLV-32R422B: 4.7 kg
KLV-32R412B: 4.7 kg
KLV-28R412B: 3.7 kg

Qaphela

- Ukuba khona kwezesekeli ongakhetha kuzo kuncika emazweni/esifundeni/ohlotsheni lwe-TV/esitokweni.
- Isakhiwo nokucaciswa kukhonjelwe ukushintsha ngaphandle kwesaziso.
- Le sethi ye-TV ihlanganisa i-MHL 2.

Iminingwane yophawu lokuhweba

- Amatemu HDMI ne-HDMI High-Definition Multimedia Interface, kanye nelogo ye-HDMI yizimpawu zokuhweba noma izimpawu zokuhweba ezibhalisiwe ze-HDMI Licensing LLC e-United States nakwamanye amazwe.
- Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- I-"BRAVIA" kanye ne-BRAVIA izimpawu zokuhweba ze-Sony Corporation.
- I-Wi-Fi, Wi-Fi Direct kanye ne-Miracast yizimpawu zokuhweba noma izimpawu zokuhweba ezibhalisiwe ze-Wi-Fi Alliance.
- Ilogo ye-"Blu-ray Disc", "Blu-ray" kanye ne-"Blu-ray Disc" yizimpawu zokuhweba ze-Blu-ray Disc Association.
- I-MHL, Mobile High-Definition Link, kanye nelogo ye-MHL yizimpawu zokuhweba noma izimpawu zokuhweba ze-MHL Licensing, i-LLC.
- Ngokubonakalayo kwe-DTS, bona <http://patents.dts.com>. Kukhiqizwe ngaphansi kwelayisense kusuka ku-DTS Licensing Limited. DTS, Uphawu, kanye ne-DTS kanye Nophawu kuhlangene yizimpawu zokuhweba ezibhalisiwe, kanye ne-DTS Digital Surround uphawu lokuhweba le-DTS, Inc. © DTS, Inc. Wonke Amalungelo Agodliwe.

HDMI[™]
HIGH-DEFINITION MULTIMEDIA INTERFACE

 **dts**[®]
2.0+ Digital Out

 **MHL**[™]
Mobile High-Definition Link



Ukwesekwa kwamakhasimende nokuxhumana:

<http://www.sony-asia.com/support>

<http://www.sony.net/>

©2014 Sony Corporation Printed in Malaysia



* 4 5 3 8 6 4 7 2 1 * (1)

4-538-647-21(1)